



Contents [[hide](#)]

- [1 EEVO MOTORS MS-01 VLCD Display Panel Controls](#)
- [2 Overview](#)
- [3 Materials and Dimensions](#)
- [4 Display Overview](#)
- [5 Button Functions](#)
- [6 Operating Instructions](#)
- [7 Battery Indicator](#)
- [8 Error Codes](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

EEVO MOTORS

EEVO MOTORS MS-01 VLCD Display Panel Controls



VLCD Display Panel Instructions

Model: MS-01

Australian Designed | Built to Last

Overview


The MS-01 VLCD display is designed to provide riders with essential ride information and control functions in a compact, user-friendly format. This guide will help you get familiar with its features and operation.

Materials and Dimensions

- Housing Material: Durable plastic
- Operating Temperature: -20°C to 70°C
- Storage Temperature: -30°C to 80°C

Dimensions:


- Width: 90.9 mm
- Length: 160.9 mm

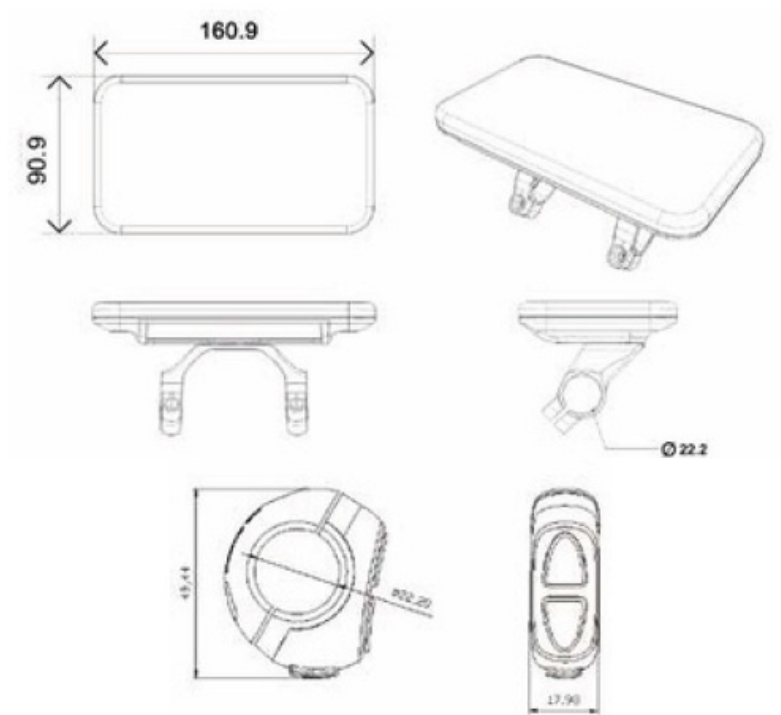

Note: The plastic housing ensures good mechanical performance across these temperatures.


Display Overview

- Speed Information (Real-time, Max, and Average)
- Speed Unit (km/h or mph)
- PAS Level (Pedal Assist Level)
- Battery Power Indicator
- Headlight Indicator
- Startup Indicator
- Walk Assist Icon
- Error Code Indicator
- Trip Information: ODO (Total Distance)
- Single Trip Distance
- Trip Time

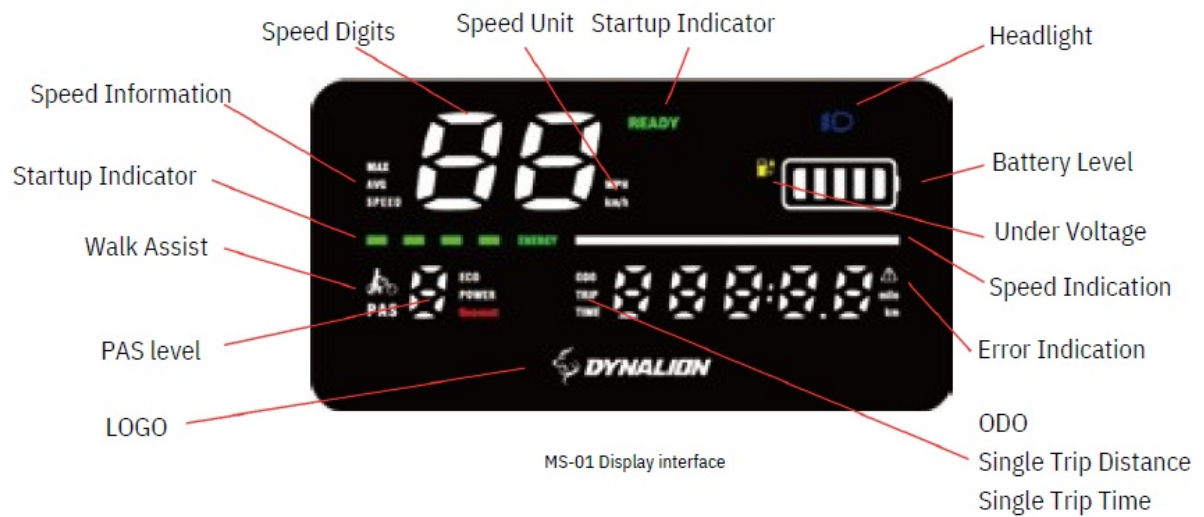

Button Functions

Button	Function
MODE	Power On/Off, Confirm selection
UP	Increase value, scroll up
DOWN	Decrease value, scroll down

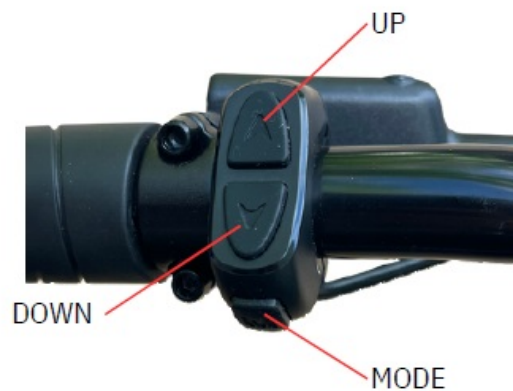

Operating Instructions

Power On/Off

- To power on: Long press the MODE button.
- To power off: Long press the MODE button again.
- The display can automatically shut down when the e-bike is not used for more than 10 minutes.

Pedal Assist Levels (PAS)

- You can adjust the pedal assist level using the UP and DOWN buttons.




Normal display interface


- Level 0 – No motor support or throttle. The system is active, but motor and throttle are disabled.
- Levels 1–5 – Gradually increase the level of motor assistance.
- Level 1 = minimal assist
- Level 5 = maximum assist

Walk Assist Mode

- Activate: Hold the DOWN button.
- The motor will assist at low speed to help you walk the bike.
- Walk assist mode can only be used when you are pushing the ebike by hand. Please don't use this function when riding.

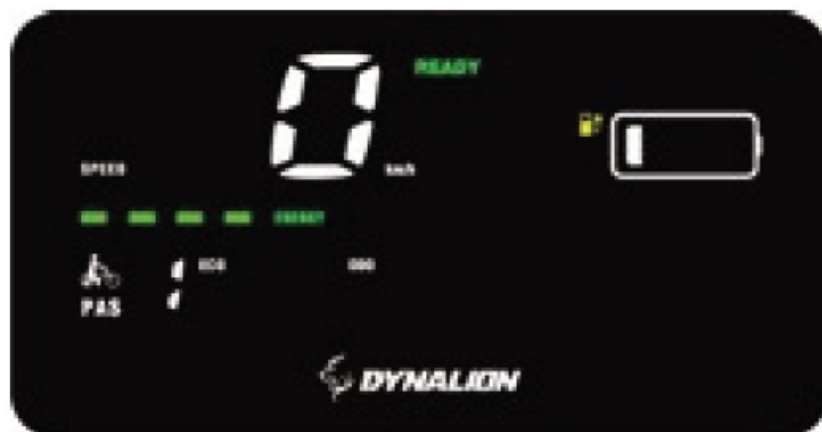

Walk Assist display

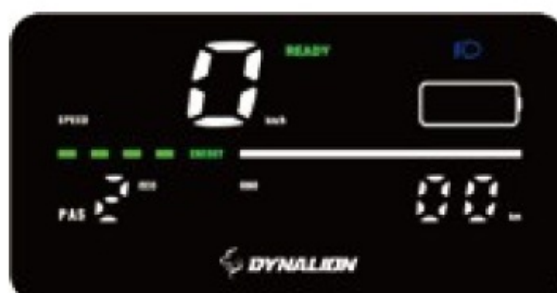

Headlight Control


- Turn on/off: Long press the UP button for 2 seconds.
- The headlight icon will appear when the light is on. Screen brightness will dim slightly when active.



Changing Display Information

Press the MODE button to cycle through:

- Speed
- Trip Distance
- Odometer (ODO)
- Trip Time
- When viewing the TRIP display, press and hold the DOWN and MODE buttons together to reset the single trip distance to zero.

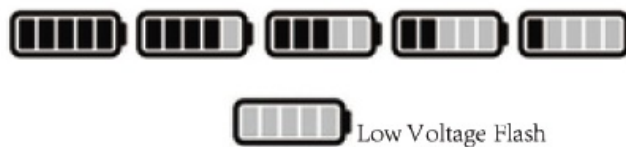

Battery Indicator

- The battery icon shows real-time charge level.
- If the battery reaches under voltage, a warning will display and needs to be charged immediately.

Error Codes

- If a system error occurs, an error code will appear on the display.
- Do not attempt to repair yourself—please contact Eevo support.

User Reminders

- Do not connect or disconnect the display while the bike is powered on.
- Avoid strong impacts or rough handling.
- Do not alter system parameters unless instructed, as it may affect functionality.



Error code display

Frequently Asked Questions


How do I reset the single trip distance to zero?

When viewing the TRIP display, press and hold the DOWN and MODE buttons together to reset the single trip distance.

What should I do if an error code appears on the display?

If an error code appears, do not attempt to repair it yourself. Please contact Eevo support for assistance.

Documents / Resources

 VLCD DISPLAY PANEL CONTROLS User Manual <small>Australian Designed Built To Last</small> Let's Ride	EEVO MOTORS MS-01 VLCD Display Panel Controls [pdf] User Manual MS-01 VLCD Display Panel Controls, MS-01, VLCD Display Panel Control s, Display Panel Controls, Panel Controls
---	--

References

- [User Manual](#)

■ Evo

Motors

◆ Display Panel Controls, Evo Motors, MS-01, MS-01 VLCD Display Panel Controls, Panel Controls, VLCD Display Panel Controls

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.