



# EG4 18kPV LCD Update VIA USB Flash Drive User Guide

[Home](#) » [Eg4](#) » EG4 18kPV LCD Update VIA USB Flash Drive User Guide 

## EG4 18kPV LCD Update VIA USB Flash Drive



### Contents

- [1 Introduction](#)
- [2 FORMATTING FLASH DRIVE](#)
- [3 DOWNLOADING AND UN-ZIPPING](#)
- [4 INSTALLING THE UPDATE](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)


## Introduction

The intention of this document is to walk the end-user through the LCD Firmware Update for the EG4 18kPV

Hybrid Inverter.

## FORMATTING FLASH DRIVE

1. Plug in the USB drive.
2. Navigate to “File Explorer”.
3. Locate the USB drive location in the left side pane of File Explorer.
4. Right-click the USB drive and select “Format”.
5. The capacity should reflect the size of the USB Drive automatically but if not, ensure “Capacity:” is set to 2, 4, 8 or 16GB.
6. File system: Set to FAT32.
7. Allocation unit size: Set to 4096 bytes.
8. Deselect the “Quick Format” checkbox.
9. Click “Start”.

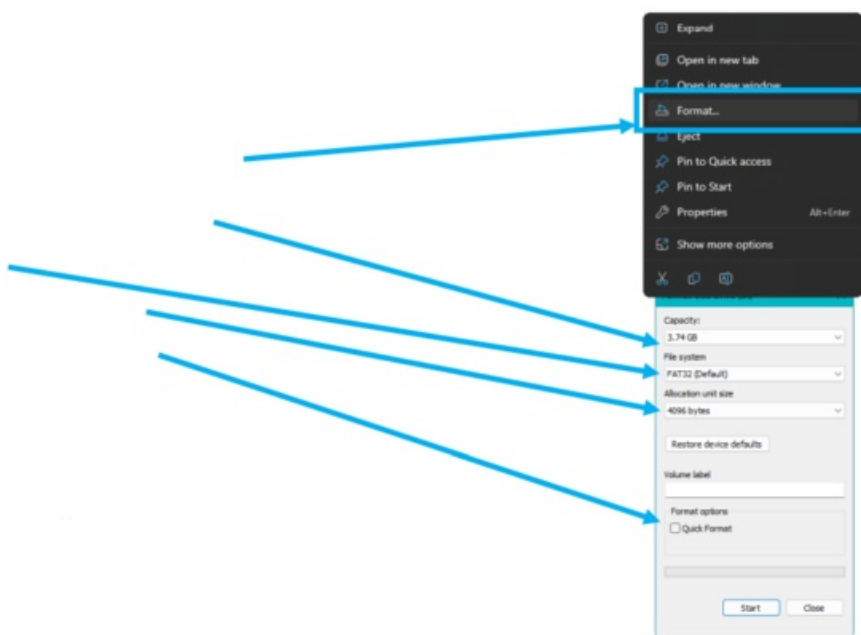

## DOWNLOADING AND UN-ZIPPING

1. Download the “EG4-18kPV-LCD-Firmware.zip” from [eg4electronics.com](http://eg4electronics.com).
2. Once downloaded, right-click and unzip the downloaded file to the desktop.
3. Once unzipped, open the folder located on the desktop.  
**NOTE:** There should be 2 folders and one PDF in this folder.
4. Select the “DWIN\_SET” folder and copy it.
5. Navigate to the USB drive through File Explorer.
6. Paste the “DWIN\_SET” folder to the USB Drive.
7. Safely remove the USB drive.


## INSTALLING THE UPDATE

1. Power off the inverter and plug the flash drive into the USB2 port on the communications board.
2. Power on the inverter. The update should begin automatically. The unit will display the start-up screen for

several minutes while applying the update.

3. After several minutes (~3), the screen will restart itself and will then point to the standard home screen.
4. Remove the USB drive from the communications board.

## USB2 PORT

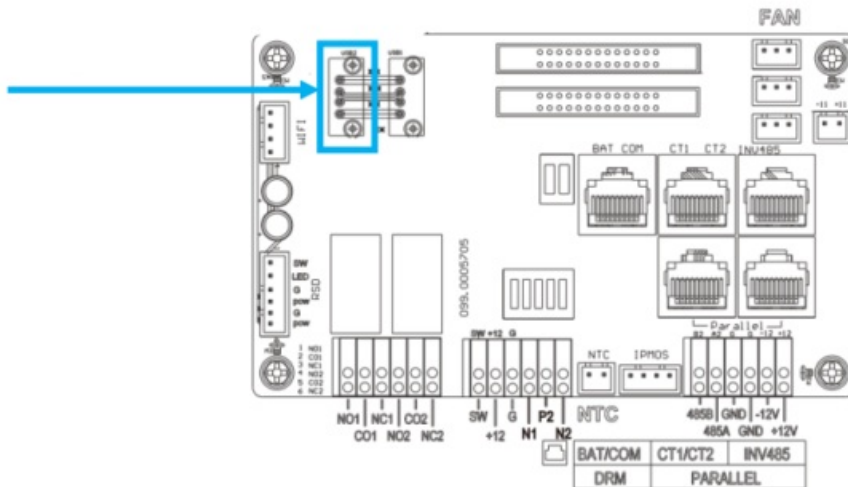


### NOTE:


To ensure the update went through successfully, the user can check the LCD Version number in the lower-right hand corner of the physical display.

# EG4 ELECTRONICS

## Documents / Resources

|   |   |
|---|---|
|  | <p><a href="#">EG4 18kPV LCD Update VIA USB Flash Drive [pdf] User Guide</a><br/>18kPV LCD Update VIA USB Flash Drive, LCD Update VIA USB Flash Drive, Update VIA USB Flash Drive, VIA USB Flash Drive, USB Flash Drive, Flash Drive, Drive</p> |
|---|---|

## References

-  [Power More with EG4 - EG4 Electronics](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.