

# Eickemeyer EickView SD Endoscopy Monitor User Manual

Home » Eickemeyer » Eickemeyer EickView SD Endoscopy Monitor User Manual







#### **Contents**

- 1 Description
- **2 Intellectual Property**
- 3 Statement
- 4 Warranty and Repair Service
- **5 After-sales Service Unit**
- 6 Forward
- 7 Safety
- 8 Overview
- 9 Use and Maintenance
- 10 Operation Guide for Image **Processor**
- 11 Documents / Resources
  - 11.1 References
- **12 Related Posts**

#### **Description**

Thank you for purchasing the EickView SD Endoscopy Monitor

Please read the Instructions for Use carefully before use for proper use of the product.

Please keep this Instructions for Use for future reference.

Product name: EickView SD Endoscopy Monitor Date of manufacture: See the product label Preparation/revision date: September 13, 2023

Version of the Instructions for Use: 1.0

Software release version: A%

Product performance, structure and It consists of an image processor and accessories, composition: which include

a power cord and a signal cable.

Scope of application: The product is used in conjunction with our electronic endoscopes to process the images

collected by the endoscope and display them on the screen of the device.

Manufacturer: Eickemeyer — Medizintechnik fiir Tierdrzte KG

**Legal Manufacturer Address:** Eltastrafie 8 78532 Tuttlingen GERMANY **After-sales service company:** Eickemeyer — Medizintechnik fiir Tierdrzte KG

Contact Details: +49 7461 96 580 0

Website:

E-mail: info@eickemeyer.com

Website: http://www.eickemeyer.com

**C**€<sub>2797</sub>

### **Intellectual Property**

This Instruction for use and the intellectual properties corresponding to products belong to Eickemeyer – Medizintechnik für Tierärzte KG (hereafter referred as "EICKEMEYER®").

© Eickemeyer – Medizintechnik für Tierärzte KG, copyright reserved. Any individual or organization shall not copy, modify or translate any part of this Instruction for use without written consent of EICKEMEYER®.

#### Statement

EICKEMEYER® reserves all the rights for the final interpretation of the IFU.

EICKEMEYER® reserves the right to modify the IFU without prior notice. Modifications to the content of the IFU will be reflected in the latest version.

EICKEMEYER ® shall not be held responsible for any software and equipment not provided by EICKEMEYER® or its distributors.

Only when all of the following requirements are met shall EICKEMEYER® be held responsible for the safety, reliability, and performance of the product:

Assembling, expansion, adjustment, improvement, and repair shall be carried out by professionals recognized by EICKEMEYER®;

B All replaced parts involved in repair and supporting accessories and consumables are genuine (original) parts of EICKEMEYER® or approved by EICKEMEYER®.

B The related electrical equipment complies with national standards and the requirements specified in the IFU; W This product shall be operated according to the IFU.

#### Warranty and Repair Service

The standard warranty period for this product is one year.

If the warranty period in your sales contract with the seller is inconsistent with the above standard warranty period or unless otherwise agreed, please consult and confirm with EICKEMEYER® through the free service hotline at +49 7461 96 580 0. If it is not confirmed by EICKEMEYER®), please promptly negotiate and confirm with the seller.

The warranty period starts from the "Installation Date" filled in the Product Warranty Card attached to the product, which is the only proof for calculating the warranty period. To protect your rights and interests, please urge the installer to return the second page of the Product Warranty Card to EICKEMEYER® within 30 days from the date of installation. If the Product Warranty Card of the product you purchased is not returned to EICKEMEYER® in time, the warranty period will be extended for 45 days starting from the "Ex-warehouse Date" indicated on the product packaging box.

Within the warranty period, you may enjoy free after-sales services for the product. Please note that EICKEMEYER® will offer a fee-based repair service even within the warranty period if the product needs to be repaired due to the following reasons, and you need to pay for the repair and accessories:

- · Artificial damage;
- Improper use;
- The grid voltage exceeds the voltage range specified for the product;
- · Force majeure;
- Parts or accessories not approved by EICKEMEYER® are replaced or used, or repairs are conducted by personnel not authorized by EICKEMEYER®; and
- · Other failure not arising from the product itself.

After the warranty period of the product expires, EICKEMEYER® may continue to provide feebased repair services. If you fail to pay for or delay the payment for the repair service, EICKEMEYER® will temporarily suspend the repair service until you make the payment.

#### **After-sales Service Unit**

Customer: Eickemeyer — Medizintechnik fiir Tierdrzte KG

Postcode: 78532

After – sales service hotline: +49 7461 96 580 0

**Sales hotline:** +49 7461 96 580 0

Official website: www.eickemeyer.com



- This product shall be used by professional clinicians, medical electrical specialists or trained clinical medical personnel in a designated situation. Personnel using this product shall be adequately trained. No operation shall be performed by unauthorized or untrained personnel.
- Stay meticulous and attentive while working to avoid accidents!
- Daily care and maintenance are necessary.
- In case repairs are needed, it is advisable to use the original parts.

#### **Forward**

### **Description**

This Instructions for Use (hereinafter referred to as "IFU") details the purpose, functions and operation of the product. Prior to using this product, please read carefully and understand the IFU to ensure its correct use as well as the safety of the patient and operator.

The IFU describes this product in its most complete configuration, and some of them may not apply to the product you have purchased. If you have any questions, please feel free to contact this Company.

These operation instructions contain precautions on how to operate the Medical Image Processor safely, correctly, and effectively. They help reduce failure, maintenance cost and downtime, and improve the reliability and service life of the instrument. It can be used not only as an IFU, but also as a reference manual. Therefore, this IFU must be kept next to the device and available at any time.

Read Chapter 1 "Safety" carefully before using it for the first time.

#### **Applicable Objects**

The IFU is intended for use only by specially trained clinical medical staff.

#### Illustrations

All illustrations provided in the IFU are for reference only. The settings or data in the illustrations may not be exactly the same as the actual display of the product.

#### **Key to Conventions Used**

- Jtalics Bold italics are used in the IFU to represent the chapters quoted.
- Terms such as danger, warnings, and caution are used in the IFU to prompt any hazard information and its severity.

#### Safety

#### **Safety Information**

This chapter lists the basic safety information that users must pay attention to and observe when using the EickView SD Endoscopy Monitor (hereinafter referred to as image processor). Other safety information that is identical, similar, or relevant to specific operations will appear in respective chapters.



### Danger

Indicating an urgent danger that, if not avoided, may result in death, serious physical injury or property damage.



## Warnings

• Indicating a potentially dangerous or unsafe operation that, if not avoided, may result in death, serious physical injury, or property damage.



Indicating a potentially dangerous or unsafe operation that, if not avoided, may result in minor physical injury,

product failure, damage, or property damage.

#### **Precautions**

• Stressing important precautions, providing instructions or interpretations for better use of the product.

#### **Danger**

There is no such safety risk.

#### **Warnings**



### 🔼 Warnings

- The image processor shall be used in conjunction with our endoscope, and can only be used by professional clinicians, medical electrical specialists, or trained clinical medical staff in a designated situation.
- The responsible surgeon must take charge of the operating procedures and technical application of the equipment! The trained surgeon (responsible surgeon) is entitled to decide how to make full use of the equipment in light of the actual application conditions.
- Prior to first use, please read the IFU carefully.
- Before using the image processor, the user must check the image processor and its accessories to ensure their proper and safe operation.
- It shall not be used in an environment where flammable or explosive items are placed to prevent fire or explosion.
- The image processor and its supporting equipment shall be properly installed or carried to protect the image processor from falling, being collided, receiving intensive oscillation, or being damaged due to other external mechanical forces.
- The electromagnetic field may affect the performance of the image processor and its supporting equipment, so
  the equipment in use near the image processor and its supporting products must meet the corresponding EMC
  requirements, otherwise, electromagnetic interference may result in failure or collapse to the image processor.
  Mobile phones, X-ray or MRI equipment are all possible sources of interference, all of which may emit high
  intensity electromagnetic radiation.
- Al other devices. For example, some similar digital interference devices must meet relevant requirements in the standards when they are connected to an image processor. The person responsible for connecting the equipment must ensure the operability of the system and be responsible for meeting the system requirements.
   If you have any other questions, please consult the local equipment supplier or the technical service center of EICKEMEYER®.
- Repairs or upgrades to the image processor must be made by trained maintenance personnel authorized by the Company.
- Relevant local regulations or the hospital's regulations on waste disposal must be followed when handling the packaging materials.
- EICKEMEYER® shall not be held accountable for any personal injury and property damage because:
  - Equipment parts are not original parts of EICKEMEYER®;
  - The IFU is lost;
  - Installation, commissioning, revision, upgrading and repair are done by personnel not authorized by

EICKEMEYER®.

- EICKEMEYER® will not be responsible for any damage or incident arising from using consumables or accessories that are not of the specifications required by EICKEMEYER®.
- The host is prohibited from use while charging. EICKEMEYER® will not be responsible for any damage or incident caused by unauthorized use.

#### Caution



#### Caution

• The use environment and power supply of the image processor must comply with the requirements in Section 4.2 Image processor Technical Parameters.

#### **Precautions**

#### **Precautions**

- Please place the IFU near the image processor so that it is easily and promptly accessible when required.
- The IFU introduces the product in its most complete configurations and functions, and the image processor you have purchased may not have certain configurations or functions.

#### Labels and Identification



Attentions/Caution/Warning



Type BF applied parts



Medical device



2797 CE Marking



 
Serial number




Manufacturer



Waste electrical and electronic equipment directive



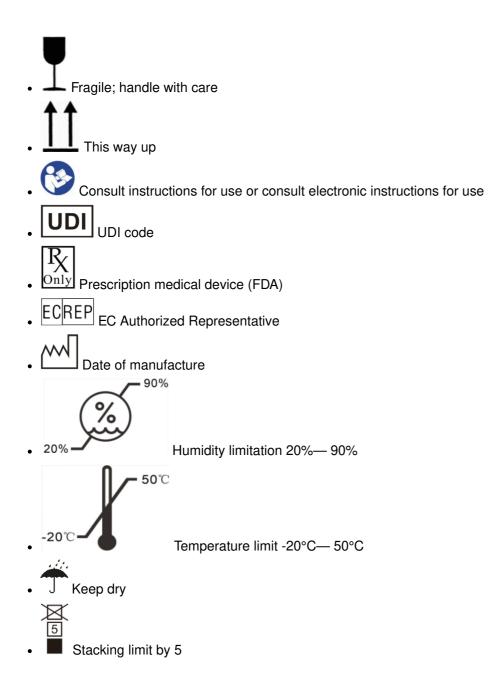

### Overview

### **Product Description**

### Scope of Application

The product is used in conjunction with our electronic endoscopes to process the images collected by the endoscope and display them on the screen of the device.



- This product shall be used by professional clinicians, medical electrical specialists or trained clinical medical personnel in a designated situation. Personnel using this product shall be adequately trained. No operation shall be performed by unauthorized or untrained personnel.
- Before using the image processor, the user must inspect the image processor and its accessories to ensure their proper and safe operation.



• The use environment and power supply of the image processor must comply with the requirements in 4.2 Image processor Technical Parameters.


### **Structural Composition**

It consists of a host and accessories, which include a power cord and a signal cable.


### **Contraindications**

Not observed


### **Product Structural Diagram**

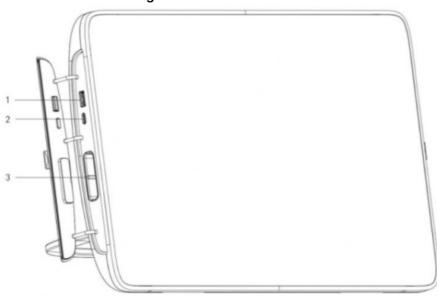

Left front view of Image Processor

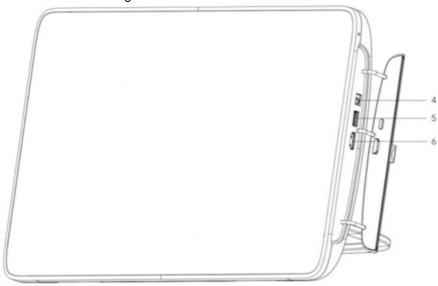

Right front view of Image Processor

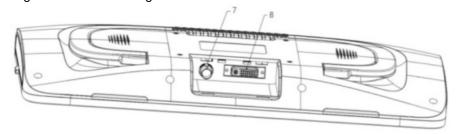

Rear view of Image Processor

No.	Port	Instructions
1	USB I	Data copy, USB flash drive upgrade, etc.
2	VL-Port	To connect the video laryngoscope
3	Endoscope Port	To connect the endoscope
4	DC	Power input port
5	USB II	Online upgrade and debugging port
6	HDMI	High-definition multimedia interface (HDMI)port
7	SDI	Serial digital interface (SDI) port
8	DVI	Digital visual interface (DVI) port

#### **Battery**

#### Overview

The image processor has a built-in lithium-ion battery (hereinafter referred to as the "Battery") and operates on battery power. The Battery will be charged when the image processor is connected to the adapter. When charging in the power-on state, the image processor will enter the charging mode and fail to operate.

#### **Precautions**

- Do not charge if the mains voltage fluctuates significantly.
- Warnings: S-8 cannot be used while charging.
- It takes 4-5 hours to charge the battery in full in case of running down of battery.
   Rechargeable batteries have a continuous operating time of approximately 3—5 hours with load.
- If this product will not be used for a long time, please charge and discharge the battery at a 3-month interval to avoid battery damage.
- The battery belongs to consumable part and, once exhausted and failed, must be replaced. If the battery
  supplies power for a too short time after it is fully charged, it may have been damaged or failed. The power
  supply time of the battery depends on the configuration and frequency of use of the image processor, e.g. longtime backlight of the display screen.
- If the battery suffers from obvious damage (bulging, deformation, weeping) or the battery cannot store energy, it shall be replaced and reasonably recycled.
- If the battery is to be replaced, contact the distributor selling this product to you or the manufacturer.
- Replacement of battery can only be done by the technical service engineer of the Company!

#### **Battery Level**



State of charge

#### **Battery Maintenance**

To ensure safe operation and prolong the battery life as much as possible, please pay attention to the following guidance for use:

- The battery performance must be checked once a year. Before the image processor is subject to repair or the battery is suspected to be the failure source, the battery performance shall also be checked:;
- Every 3 months of use (or storage) or when the running time of the image processor becomes significantly short, the battery shall be fully charged and discharged (the image processor shall be discharged first, and then charged to 100%) to ensure that the battery is charged for storage.

#### **Battery Recycling**

If the battery suffers from obvious damage (bulging, deformation, weeping) or the battery level is exhausted, it shall be replaced and reasonably recycled. At the end of the product's service life, open the display unit and dispose of the battery and the display unit separately according to local regulations.



### Warnings

• Do not disassemble the battery, put it into fire or make it short-circuited. Battery burning, explosion and leakage may cause personal injury.

#### **Use and Maintenance**



### Warnings

- The software copyright of the image processor is owned by the Company, and no organization or individual is allowed to tamper, copy, or exchange it by any means or in any form without permission.
- the image processor host must be connected to the endoscope manufactured by EICKEMEYER®.
   EICKEMEYER® shall assume no responsibility for any damage or incident caused by connecting to endoscopes not manufactured by EICKEMEYER®.
- When the image processor host is connected to energized endoscopes or endoscope accessories not manufactured by EICKEMEYER®, leakage currents of patients may be increased.
- When the endoscope connected to the image processor host loses its function, it shall be removed from the patient immediately and disconnected from the image processor host.
- Do not use this product in the presence of high-frequency electrosurgical equipment, as it may cause injuries to patients or damage to equipment.

#### **Unpacking and Inspection**

Before unpacking, please carefully check the packing box to determine whether the product is damaged during transportation. Notify the carrier or this Company immediately if any damage is found.

If the package is intact, please unpack the it correctly, carefully take out the image processor from the packing box, and count one by one according to the packing list. Check whether the product has suffered from any mechanical damage and whether the items are complete. If you have any questions, please feel free to contact the After-Sales Service Department of this Company.



 The user shall keep the packaging materials away from children. Relevant local regulations or the hospital's regulations on waste disposal must be followed when handling the packaging materials.

#### **Precautions**

- Please keep the packing box and packaging materials for future shipping or storage.
- If you open the package and find that some fittings are missing, please contact the distributor selling this product to you or the manufacturer as soon as possible.

### **Charging Requirements**

The image processor shall be charged with an adapter of the following specification that complies with the requirements of IEC 60601-1:2005 + A1:2012 + A2:2020.

Adapter				
Specification	Parameter			
Output voltage	DC 12V			
Output current	6 A			



- The appropriate power supply must be selected according to the recommended adapter specification.

  Otherwise, it may cause serious harm to the device.
- Operation is prohibited while charging.
- When disconnecting the image processor from the adapter, pull the plug out of the socket.

#### **Environment Requirements**

The use environment of the image processor shall comply with the requirements in Section 4.2 **Image processor Technical Parameters.** 

The use environment of the image processor shall also be free of noise, vibration, dust, and corrosive or flammable and explosive substances.



### Warnings

- To avoid electric shock risks, the device shall only be connected to the earthed power supply.
- When disconnecting the device from the power supply, the plug must be pulled out of the wall socket.

#### **Power Supply Requirements**

The product shall operate in compliance with the requirements in Section **4.2 Image processor Technical Parameters.** 



 Please make sure that the image processor operates under the specified environmental and power conditions, otherwise, it will not meet the technical specifications stated in A Product Specification and may lead to unexpected consequences such as image processor failure.


### **Endoscopic Connection**

#### **Precautions**

- The image processor host must be connected to the endoscope manufactured by EICKEMEYER®. EICKEMEYER® shall not assume any responsibility for any damage or incident caused by connecting to endoscopes not manufactured by EICKEMEYER®.
- 1. Check whether the endoscope is intact in appearance;
- 2. Check the IFU attached to the host and prepare to connect the endoscope.
- 3. Connect the image processor host to the endoscope.
- 4. Press the Power button to start the host.


#### **Precautions**

• The plugs for the wiring of the image processor host and the endoscope have alignment marks. When inserting, pay attention to the direction of the connector and do not forcefully insert for connection. Applying force when not aligned may damage the plug.

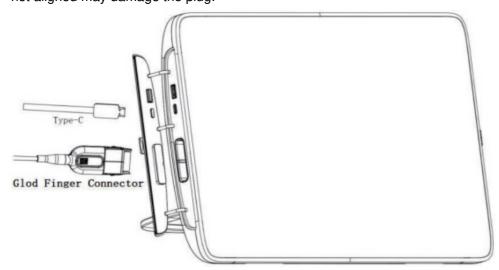

[Figure 3-1] Diagram of Endoscope Connection

Monitor (Display Device) connection

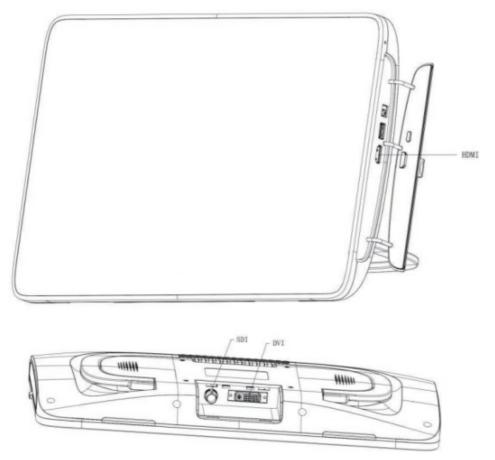

[Figure 3-2] Diagram of Host Interface

Connect the video output interface of the image processor to the monitor with a signal connecting line.

### **Care and Maintenance**



### Warnings

Disconnect the image processor from any main power supply, remove all connectors, and ensure that the image processor is totally switched off before care and maintenance.

After use, the host shell shall not come into contact with the human body. Use a neutral cleaning agent to disinfect its external surface.

#### **Precautions**

• The rag shall be moist but not dripping so as not to harm the electronics inside the display unit.

### **Operation Guide for Image Processor**

**Host System Operation** 

**Interface Switching** 

Page	Real-time Display	File	User	Setting
Marks			4+	<b>{63}</b>
Functions	Display of real- time video stream	File managemen t	User manageme nt	System conventional settings and function settings

Click different interface icons on the touch screen to switch to the corresponding interface.

### **Login Interface**

Tap the power button of the host machine, and the power indicator lamp and the screen will be lit. The login interface will be automatically entered after the system startup, as shown in **Fig. 4-1**.




[Figure 4-1] Login page

- 1. Regular login: Click . and a drop-down box for the user name will appear. Select the user or call out the keyboard to enter the user name, then enter the password, and click the "Login" button.
  If the user name and the password are correct, the real-time display interface will be entered, and the login user is Admin or a regular user at this time. (Click the show/hide icon to show/hide the password entered).
  Note: The default user name of Admin is admin, and the default password is 00000000;
- 2. **Anonymous login:** Click the "Anonymous Login" button to directly enter the real-time display interface. The login user is an anonymous user at this time, and the anonymous user cannot set advanced options.

### **Real-time Display**

1. After the endoscope is connected, the Real-time Display page will display the real-time video stream of the endoscope, the use time of the endoscope will start to be counted, and the inner and outer diameters of the endoscope will be displayed in the lower right corner, as shown in Fig. 4-2.

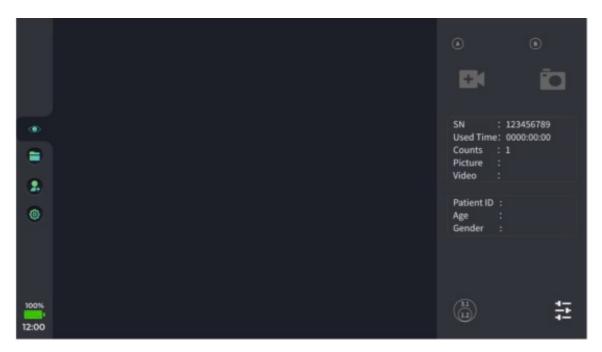

[Figure 4-2] Real-time Display page

2. Image adjustment: Click the Image Settings button then drag the slider to adjust the hue, clarity, contrast, and LED brightness, and

adjust the white balance of the real-time image for the current scene by the white balance button

3. Press the Custom button or bin the upper right corner, and then select the icon to complete the corresponding function.

### File management

Click on the touch screen to enter the File page, as shown in Fig. 4-3.



[Fig. 4-3] File page


Then click the "Picture and Video" folder in the corresponding folder of date to enter the File View page, as shown in Fig. 4-4.



[Fig. 44] File page

Click the file thumbnail to view the file content (picture, video, graphic report), and click and to switch files.

- 1. Image view: Click to zoom in the image, and click to zoom it out;
- 2. Video view: Click to play the video, and click to pause it;
- 3. **File deletion:** Click in the upper right corner of a file thumbnail to select the file. Once selected, the identifier will change to Click and to delete the selected file, and click to cancel the deletion;
- 4. **File export:** Connect to a USB drive, select a file and click and the File Export pop-upwindow will pop up. Select the file export format, and click to export. After the export is completed, click to exit, as shown in Figure 4-5.

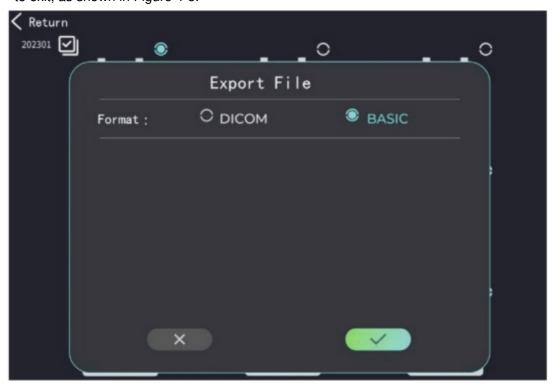


[Figure 4-5] File Export Pop-up Window

5. Creation of video or graphic report: Select a picture or a video, and click Create Graphic Report or Create Video Report to enter the Input Information interface. Input the information, and click Create Graphic Report or

#### **User management**

Click on the touch screen to enter the User page, as shown in Fig. 4-6.

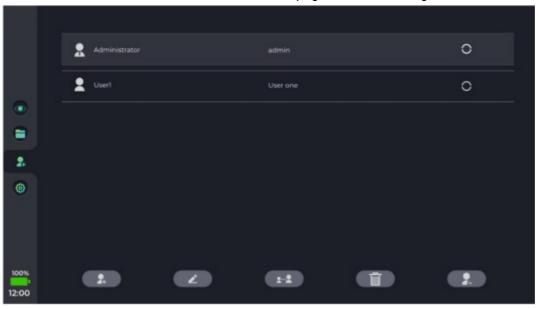


[Fig. 4-6] User page

- 1. **New user:** Log in as Admin, then click to enter the New User page, enter the legal user name and password, verify the password, and click . If you can see the new user name on the User page, the new user is successfully added:;
- 2. **Edit user:** You can edit all users when logging in as Admin; You can only edit the current user when logging in as a regular user: You cannot edit any user when logging in as an anonymous user. Select the user, click n to enter the Edit User page, enter the legal user name and password, verify the password, and click you can see the edited user name on the User page, the user is successfully edited;
- 3. **Switch user:** Enter the User page, select the user, click to enter the Switch User page, enter the correct password, and click , Then the user will be switched to the currently selected one.
- 4. **Delete user:** Log in as Admin, select the user, and click Click in the pop-up window Confirm Delete to delete the selected user.
- 5. Log out user: Click this button to log out the user and enter an anonymous status

#### Setting

Click on the touch screen to enter the Settings page, as shown in Fig. 4-7.

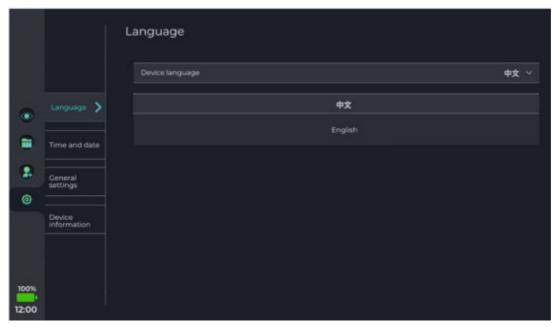


[Fig. 4-7] Settings page

1. (1) Language settings: Click the Device Language bar to show the drop-down options



Select a language, and the system language will be switched to the selected one;

 - 2. Data and date settings:
  - 1. Time zone settings: Click the Time Zone Configuration bar to show the drop-down options



Select a time zone, and the system time zone will be switched to the selected one;

- 2. Time system settings: Select 24H or 12H, and the time system will be switched to the selected one;
- 3. **Date format:** Select "YYYY/MM/DD" or "DD/MM/YYYY", and the system date format will be switched to the selected one:
- 4. **Date and time settings:** Select the date and time by sliding up and down, and click confirm;

### 3. General settings:

- 1. **Startup password:** Click the startup password switch to control the login verification (turn on the switch, and login verification is required for startup);
- 2. Restore factory settings: Click the button to restore the factory settings
- 3. **System upgrade:** Click the button to check whether there is an upgrade file in the USB flash drive, and click the file to upgrade the system after the administrator certification
- 4. **Device information:** Enter the Device Information page to view the information on the host machine and lens body:

#### **Image processor Technical Parameters**

Storage method	Internal storage 64 GB			
Power Supply Requirements	Nominal voltage: DC 7. 2 V; battery capacity ≥ 9500 mAh			
Protection against Electric Shock	Class II, Type BF applied part			
Operating environment TemperatureRel ative humidityAtmospheric pressure Alti tude	5–40°C30%–80%RH, non-condensing 70-106kPa≤ 2000 m			
Storage TemperatureRelative humidity	0 45°C30 80% RH, non-condensing			
TransportationTemperature Relative hu midity	-20 50°C20 90% RH, non-condensing			
HDMI port	HMDI 2.0			
SDI port	3G-SDI			
DVI port	DVI-D			
USB port	USB 2.0			

#### **GERMANY**

EICKEMEYER KG Eltastrate 8

78532 Tuttlingen

**T** +49746196 5800

**F** +49 7461 96 580 90

info@eickemeyer.de

www.eickemeyer.de

### **SWITZERLAND**

EICKEMEYER AG

Sandgrube 29

9050 Appenzell

**T**+41717882313

F+417178823% 14

info@eickemeyer.ch

www.eickemeyer.ch

#### **POLAND**

EICKEMEYER Sp.z 0.0.

Al Jana Pawta II 27

00-867 Warszawa

T+48 221855576

**F** +48 22185 59 40

info@eickemeyer.pl

www.eickemeyer.pl

#### **ITALY**

EICKEMEYER S.R.L.

Via G. Verdi 8

65015 Montesilvano (PE)

T+39 085 935 4078

F+39 085 935 9471

info@eickemeyer.it

www.eickemeyer.it

### **DENMARK**

EICKEMEYER ApS
Solbakken 26, Hammelev
6500 Vojens
T +45 7020 5019
info@eickemeyer.dk
www.eickemeyer.dk

#### **NETHERLANDS**

EICKEMEYER B.V. Doejenburg 203 4021 HR Maurik T +31 345 58 9400 info@eickemeyer.nl www.eickemeyer.nl

#### **UNITED KINGDOM**

 
EICKEMEYER Ltd.
3 Windmill Business Village
Brooklands Close
Sunbury-on-Thames
Surrey, TW16 7DY
T+44 20 8891 2007
info@eickemeyer.co.uk
www.eickemeyer.co.uk

#### **CANADA**

EICKEMEYER Inc.
617 Douro Street
Suite 205
Stratford, Ont. Canada
N5A 0B5
T+1 519 273 5558
info@eickemeyervet.ca
www.eickemeyercanada.ca



#### **Documents / Resources**



<u>Eickemeyer EickView SD Endoscopy Monitor</u> [pdf] User Manual 307000, EickView SD Endoscopy Monitor, EickView SD, Endoscopy Monitor, Monitor

#### References

- E Home | Eickemeyer Medizintechnik für Tierärzte AG
- E Home | Eickemeyer com
- E Home | Eickemeyer Tierarztbedarf Deutschland
- E<u>Eickemeyer</u>
- **E** <u>Home | Eickemeyer attrezzature per veterinari S.r.l.</u>
- E Home | Eickemeyer Medische Techniek voor Dierenartsen B.V.
- E Home | Eickemeyer Veterinary technology for life Spółka z ograniczoną odpowiedzialnością
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.