



GP-LS 18
Cordless Pruning
Shears



Einhell GP-LS 18 Cordless Pruning Shears User Guide

[Home](#) » [Einhell](#) » Einhell GP-LS 18 Cordless Pruning Shears User Guide 

Contents

- [1 Einhell GP-LS 18 Cordless Pruning Shears](#)
- [2 Product Information](#)
- [3 USAGE „HAND-MODE“](#)
- [4 USAGE „TELESCOPIC-MODE“](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Einhell GP-LS 18 Cordless Pruning Shears



Product Information

Specifications

- Model: GP-LS 18/28 Li T BL
- Type: Cordless Pruning Shears
- Maximum Cutting Width: 28mm
- Minimum Cutting Width: 14mm

USAGE „HAND-MODE“

1. Off→ Standby




2. Standby→ On



WIDTH ADJUSTMENT

3. Cutting Width

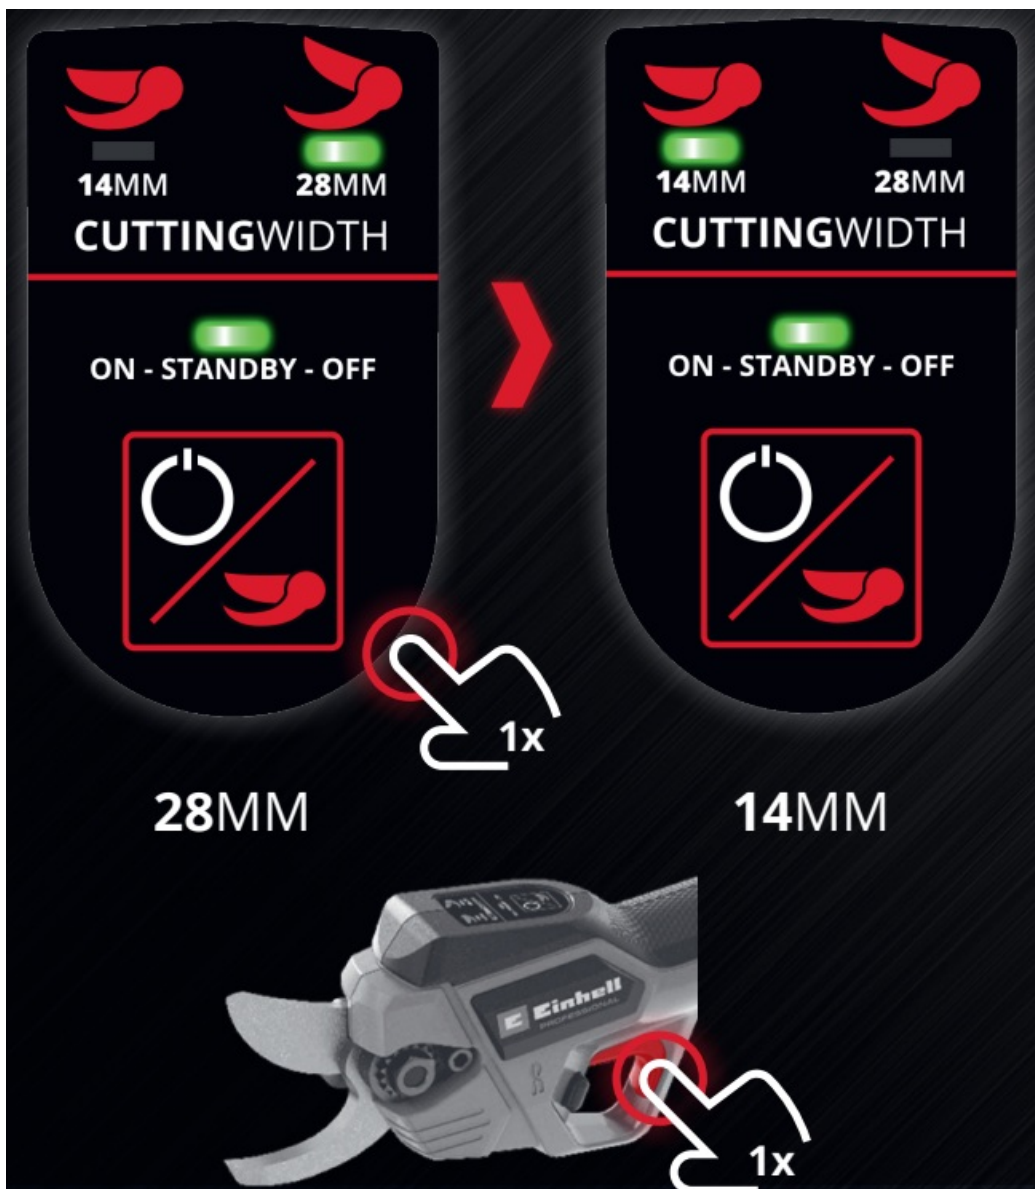

4. Off
automatic



- On→ Auto Standby: 30 sec
- Standby→ Auto shutoff: 10 Min
manual



USAGE „TELESCOPIC-MODE“

1. Off → Standby



2. Standby → On



3. Off
automatic



manual



Frequently Asked Questions

- **Q: How do I adjust the cutting width?**

A: In Hand Mode, double-click twice for width adjustment. In Telescopic Mode, double-click twice for the specific function.

- **Q: How do I switch off the device?**

A: Press and hold for 3 seconds to power off in both Hand and Telescopic Modes.

Documents / Resources

	Einhell GP-LS 18 Cordless Pruning Shears [pdf] User Guide GP-LS 18 Cordless Pruning Shears, GP-LS 18, Cordless Pruning Shears, Pruning Shears
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.