




## eira ER2661KVM HDMI KVM Point to Point Extender User Manual

[Home](#) » [eira](#) » eira ER2661KVM HDMI KVM Point to Point Extender User Manual 



**HDMI KVM EXTENDER**  
**HDMI KVM Point to Point Extender**  
**User Manual**  
**ER2661KVM**

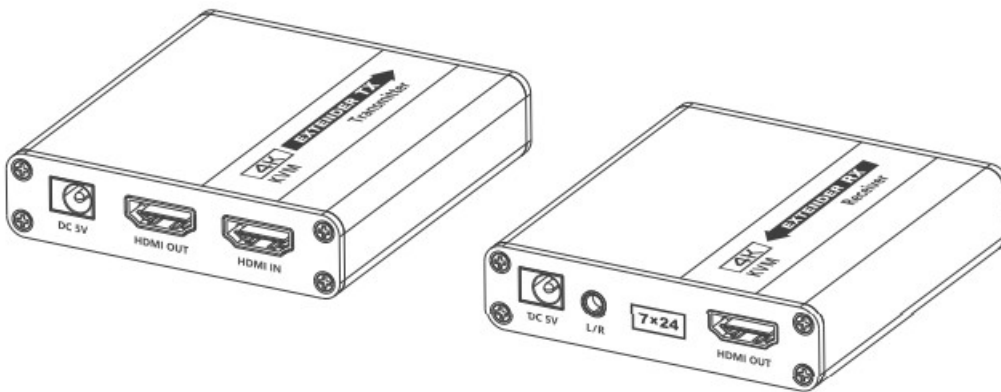

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

## Contents

- [1 Important Safety Notice](#)
- [2 Introduction](#)
- [3 Features](#)
- [4 Package Contents](#)
- [5 Installation Requirements](#)
- [6 Interfaces](#)
- [7 Installation Procedures](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## Important Safety Notice

1. . Please distinguish the transmitter and receiver before installation.
2. Do not disassemble the machine to repair the product during the working process to avoid electric shock.
3. Please cut off the power before installation. Live installation may damage the equipment.
4. Do not expose the devices to rain, moisture and liquid.
5. Use a5V/1A DC adapter only. Make sure the specification matched if using 3rd party DC adapters.

## Introduction

This HDMI Extender includes a transmitter unit and a receiver unit, allows the HDMI signal to be transmitted up to 70 meters at 1080p resolution using a Cat6/6A/7 network cable. I t adopts a point-to-point connection configuration, supports KVM remote control and management and 3.5 mm stereo audio output. I t is perfect for outdoor advertising, monitor system, home entertainment, conference, etc.

## Features

1. Zero latency.
2. Support up to 4K@30Hz resolution.
3. Support CAT6/6A/7 network cables, 1080p@60Hz transmission distance i s up to 70 meters, 4K30Hz transmission distance is up to 40 meters.
4. Support KVM remote control and management.
5. Support HDR10.
6. Support EDID passthrough.
7. Transmitter supports HDMI loop-out.
8. Receiver supports 3.5mm stereo audio output.
9. Automatically adjusts parameters to match different network cables and achieve the best display performance.
10. Lightning Protection, Surge Protection, ESD Protection.

 
## Package Contents



Transmitter unit x1pc



Receiver unit x1pc



DC5V/1A x2pcs



User manual x1pc




USB cable x1pc

## Installation Requirements

1. HDMI source device (compute graphics card, DVD, PS4, HD monitoring equipment etc.)
2. HDMI display device like SDTV, HDTV, projector with HDMI port.
3. UTP/STP CAT6/6A/7 cable. Follow standard IEEE-568B, It is recommended to select a network cable with less loss and crosstalk.


## Interfaces

### 1. Transmitter (TX)

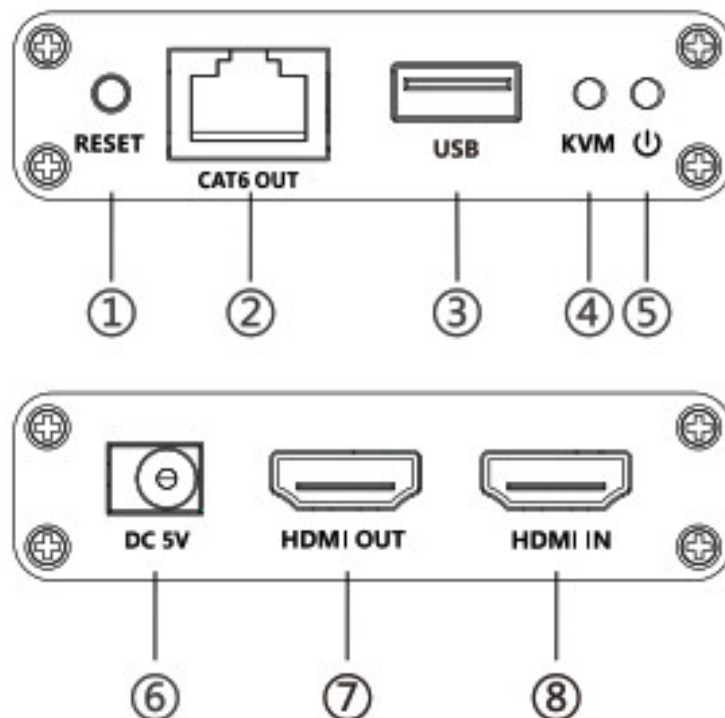

1	Reset button	Press the button to restart the device.
2	Rj45 signal output	Output modulated HDMI signal.
3	USB-A port	Connect to the computer.
4	KVM indicator	a) The host computer is not connected and the indicator light is off. b) Connect to the host computer, the indicator light is always on. c ) The mouse and keyboard work normally, and the signal transmission i ndicator flashes.
5	Power/Signal indicator	a. When power is on and no HDMI signal is transmitted, the indicator flas hes. b. When power is on and HDMI signal is transmitted, the indicator is alwa ys on.
6	DC5V input	Connect to the 5V1A DC power adapter.
7	HDMI output	Connect toga local HDMI display device.
8	HDMI input	Connect toga HDMI source device.


## 2. Receiver (RX)

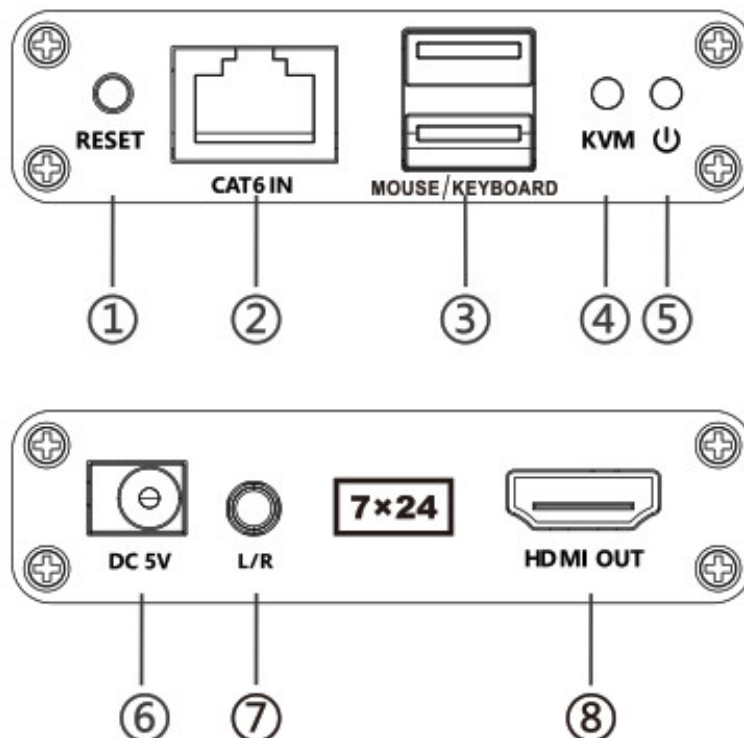

1	Reset button	Press the button to restart the device.
2	Rj45 signal output	Input modulated HDMI signal.
3	USB-A port	Connect mouse and keyboard.
4	KVM indicator	a) The host computer is not connected and the indicator light is off. b) Connect to the host computer, the indicator light is always on. c) The mouse and keyboard work normally, and the signal transmission in indicator flashes.
5	Power/Signal	a. When power is on and no HDMI signal is transmitted, the indicator flashes. b. When power is on and HDMI signal is transmitted, the indicator is always on.
6	DC5V input	Connect to the 5V1A DC power adapter.
7	HDMI output	Connect headphones or power amplifiers to output stereo audio.
8	HDMI input	Connect to a HDMI source device.

## Installation Procedures

### 1. Connection

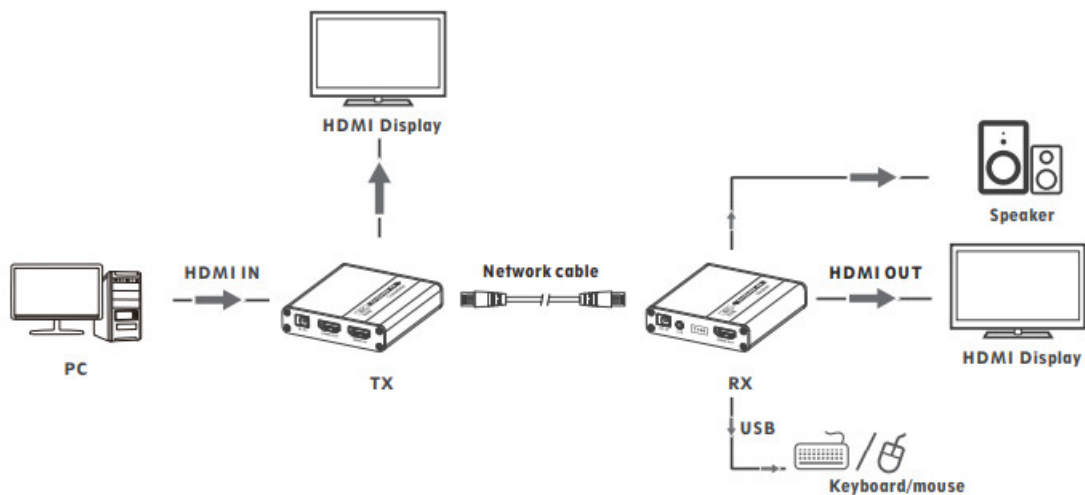

**Note:** When using the 3.5mm stereo audio jack, please switch the audio output format of the signal source to PCM format.

The network cable should follow the standard of IEEE-568B. It is recommended to select a network cable with less loss and crosstalk.

1. Orange/white
2. Orange
3. Green/white
4. Blue
5. Blue/white
6. Green
6. Brown/white



## 2. Connection instruction

1. Connect the source device to the HDMI in port of the transmitter with an HDMI cable, and connect the HDMI out port of the receiver to the display device with another HDMI cable.
2. Connect the CAT out port of the transmitter and the CAT in port of the receiver via a network cable (CAT6/6A/7).
3. If using HDMI loop out, connect the display device to the HDMI OUT port of the transmitter.
4. Plug the power supply into the device to get started.

**[NOTE]:** It is recommended to use a length range within 2~70m network cable. If the cable is too short, there may be no display output because the signal is too strong. If the cable is too long, the output may be with poor quality.

## FAQ

### **Q: There is no output on screen when all connections are correct?**

- A: 1) Please make sure the HDMI cables support the resolution of the output signal from the source device.  
 2) Please check and make sure the network cable insert to the RJ45 port well.  
 3) Restart the transmitter or receiver by pressing the reset button.

### **Q: Black screen happened on the display/monitor?**

- A: 1) Check if the length of the cable is within the specified range.  
 2) Reset the transmitter to re – built the connection.

### **Q: The display shows unusual color or no sound?**

- A: 1) Reset the transmitter or receiver to re – built the connection.  
 2) Check if the HDMI cables are connected well.  
 3) Reconnect the network cable.

Items	Specification	
Power Supply	Voltage/Current	DC5V/1 A
Power consumption	TX < 2.5W RX < 2.5W	

HDMI Performance And Interface	HDMI compliance	HDMI 1.4
HDCP compliance	HDCP 1.4	
HDMI resolution	800×600 1280×720 1024×768 1280×960 1440×900 1366×768 1680×1050 480i@60Hz 1920×1080 480p@60Hz 576i@50Hz 576p@50Hz 720p@50/60Hz 1080i@50/60Hz 1080p@24/25 /30/50/60Hz 3840×2160@24/25/30Hz	
Supports audio formats	PCM, LPCM, DTS HD, DTS Audio	
Input and output TMDs signal	0.7-1.2Vp-p(TMDs)	
Input and output DDC signal	5Vp-p(TTL)	
Input cable length	s8m(AWG24)	
Output cable length	s8m(AWG24)	
Transmission Distance	Cat6/6A/7	1080p@60Hzs 70m 4K@30Hzs40m
Protection Level	Electrostatic protection of the whole machine	Implementation of the standard: IEC61000-4-2 Ia Contact discharge level 2 (4 KV) Ib Air discharge level 3 (8 KV)
Operating Environment	Working temperature	-20-60°C
Storage temperature	-30-70°C	
Humidity (no condensation)	0-900/0RH	
Body Properties	Dimension	75.0(L) x 85.0(W) x 20.0(H)mm
Material	Aluminum alloy material + crystal panel	
Treatment process	Grit blast	
Color	Black	
Weight	TX: 180g RX:180g	

### Disclaimer


The product name and brand name may be registered trademark of related manufactures. ™ and ® may be omitted on the user manual. The pictures in this user manual are just for reference. The terms HDMI, HDMI High-

Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.



**Documents / Resources**

	<a href="#">eira ER2661KVM HDMI KVM Point to Point Extender</a> [pdf] User Manual ER2661KVM, ER2661KVM HDMI KVM Point to Point Extender, HDMI KVM Point to Point Extender, KVM Point to Point Extender, Point to Point Extender, Extender
---	--

Manuals+