




## ELBA EIC-K2022(BK) Induction Cooker Owner's Manual

[Home](#) » [ELBA](#) » ELBA EIC-K2022(BK) Induction Cooker Owner's Manual 

# ELBA

INDUCTION COOKER  
MODEL: EIC-K2022(BK)



INDUCTION COOKER  
MODEL: EIC-K2022(BK)  
Owner's Manual

Please read this manual carefully before operating your set.  
Retain it for future reference.

Record the model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

## Contents

### 1 IMPORTANT SAFEGUARDS

### 2 PRODUCT DESCRIPTION.

### 3 SUITABLE UTENSIL

### 4 OPERATING THE APPLIANCE – (MANUAL MODE)

### 5 TROUBLESHOOTING

### 6 MAINTENANCE AND CARE

### 7 Documents / Resources

### 8 Related Posts

## IMPORTANT SAFEGUARDS

When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not dismantle and refit parts or repair the appliance on your own.
3. Do not contact the plug with wet hands.
4. Do not let the power cord remains plugged when not in use.
5. Do not use the appliance when the power cord is damaged or the plug is not properly inserted.
6. Never bend or bind the power cord or apply by excessive force, otherwise, it may cause damage. If the power cord is damaged, it must be replaced by the manufacturer or its service center or a similarly qualified person in order to avoid hazards.
7. Place the appliance on a stable surface.
8. Never use the appliance where it is likely to be subject to dampness or close to fire.
9. Never rinse the appliance directly with water to avoid damaging the appliance.
10. Never use the appliance at a place where it can be reached by children.
11. Do not cook without a load or overload of food. Otherwise, it will cause deformation of the pot and appliance.
12. Metallic objects such as knives, forks, spoons, lids should not be placed on the cooking plate as it may conduct heat and get hot.
13. Do not carry the appliance during operation.
14. Do not drop objects onto the cooking plate, in case it cracks, immediately turn off the power supply and unplug the plug from the power socket and send it for repair.
15. The content of the food loaded in the pot should not be exceeding 4 kg; otherwise, it will cause damage and malfunction of the appliance.
16. After cooking, high heat temperature that is produced from the pot will conduct onto the appliance, NEVER touch the cooking plate immediately after use.
17. When using high frequency, the noise will be heard as it is the result of the metal materials of the pot, it is not malfunctioning. While operating the appliance, the running sound of fan will be heard as the fan will rotate for quite some time to reduce the inner heat.
18. Do not place a sheet of paper between the pot and the cooking plate. The paper may get burnt.
19. Do not place the appliance near objects which will be affected by magnets; such as: radios, televisions,

automatic-banking cards and cassette tapes.

20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. This appliance is intended to be used in households and similar applications.
23. The appliance is not intended to be operated by means of an external timer or a separate remote control system.
24. Save these instructions for future reference.

## PRODUCT DESCRIPTION.



1. Cooking Plate	7. Lock Function
2. LED Display	8. Timer Function
3. Child Safety Lock Indicator Light	9. Power or Temperature Level Decrease
4. Power Indicator Light	10. Power or Temperature Level Increase
5. Temperature Indicator Light	11. Power & Temperature Function
6. Timer Indicator Light	12. On / Off

## Control Panel



## SUITABLE UTENSIL

1. Iron, cast iron, and stainless steel (with high steel content), with a diameter of 12cm-26cm.
2. Flat bottom utensil.



Stainless Steel Pot



Iron Skillet



Iron Pot



Frying Pan  
(Iron/Steel)



Enamel Iron Pot



Iron or Enamel Pot



Iron Pan

## UNSUITABLE UTENSIL

This appliance has an automatic utensil checking feature with an unsuitable utensil. You cannot select on the heating power even when the “ON/OFF” button is pressed. The display screen will show “E0” error.



Pottery Pot



Anti-heating  
Glass Pan/Pot



Pot with  
Curve Bottom



Pot with Legs



Outer Bottom  
Less than 12cm



Copper Alloy Pot with  
Low Iron Content

## OPERATING THE APPLIANCE – (MANUAL MODE)

1. Place the appliance pot at the center of the cooking plate. Warning: Please do not power on the appliance with an empty pot as this will cause damage and deformation to the pot. Power on the appliance and you will hear a “beeping” sound. The display screen will show “E0”.
2. Touch the “On/Off” icon and then followed by the function icon to select the required cooking power or temperature.
3. Touch the “Function” icon, the red light indicator for “Power” will light up. The display screen will show 1800. The default operating power level is at 1800W. The power level can be adjusted by “-” or “+” for desired power level. Power settings: 500 – 2000W
4. Continue to touch the “Function” icon, the red light indicator for “Temperature” will light up. The display screen will show 240. The default operating temperature level is at 240°C. The temperature level can be adjusted by “-” or “+” for desired temperature level. Temperature settings: 60 – 240°C
5. To prevent children from adjusting the appliance accidentally or changing cooking settings, touch the lock function icon, the red light indicator for “Lock” will light up and the appliance will not respond to touch on any function except On / Off. To turn off the “Lock” function, touch and hold for 3 seconds.
6. After selecting the power or temperature function, continue to touch the “Timer” function icon, the red light indicator for “Timer” will light up and the display screen will flash and show “00:00 “. Adjust the desired minutes by turning the control knob for timer settings from “0:01” minutes to “3:00” hours.  
Note: The appliance will automatically turn off without any operation within 2 hours.
7. To cancel any of the selected cooking functions, touch the “ON/OFF” icon.
8. After cooking has finished, power off the appliance and unplug the appliance.

## TROUBLESHOOTING

This device will detect and display on screen if functional disorder. It is solely protected by its return circuit sensor.

SCREEN DISPLAY	FAULT DEFECTED	TROUBLESHOOTING GUIDE
EO	Utensil Not Placed	<ol style="list-style-type: none"><li>1. Please check whether the pot is centrally placed on the cooking plate.</li><li>2. Please check is the utensil is suitable to be used.</li><li>3. Please check whether the bottom diameter of the pot is less than 12cm</li><li>4. If you remove the utensil when cooking, the appliance will have buzzer sounds and turn off automatically after 1 minute .</li></ol>
EI	Over Current Protection / IGBT Sensor Fault	<ol style="list-style-type: none"><li>1. Please check whether the ambient temperature is too high.</li><li>2. Please check the exhaust fan slots is blocked and let the appliance to cool down before powering on again.</li><li>3. Power off the appliance and unplug from the wall outlet. Connect the plug to the wall outlet again and power on. If the display screen still shows “Er error code, please send the appliance to the nearest service center or a similarly qualified person for checking.</li></ol>
E2	Temperature Sensor at Fault / Utensil Overheated / Glass Plate Overheated	<ol style="list-style-type: none"><li>1. This appliance is equipped with overheating protection, if the utensil or glass plate is too hot, the appliance will switch off automatically for safety protection.</li><li>2.If the display screen show “E2” with buzzer sounds, please power off the appliance and wait for some time to cool down the appliance. After that, the appliance will operate back to normal.</li><li>3. For cooking for a long-time, please use the temperature function to avoid overheating.</li></ol>
E3	Supply Voltage Unusual	<ol style="list-style-type: none"><li>1. Please check whether the appliance has reached the preset Power / Temperature settings.</li><li>2. Please check whether the power is cut off.</li></ol>

## MAINTENANCE AND CARE

1. Please unplug the plug from the power socket after use.
2. Wait until the appliance completely cools down and wipe the appliance body, cooking plate, and control panel with a soft and wet cloth. A neutral cleanser may use for firm oil stain, and then wipe the remained residue with a soft and wet cloth.
3. Never rinse the appliance directly with water or immerse it in water.

## Documents / Resources



**ELBA** INDUCTION COOKER  
MODEL: EIC-K2022(BK)  
Owner's Manual  
Please read the Owner's Manual carefully before  
using the product.  
Please read the Safety Instructions.  
Please read the Warranty Policy and the Return Policy.  
For the full warranty policy and the return policy, please  
visit the website: [www.elba.com](http://www.elba.com)  
© 2022  
For the full warranty policy and the return policy, please visit the website: [www.elba.com](http://www.elba.com)

## [ELBA EIC-K2022\(BK\) Induction Cooker](#) [pdf] Owner's Manual EIC-K2022 BK Induction Cooker, EIC-K2022, Induction Cooker, Cooker