



## ELBA MULTI COOKER EMC-K5010(SS) Owner's Manual

[Home](#) » [ELBA](#) » ELBA MULTI COOKER EMC-K5010(SS) Owner's Manual 

# ELBA



**MULTICOOKER**  
**Owner's Manual**  
**MODEL: EMC-K5010(SS)**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and a serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

## Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 PRODUCT DESCRIPTIONS](#)
- [3 PREPARATION FOR FIRST USE](#)
- [4 OPERATION INSTRUCTION](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 APPLIANCE STORAGE](#)
- [7 ENVIRONMENT-FRIENDLY DISPOSAL](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)


## IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including the following.

1. Read all instructions.
2. Be sure to use an earthling switch socket, and the socket must be inserted tightly. Never use a universal socket shared with other electrical appliances.
3. The inner pot, heating base, and heating plate are very hot when in use or within sometime after shutdown, never touch them with your hand. Always allow it to cool down before handling.
4. Fill water or soup not more than "MAX" water line during operation, spillage from overflow when boiled may cause an electrical hazard.
5. To protect against fire, electric shock, and injury to persons, do not immerse the cord, plugs, or heating base in water or other liquid.
6. Be sure to use the specific pot to the product, and do not put other pots on the heating plate of this product for cooking.
7. Please add water if steam for a long time, to avoid dry-cooking.
8. In case any defects are found to avoid any dangers, please do not disassemble the units on your own. Please send the appliance to the nearest authorized dealer or after-sales service center for examination and repair.
9. Operate the appliance in a flat and dry place. Always keep the appliance dry, especially the heating plate. The appliance may be deformed or damaged when exposed to high heat or used in unstable surroundings (excess water or humidity).
10. Make sure the outer surface of the pot and the heating plate are clean and dry before plug-in.
11. Do not remove the pot from the heating plate before cooling. Remove with force will damage the pot and heating plate.
12. Do not place any object nearby or cover or touch the hot steam vent of the glass lid while cooking.
13. Unplug from outlet when not in use and before cleaning. Allow to cool down before putting on or taking off parts, and before cleaning the appliance.
14. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized dealer or after-sales service center for examination and repair.

15. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury to persons.
16. Do not use the appliances outdoors.
17. Do not let the cord hang over the edge of the table or counter, or touch a hot surface.
18. Do not place on or near a hot gas or electric burner, or in a heated oven.
19. It is normal for smoke or smell to be emitted during first use. Continue using till smoke stops.
20. Do not put another pot on the heating of this appliance for heating.
21. Do not use the inner pot directly in an open flame.
22. Do not use appliances other than intended use.
23. This appliance is not intended for use by a person (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

## PRODUCT DESCRIPTIONS

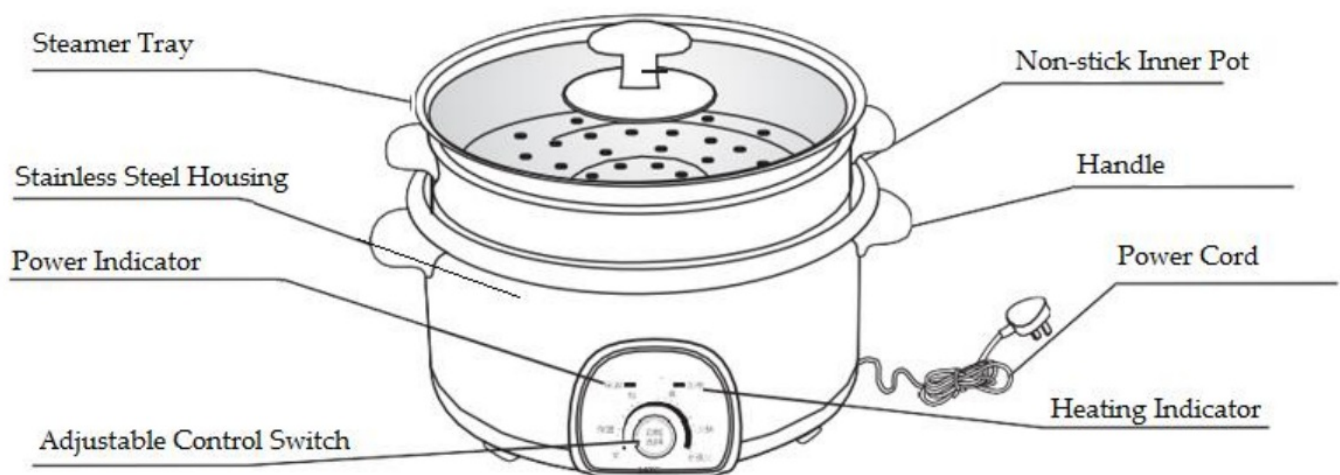

## PREPARATION FOR FIRST USE

1. Remove all packaging materials. Check to make sure the appliance is not damaged. In case of any, damage returns the appliance to the nearest authorized dealer or after-sales service center for examination and repair.
2. Before first use, clean the inner pot and glass lid thoroughly by wiping with a damp sponge and mild cleaning detergent. Do not immerse the body unit into water.
3. Keep the bottom of the pot and heating base clean.
4. There will be an unpleasant odor and slight smoke that is often detected during the initial use of a new appliance. This is caused by the burning away of the protective substances used during the manufacturing process. This is not a malfunction. This is phenomenon will disappear after a period of use.

## OPERATION INSTRUCTION

1. Before each operation, remove any unwanted material from the surface of the pot base. Ensure the adjustable control switch is in the left end "OFF" position.
2. For cooking, put the inner pot on the heating base and turn slightly to fit the bottom of the pot to the surface of the heating base. Ensure the pot sit firmly on the heating base before operation. Fill in the water not over the

“MAX” water line to avoid spillage which may result in an electric hazard. For steaming, place the steaming tray to fit the inner pot and put the food plate into the steamer tray, and close the glass lid.

3. Plug the power plug into the power socket.
4. Move the adjustable controller to high and the “POWER” light will turn on. Place food into the pot after the soup is boiled. Then adjust the temperature controller to your ideal power level. For steaming, after boiling, adjust the control switch to the “Middle” position and observe the water level if it is low, add water if required. Please adjust the temperature according to your desired level.
5. After using, move the adjustable controller to “OFF” and then unplug the power plug from the power supply.

## CLEANING AND MAINTENANCE

1. Before cleaning, always turn off the appliance and unplug the power plug from the power supply. Allow the heating base to completely cool down, and then remove the inner pot or steamer tray from the heating base.
2. Clean the inner pot, glass lid and steamer tray with a little dishwashing detergent added. Rinse thoroughly and dry completely.
3. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.
4. Always keep the inner pot and steamer tray clean and dry.
5. The manufacturer rejects all claims onto the damaged layer of coating in the inner pot.

## APPLIANCE STORAGE

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure that all the parts are cleaned and dry.

## ENVIRONMENT-FRIENDLY DISPOSAL




Correct Disposal of this appliance:

This marking indicates that this appliance should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

# ELBA

## Documents / Resources

 <p><b>ELBA</b> MULTI COOKER MODEL: EMC-K5010(SS)</p> <p>Owner's Manual</p> <p>Please read this manual carefully before using the product. It contains important information about the safe use of the product and the features of the product. It also contains information about the warranty and the after-sales service. Please keep this manual in a safe place for future reference.</p> <p>For the latest version of this manual, please visit the website: <a href="http://www.elba.com">www.elba.com</a></p>	<p><a href="#">ELBA MULTI COOKER EMC-K5010(SS)</a> [pdf] Owner's Manual</p> <p>ELBA, MULTI COOKER, EMC-K5010 SS</p>
--	---