



ELDMandate Electronic Logging Devices User Guide


[Home](#) » [ELDMandate](#) » **ELDMandate Electronic Logging Devices User Guide** 

Contents

- [1 ELDMandate Electronic Logging Devices](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Configuring the ELD before operation](#)
- [5 Local Support Account \(initial ELD configuration\)](#)
- [6 ELD DriverOperation](#)
- [7 ELD Main Operation Screen](#)
- [8 Assumption of Unidentified Logs](#)
- [9 Exporting the ELD output file](#)
 - [9.1 ELD general messages and notifications](#)
- [10 ELD Diagnostics and Malfunctions \(Resolution\)](#)
- [11 Shipments \(connecting to brokers, shippers, receivers & carriers\)](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



ELDMandate Electronic Logging Devices

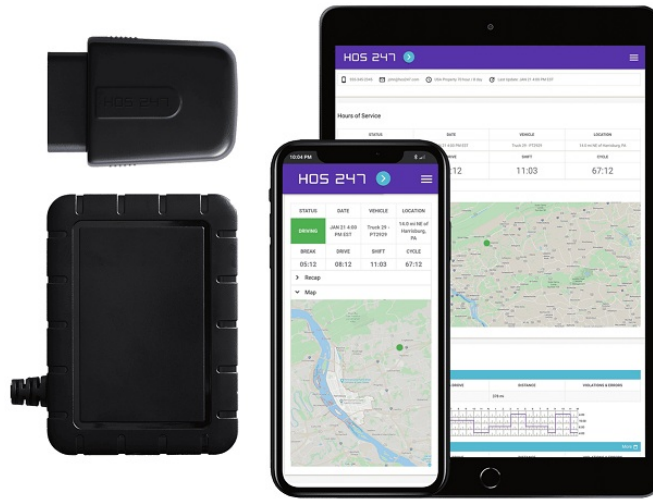

Product Information

- The ELD Mandate Prime is an Electronic Logging Device (ELD) that is compliant with the Technical Standard for Electronic Logging Devices.
- It is designed to help drivers and support personnel in managing their logs and complying with regulations.
- The device operates on the Android operating system and comes with a comprehensive user guide.

Specifications

- **Version:** 7
- **Operating System:** Android
- **Compliance:** Compliant with the Technical Standards for Electronic Logging Devices

Product Usage Instructions

Configuring the ELD before operation

1. Confirm that you have received all the required components.
2. Ensure that your account has been created and you have access to the ELD online portal.
3. For future reference, print a copy of the user manual and keep it inside the cab.
4. Make a note of your ECM device's identifier in case you lose the user manual.

ICON KEY:

- **Important information:** This icon indicates important information that requires attention.
- **Take notes:** This icon indicates that you should take notes.
- **Online support account:** This icon indicates information related to your online support account.
- **Appears on Logbook:** This icon indicates information that will appear on your logbook.

What you need before operating the ELD:

- A mobile device with the ELD app installed and Bluetooth enabled.

- An internet connection either through a cellular data plan or a Wi-Fi hotspot.

Installing the ECM device

1. Plug the ECM device into the vehicle's diagnostic port.
2. If required, use the ECM adapter to plug the device into the J1939 port.

FAQ

Q: What should I do if I encounter a malfunction with the ELD?

- **A:** The user manual contains a list of malfunctions and their resolutions. Refer to that section for assistance.

Q: Can I access my ELD logs online?

- **A:** Yes, you can access your ELD logs through the ELD online portal. Ensure that your account has been created and you have access to it.





Q: Do I need an internet connection to use the ELD?

- **A:** Yes, the ELD requires an internet connection. Your mobile device must be connected to the internet either through a cellular data plan or a Wi-Fi hotspot.

Configuring the ELD before operation

Read this chapter before operating the ELD!

- Confirm you have received all required components, make sure your account was created and you have access to the ELD online portal.
- To save time in the future, we recommend you print a copy of this document and keep it inside the cab.
- This document contains critical information to properly operate your ELD and a list of malfunctions and how to resolve them.
- It is also recommended to write down your ECM device's identifier (shown below) in a separate location in case you lose this document.
- In some instances, this manual uses Icon Keys to direct your attention to specific and important information. See the different icons on the left.

I C O N K E Y	
	Important information
	Take notes
	Online support account
	Appears on Logbook

What you need before operating the ELD?



Mobile Device



ECM + Adapter



Harness



Access to the ELD online portal

- Your mobile device (where the ELD app is running) must a) have Bluetooth enabled and b) be connected to the internet either with a cellular data plan or connected to a hot spot.

Installing the ECM device: DRIVER, SUPPORT PERSONNEL, AND BACK-OFF ICE GUI DE

- Please plug the ECM device into the vehicle's diagnostic port. In some cases, you might need to use the ECM adapter to plug the device into the J1939 port.
- Locate the diagnostic port (see the image below for possible locations depending on the vehicle's make, model, and year).
- For the ELD to remain compliant, it must remain connected to the ECM device and read engine data. Engine data is only available when the vehicle's engine is turned on.



Local Support Account (initial ELD configuration)

- The initial configuration is only required right after installing the ELD app for the first time and it is no longer needed after.

- The objective is to initially configure a vehicle profile (tractor number, VIN) and connect/test the ECM device connection.

Configuring the ELD with the right asset




- The ELD has to be linked to a carrier asset (vehicle). Please tap on the truck or trailer image to pick from the asset list downloaded during login (see list below) or to manually enter (if allowed) a new truck or trailer.
- Once you select a tractor or trailer from the downloaded list the ELD will always use the VIN, license plate, and registration state displayed on the list:

The screenshot shows two parts of the application interface. The top part is the 'Vehicle Profile' screen, which has a blue header with a logo and the title 'Vehicle Profile'. Below the header are two circular icons: a truck icon labeled 'SELECT TRACTOR' and a trailer icon labeled 'SELECT TRAILER'. Under 'Tractor Information', there are fields for Tractor Number (123), Tractor VIN (XXXXXXXXXX), Tractor Lic. plate (FJ00000), and Tractor Registration State/Province (FL). Under 'Trailer Information', there are fields for Trailer Number (789), Trailer VIN (XXXXXXXXXX), Trailer Lic. plate (TR00000), and Trailer Registration State/Province (CA). Below these are fields for 'Days activation' (4000), 'Confirmation' (Miles), and 'Operating Mode' (ELD). The bottom part of the screenshot shows the 'ECM-Linked Devices' screen, which has a blue header with a logo and the title 'ECM-Linked Devices'. Below the header, it shows a device ID 'AXT1_02940', a timestamp '00:00:25:08:08:10', and a 'DISCONNECTED' button with a red border.

Establishing ECM Connection

- Before a driver can operate an ELD, the ELD must be synchronized to the vehicle's engine using what is known as an Engine Synchronization Module (ECM) which is very common on GPS trackers.
- Before scanning and connecting to an ECM device, make sure your ELD has Bluetooth functionality enabled:

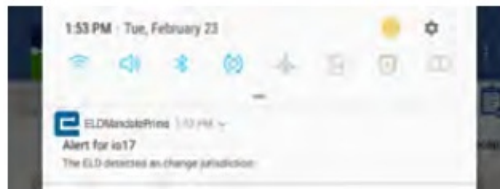

- We highly recommend installing a label or decal on the vehicle's dashboard with the ID of the ECM device installed on the vehicle. Also, write down this ECM ID.



- To connect to the ECM device, tap on Scan Devices, and wait for the device to show up (make sure the correct ECM ID shows up)
- For the ECM device to work properly and the ELD to be able to connect to the device and read engine data, the engine must be turned on.
- Keep this in mind when operating the ELD. Duty status changes, as an example, require engine parameters when generated. Make sure the engine is still running when making duty status changes.
- Some ELD configurations lock an ELD to a specific ECM device, in which case the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.




- A diagnostic is performed to make sure the ELD is fully compliant and ready for driver operation.




Reinstalling the ELD app

- If you need to reinstall the ELD app (or install it on a different device), please search the Google Play Store for “ELDMandate Prime” and install the app. When you open the ELD app for the first time, you need to approve the following permissions:


Use camera

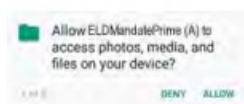


Use location

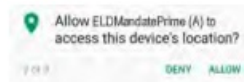

Use the network

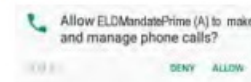

- You also need to permit the app to show over other apps:

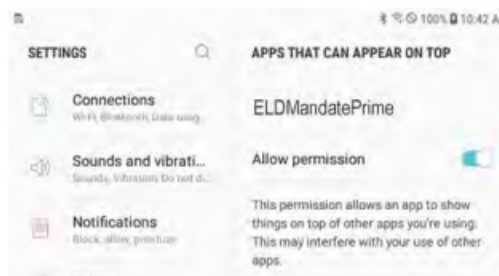

- You also need to synchronize the ELD with the portal at least once.

Tap on CONFIGURE:

ELD has not been configured

CONFIGURE

following message is received:

ELD has been successfully configured

OK

Wait until the ELD is synchronized with the server and the

ELD DriverOperation

Driver Authentication

- The ELD has three different accounts.
- Driver:** Unique, per-driver account used by drivers Hours of Service and ELD regulations.

- This account records duty status changes (RODS) and allows the export of driver's records for printout, display, and agent output file generation.
- **Support:** Account used by the carrier and ELD manufacturer to set up, configure, update, and troubleshoot the ELD.
- No duty status changes are recorded with this account and no access to the driver's record of duty status changes is permitted under the support account.
- **Non-authenticated:** All operation of a commercial motor vehicle (CMV) is recorded under this account (a.k.a Unidentified Driver) if no driver has logged into the ELD.
- Non-authenticated records (vehicle movement and on-duty time) are stored on the ELD as well as the carrier and should be assumed by a driver account.
- Log in using your driver's credentials. Login IDs, and the driver's license associated with the login ID, cannot be duplicated and are unique in the ELD system.
- Each driver using the system will have a unique login ID.
- This login name and password are for the specific driver's use only and must not be shared with any other person (driver or not).
- The login name belongs to the driver and is linked to the driver's personal information (e.g. driver's license, etc.).
- If the driver changes carrier and is now driving for a different carrier, the login name, under certain circumstances, will remain the same and the driver should ask the home base carrier to update the carrier name and DOT number on the system.
- The driver is restricted to be logged on to only one ELD at any time. For the driver to log on to a different mobile device, the driver must change to off-duty status and log in from the previous device.
- **Driver's unlock.** In the event the driver is still logged on an ELD, but the device ceases to function or gets lost, the driver must call the home base carrier and ask for his login name to be unlocked.
- The unlock process will change the driver's status to off-duty at the time the driver solicited the login unlock.

Selecting a vehicle profile (assets)

- Before the driver's logs can be exported and shared with an authorized agent, the driver must update the correct vehicle information.
- Please tap on the truck or trailer image to pick from the asset list downloaded during the login (see list below) or to manually enter (if allowed) a new truck or trailer.
- Once you select a tractor or trailer from the downloaded list the ELD will always use the VIN, license plate, and registration state displayed on the list.
- **Important:** Enter your vehicle's dashboard's odometer value (twice) for the ELD to adjust discrepancies between the dashboard and engine odometer.

Make tractor and trailer selection:




Show/Limit asset list to nearby ECM devices

- When a driver logs on to the app and taps on the Vehicle profile, the app will scan all the nearby ECM devices

and will list the vehicle(s) profile associated with the MAC address found.

- Drivers will have a toggle on that page to turn this feature off and show all the carrier's vehicle(s).
- When configuring the driver profile, Carriers must select if this option will be set on or off, once the driver logs on to the app.

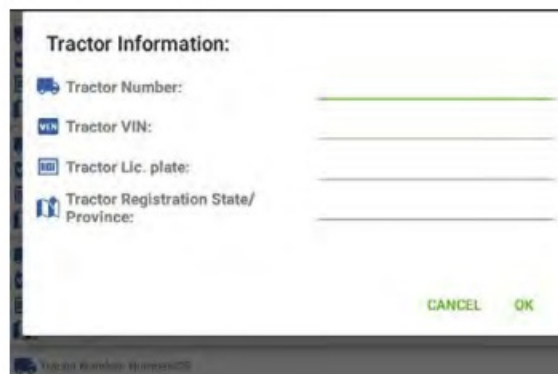A screenshot of a mobile application form titled "Tractor Information:". The form contains four input fields, each preceded by a small icon: a truck icon for "Tractor Number:", a VIN icon for "Tractor VIN:", a license plate icon for "Tractor Lic. plate:", and a location pin icon for "Tractor Registration State/Province:". At the bottom right of the form are two buttons labeled "CANCEL" and "OK".

- You can also add a new tractor or trailer (if allowed by your carrier) by selecting the + button located on the top right of the screen:
- Once a new asset is created on the ELD, the asset information is broadcast to the ELD portal and other ELDs operating under the same carrier.

Engine Synchronization (ECM connection)

- To connect to the ECM device, tap on Scan Devices, and wait for the device to show up (make sure the correct ECM ID shows up)
- For the ECM device to work properly and the ELD to be able to connect to the device and read engine data, the engine must be turned on. Keep this in mind when operating the ELD. Duty status changes, as an example, require engine parameters when generated. Make sure the engine is still running when making duty status changes. Some ELD configurations lock an ELD to a specific ECM device, in which case the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.



- **Note** Some ELD configurations lock an ELD to a specific ECM device, in which case, the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.

ELD Diagnostics

- Once connected to the ECM device you can run an ELD diagnostics (accessible from the top-right menu).
- The diagnostic checks critical components on your ELD and all areas must pass the test for you to remain compliant.



- **Bluetooth and ECM connection status:** The ELD must be able to read engine data at all times. Make sure the Bluetooth and ECM connection indicators remain green.
- If the indicator turns red, please go to Scan Devices and connect to the ECM-linked device.




Driver Profile (Preferences)

- We recommend verifying the driver's profile. Please make sure the information is correct: carrier name, your rule set (60-hour or 70-hour), and the home base time zone. Select the ruleset drop-down to change the rule set from 60h to 70h and vice versa.
- Select the units of measurement (miles, gallons, kilometers, or liters). Starting 24h time is set by your carrier but could be changed at any time. Just keep in mind that the new 24h starting time will take effect on your next cycle (after the 36h restart).




Personal Use (PU) and Yard Moves (YM)

- As a driver, current regulations allow up to 75 Km of driving for personal use. This provision allows you to, for instance, drive to the nearest rest area, and drive home among other reasons.
- The ELD will prompt you to add a pre-defined remark or type a different reason.
- The ELD must be connected to the ECM device for the Personal Use provision (button) to be available.
- Once you have reached the 75 Km limit you will receive a notification and you will be automatically switched to Driving duty status:

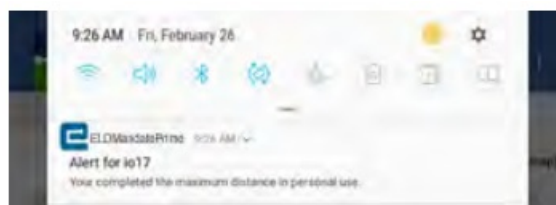


- If the ELD shuts down (e.g. power loss) or restarts, you will be prompted to either exit or continue the Personal Use status:

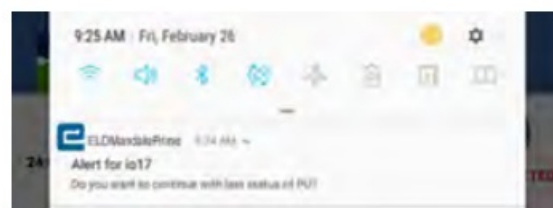

- The ELD also allows you to drive the vehicle inside a yard. Please, switch to Yard Move (YM button) before putting the vehicle in motion.
- If the vehicle's speed exceeds 32 Km/h you will be switched (automatically) to Driving duty status.
- Same as Personal Use, if the ELD is restarted, you will be prompted to either remain in the Yard Move status or exit such a status.

ELD Main Operation Screen

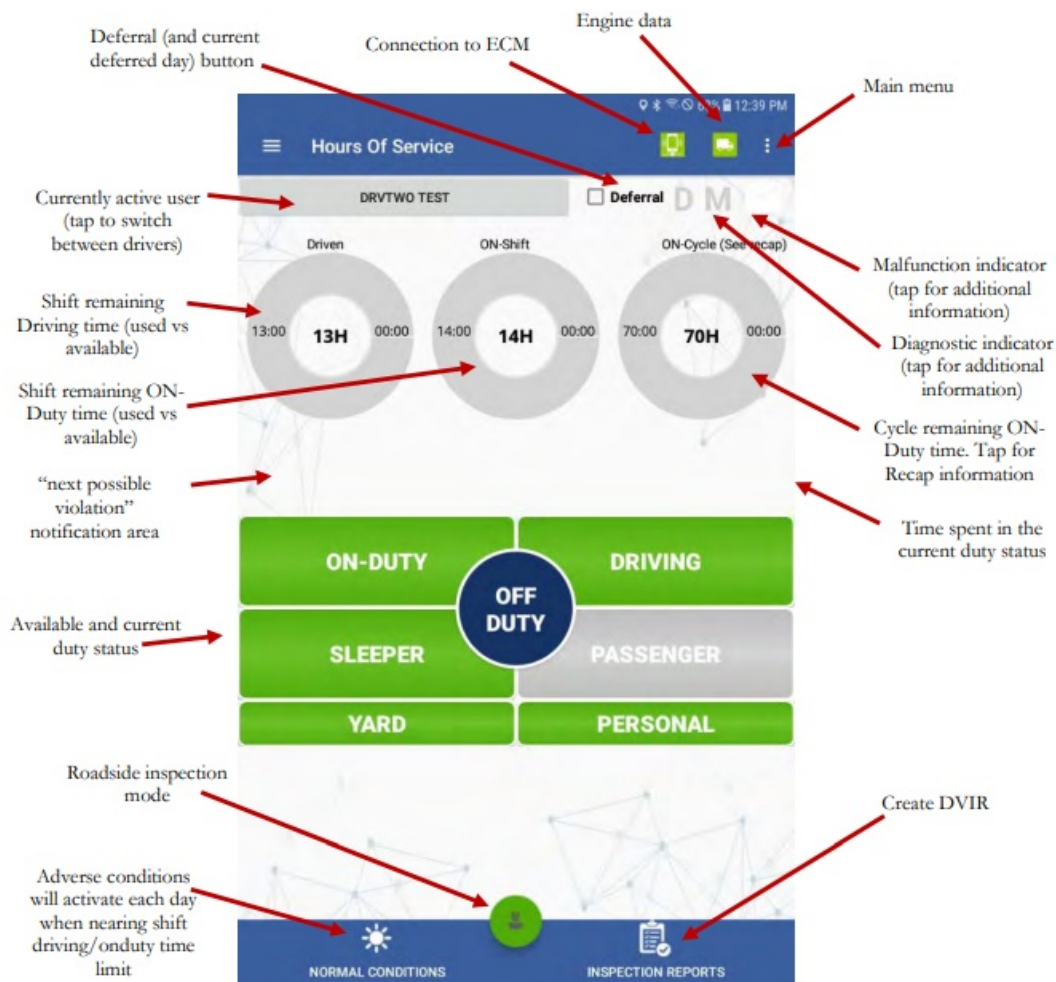

Changing Duty Status


- To change the duty status tap on the desired duty status button. Changing to (and out of) ON-DUTY, YARD, and PERSONAL will prompt you to select a pre-defined remark or enter your remark.
- When coming out of ON-DUTY status, you can input the number of gallons fueled into the vehicle which is required for proper IFTA reporting.

Time Remaining

- The three donuts constantly show the actual time spent on each status (driving, ON-Duty, and cycle ON-Duty).
- The corresponding donut will turn yellow or red to indicate proximity to the time limit.


Recap

- Tap on the "ON-Cycle (see recap)" donut to see how much ON-Duty time will be removed once the 7th or 14th day is reached. The recap summary message also tells you the day and time when the next available recap will take place.
- This information has great value for the driver, so you can plan your weekly cycle and be aware of how much time you will get back each day, after the 7th or 14th day (according to the currently selected ruleset).

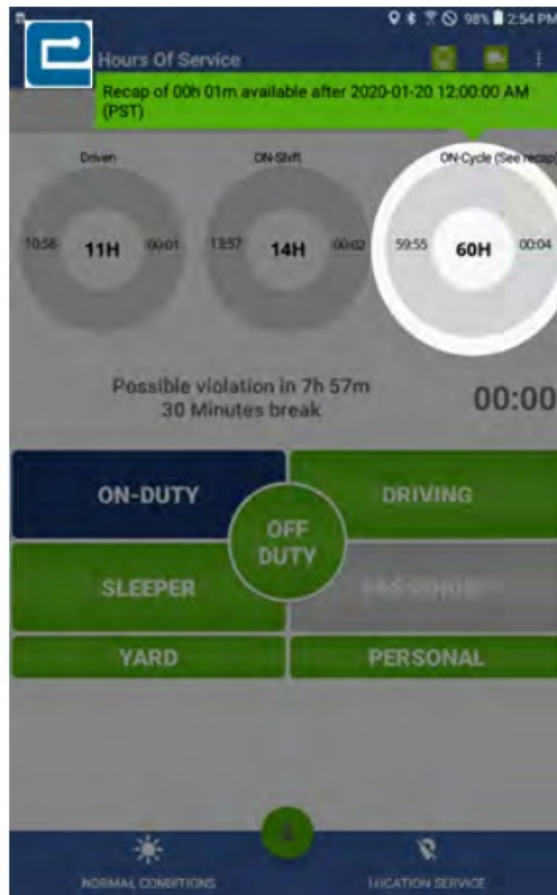


Deferral


- You, as a driver, may split the off-duty time over any two consecutive days by deferring a maximum of two hours of the required daily off-duty time from the first day to the second day and increasing the total driving and on-duty times on the first day by not more than two hours.
- To make use of deferral of daily OFF-Duty time, tap on the Deferral checkbox on the ELD's main screen.
- If you have taken the required 10-hour OFF-Duty time for the current 24-hour period, then no deferral time is needed, and a notification will show you are in such a situation:

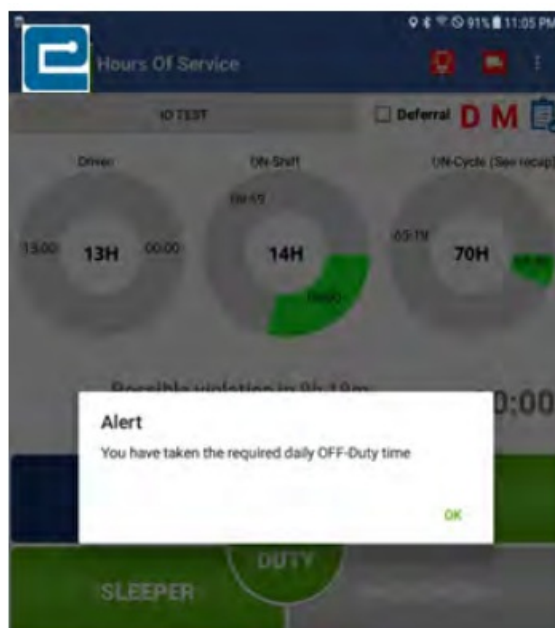

- If you would like to defer time to the next day use the slider to select how much time you would like to defer:

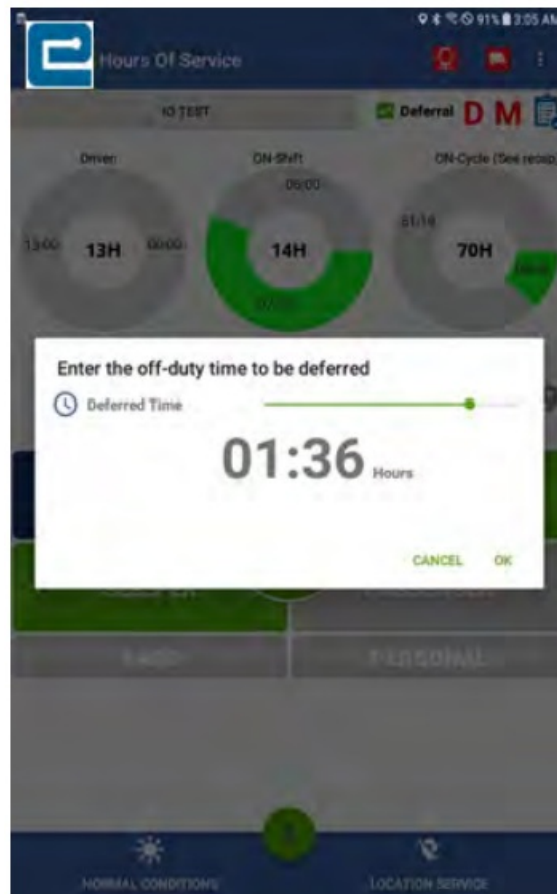

- Once you select how much time you want to defer, you will need to confirm:

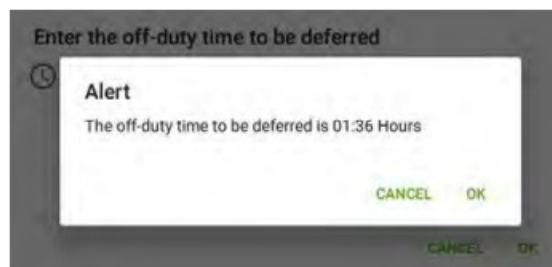

- For the current and the next day, your main ELD screen will show information regarding your deferred time and when OFF-Duty time is fully taken to remain compliant with Hours-of-Service regulations:




Possible Violations

- This area shows the closest possible violation. It also triggers a notification pop-up one hour before the violation and another one thirty minutes before the next possible violation.

Annotations & Remarks

- When changing to (and out of) ON-DUTY, YARD, and PERSONAL duty status, the ELD will show you the pre-defined remarks to simplify the use of the ELD. You can also type your remark:

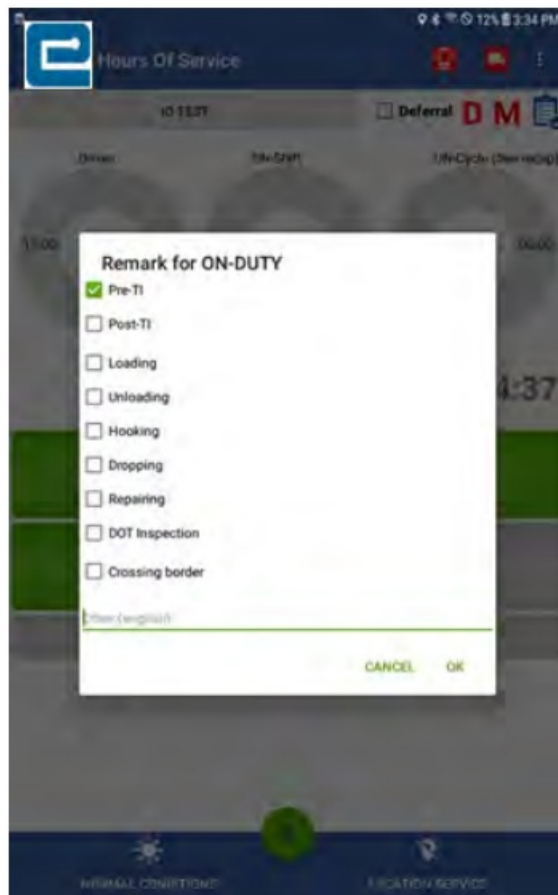

Fuel Purchase Capture (IFTA report)


- Please, enter the number of gallons put in the vehicle (when refueling) for an accurate IFTA report:



Co-Driver Operation (authentication & remarks)

- A co-driver can authenticate by tapping on the currently active driver button (which brings the login screen) or the co-driver can go to the menu and select the Co-Driver Login option.

Roadside Inspection Mode

- If you are stopped on the road, we recommend you enter the Roadside Inspection Mode by tapping on  the button.
- This mode allows you to export the Printout/Display document as well as exporting the ELD data file:



Certifying your records and Log Edits


- Every duty status change must be certified before exporting the driver's logs. Select the "Certify Logs" option from the menu to list all unverified logs. Select each day and tap on the "Certify" button.
- At the end of each 24 hours, the ELD will automatically prompt the driver to certify logs for the last 24 hours period. During the driver log in and logout, the driver will be prompted to certify the logs.

 



- You can also certify your logs at any time by going to the main menu and selecting Certify Logs. Select the day or days you would like to certify:




- Select the 24-hour period you want to certify then tap on the CERTIFY button.
- You need to agree to the statement.
- To view your Logbook, edit your logs, or export the Logs/ELD data file, go to the “Logbook” option in the menu.

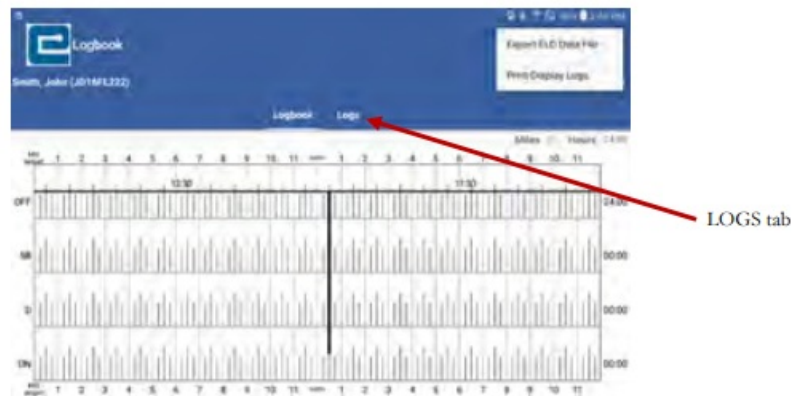

- You can move to a different day by selecting the left and right arrows: 
- The Logbook tab shows the logbook for the selected day and the Logs tab has a list with all the logs for that day, where you can edit an existing log.
- You can use the mobile device's swipe option to move between the Logbook and the Logs tabs:

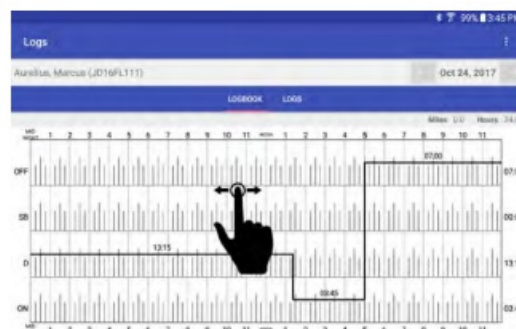

- **Adding, deleting and editing an existing record (log):** On the LOGS tab select the edit icon. Make the necessary changes, input the mandatory remark explaining the reason for the change, and then Confirm the Changes.
- Remember, driving time can only be increased, on automatically recorded records; and deleted, reduced, or increased on manually recorded records! Your ELD must be synchronized to your tractor's ECU (via ECM device).
- Failure to read engine values will make you non-compliant.
- Daily ON-DUTY, cycle ON-DUTY and possible violations will be calculated according to the new record change.

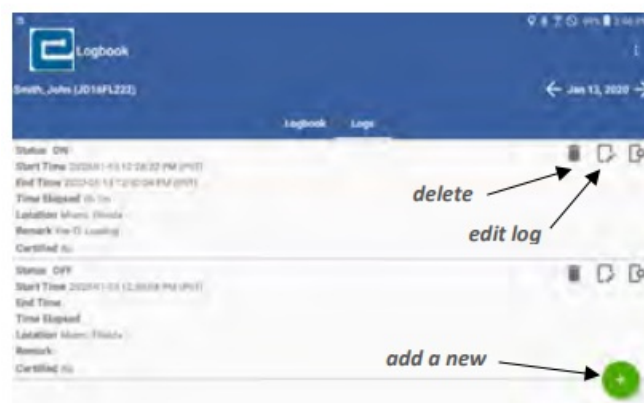

Assumption of Unidentified Logs



- During the login process, you will be prompted to review the existing unidentified logs.
- If the unidentified logs do not belong to you, just tap on SKIP. If some, or all, unidentified logs belong to you select REVIEW LOGS, select the checkbox associated with the logs that belong to you, and assume the logs.
- The carrier can later revert those logs to the unidentified if needed for which you will be asked to confirm.

Motor Carrier Suggestions


- From time to time, the carrier you work with may suggest some changes to your logs.
- You are responsible for assuming or rejecting those suggestions.
- Carrier-proposed edits will show on your ELD at different times. They will show during the login and logout process and they will also be shown as a new ELD message on the main screen:



- Carrier-proposed log edits are shown during the login, logout, and in the message inbox (see image above).

Please make sure:

- You are not driving while attending to carrier-proposed log edits
- You re-certify your ELD records if a carrier-proposed log edit is assumed
- Once you tap on the ELD message button a list of carrier-proposed log changes will be shown:

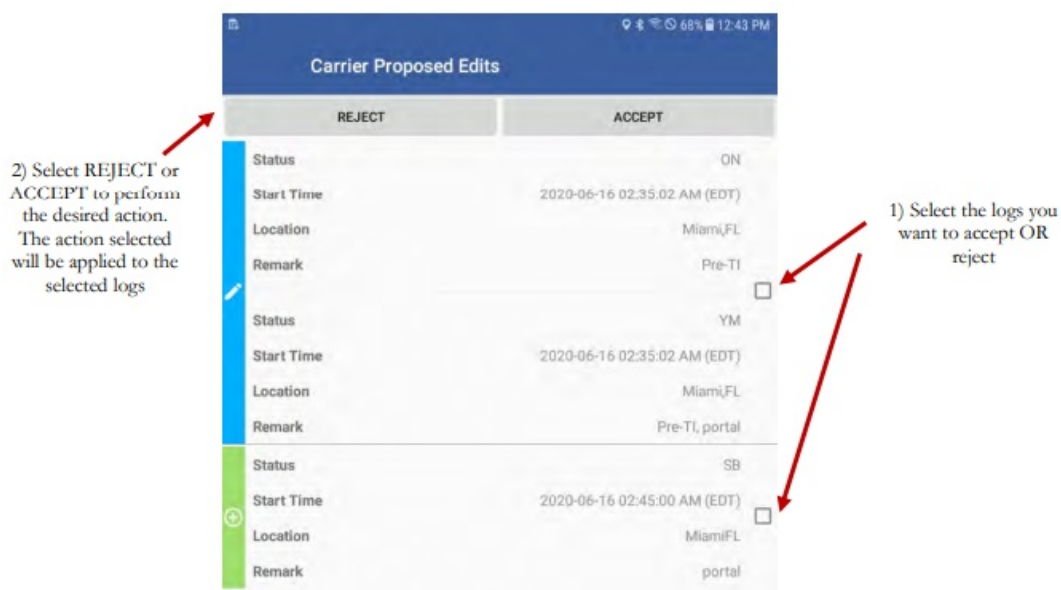

ELD Exports

- The ELD Must be able to share a Printout (or Display) of the Logbook for the current plus the previous 14 days and/or export the ELD output file via email (as a preferred method).

Printout or Display

- You can go to the menu and select Logbook or enter Roadside Inspection mode.
- This is a single-step process.
- Enter the file comment provider by the roadside inspector and tap on PRINT-DISPLAY LOGS



Exporting the ELD output file

The following export methods are supported:

USA

- **Option 1**—Telematics using both: Wireless Web services and Email, Option 2—Local using both: USB2 and Bluetooth.
- To submit the Output File to an authorized safety official, the driver selects the “Export ELD Data File” from the Logbook screen.

The driver, then, will select one of the following methods:

- **Agent External Storage:** The ELD will first verify the external storage device is compatible with FMCSA specifications by validating the contents of the file “ELDUSBTX.TXT”.
- After positive validation, the ELD will save the data file on the FMCSA-provided external storage device.
- **Bluetooth Transfer:** After selecting this option, the authorized safety official will pair and verify the PIN with the driver.
- Once the Bluetooth devices are paired, the safety official's technology equipment will transfer the output file to the FMCSA website using Web services.

- **FMCSA web service:** This option securely communicates to FMCSA's end-point and obtains the submission ID.

Canada

- The ELD must be connected to the ECM and read engine data to export the output file. If engine data is not available, you will see a notification indicating ECM connection is missing:



- There are two different ways to export the output file, you can share (tap on SHARE) the output file with a third party, or you can email the output file to a government agency.
- In both cases, enter the file comment provided by the roadside inspector and tap on AGENT.



ELD general messages and notifications

- Some notifications are shown while operating the ELD. Some of them are errors, warnings, or just specific information regarding an operational change. These are the most common notifications:

During authentication:

- You are logged on a different device: A driver can only use credentials to log in to one ELD. The same driver account cannot be used on multiple ELDs.
- If you lost your ELD while authenticated, contact your company and ask them to Unlock your account.


- You will be able to log in after your account is unlocked.
- Wrong authentication: Make sure your Username and Password are correct. Also, make sure you have internet access and good upload/download speed.
- **Downloading _____ (e.g. shipments, events, violations, etcetera) error** : Make sure you have internet access and good upload/download speed.
- Unidentified Driving: Once the vehicle, to which the ELD is connected, begins moving a Driving event is created.
- The ELD will show a visual and audible notification indicating the driver to stop and authenticate on the ELD.
- The driver could continue to the destination, authenticate later on, and review/accept unidentified events.



- **Logs Certification:** At the beginning of every 24 hours, the ELD shows a notification to the driver asking to certify the logs for the previous day or past days.
- You can select not to certify your logs (yet), certify the previous 24-hour period or all pending logs.



- Once you are ready to certify your logs, please agree to the following statement

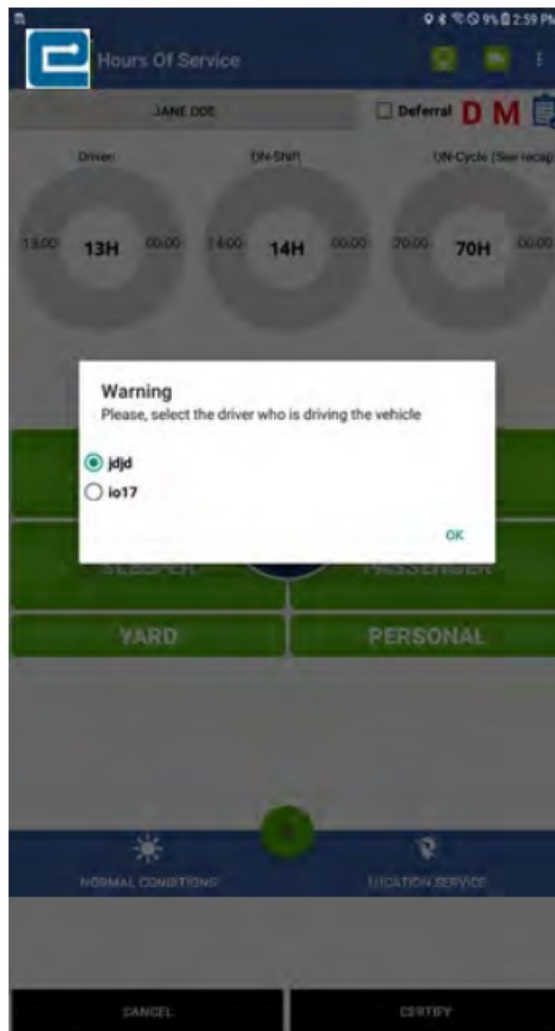

- **Automatic Driving status with multiple drivers authenticated:** If the vehicle moves, there is more than one driver authenticated on the ELD and no driver is on.
- Driving duty status; the ELD shows an audible and visual notification prompting drivers to select the driver currently operating the vehicle.
- Carrier-proposed log edits: If the carrier's back-office personnel propose a change to the driver's logs, a notification is shown on the ELD. The driver can assume or reject the carrier-proposed edits during login, logout or by tapping on the new message icon.

Notification of carrier-proposed edits during normal ELD operation:



ELD Diagnostics and Malfunctions (Resolution)

DIAGNOSTICS:

1. **Power Data/Compliance Diagnostic** (ECM parameters must be available within 1 minute of powering the vehicle's engine on)
 - **Resolution:** Make sure you are connected to the ECM device. On the menu, go to Scan Devices and select your ECM device. Make sure all engine parameters pass the diagnostics (all green)
2. **Engine Synchronization Data Diagnostic** (not all ECM parameters are available when the ELD records an event e.g. duty status change)
 - **Resolution:** Make sure you are connected to the ECM device. On the menu, go to Scan Devices and select your ECM device. Make sure the diagnostic passes all engine parameters (all green)
3. **Missing Required Data Elements** Data Diagnostic (other required data e.g. location, coordinates) not available when recording an event)
 - **Resolution:** Make sure the GPS module is enabled on your ELD
4. **Data Transfer Data Diagnostic** (An ELD must verify this functionality at least once every 7 days)
 - **Resolution:** Verify that you have an active cellular or wifi connection all the time. Confirm that your logs are always updated on the ELD portal
5. **Unidentified Driving Records** Data Diagnostic (more than 30 minutes of driving without a driver logged on the ELD)
 - **Resolution:** You are not logged on the ELD and the vehicle moves for an extended period. Please log in and select your Driving time
6. **Other ELD identified Diagnostic** (ELD provider may implement additional, technology-specific malfunction and data diagnostic detection schemes)
 - **MALFUNCTIONS** (most malfunctions relate to a Diagnostic, but a malfunction is generated when the same diagnostic occurs for at least 30 minutes in the last 24 hours):
 - **P– Power Compliance** (related to diagnostic 1)
 - **E– Engine Synchronization Compliance** (related to diagnostic 2, for instance, multiple periods of no ECM data that, when added together are more than 30 minutes in the last 24 hours)
 - **T– Timing Compliance** (the time on the ELD, compared to an external time source different)
 - **Resolution:** Make sure the date and time on your mobile device are properly set. DO NOT (manually) change the date or the time on your ELD
 - **L- Positioning** Compliance (no location available, (related to diagnostic 1)
 - **R- Data Recording** Compliance (monitor storage capability to store records)
 - **Resolution:** Make sure you have sufficient internal storage on your ELD. Delete files if necessary
 - **S- Data Transfer** Compliance (ELD records not able to be uploaded)
 - **Resolution:** You probably don't have internet access. Restart the ELD (if needed) and confirm you reconnect to the network
 - **Driver Vehicle Inspection Reports (DVIR)**

Select the DVIR button on the main screen. Tap on the + button (bottom of the screen) to select the applicable region (USA, Canada Schedule 1, or Canada Quebec).
 - Additional options are available for Quebec compliance: heavy vehicle, bus, and motor coach.



- A compliant checklist is shown. Select any defect you might have found during your vehicle and trailer inspections.
- On the last step enter a remark and indicate if the defects were corrected or not.
- select the item with defects and tap on NEXT

- We have separated items under the C-TPAT 17 agreement to help you reduce border delays (if applicable) and

minimize risks.

- Check all. Minor and major, defects accordingly. Take pictures of defects which are uploaded to the ELD portal and could be shared later on.

On the last step, enter the remark and sign the inspection report:



- If defects are found and corrected, you can ask the mechanic for a signature.
- There is a third, optional signature which some carriers require before a vehicle leaves the yard.
- You can take up to 9 different pictures. Once you are done select Upload.

Shipments (connecting to brokers, shippers, receivers & carriers)

- Addressing two of the biggest complaints from drivers using an ELD
- The new Shipment Sync feature, implemented on app release 133, targets those specific needs by allowing drivers, motor carriers, brokers, shippers, and receivers to be connected and share shipment information in real-time.
- Shippers and receivers can confirm the exact arrival time, the bay number assigned to the driver, safe parking instructions, and additional notes.
- This information is shared (instantly) with drivers, allowing them to better plan their routes, and rest times and minimize dock waiting time.

The next page shows a general overview of Shipment Sync:

Shipment

Est. pickup date: 2020-10-21

Est. pickup time: 13:07

Est. delivery date: 2020-10-21

Est. delivery time: 14:07

Shipper

Number

Commodity

Additional comments (optional)

- First, you need to create the shipment (see image above). Once the shipment is uploaded to the ELD portal, the carrier can share the shipment with brokers, shippers, and receivers.
- On the new Shipments tab (online portal), motor carrier personnel can see all shipments created by drivers. A pop-up window is displayed once the Details link is clicked.
- The motor carrier can share these ETAs with the broker and pickup/delivery warehouses.
- To do so, the motor carrier just needs to input the email address of every entity they want to share the shipment information with and save the shipment.

Shipment Details

Shipper

Time: 13:07 AM

Email: shipper@entity.com

Bay Assignment: 12

Recommended parking:

Notes:

Receiver

Time: 14:07 AM

Email: receiver@entity.com


Bay Assignment: 12

Recommended parking: Off exit 349 behind Truck Stop

Notes: Call Johny at 8:15AM

Save Close

- Once the shipment is saved on the ELD portal an email (from domain: shipment-sync.com) is sent to each destination.
- Shippers and receivers (independently) can input the specific warehouse arrival, bay number, safe parking information, and additional notes.
- Information about the motor carrier, driver's first and last name, shipping document, and last known location is shown on the left pane.
- The last known location is updated every time the page is loaded.

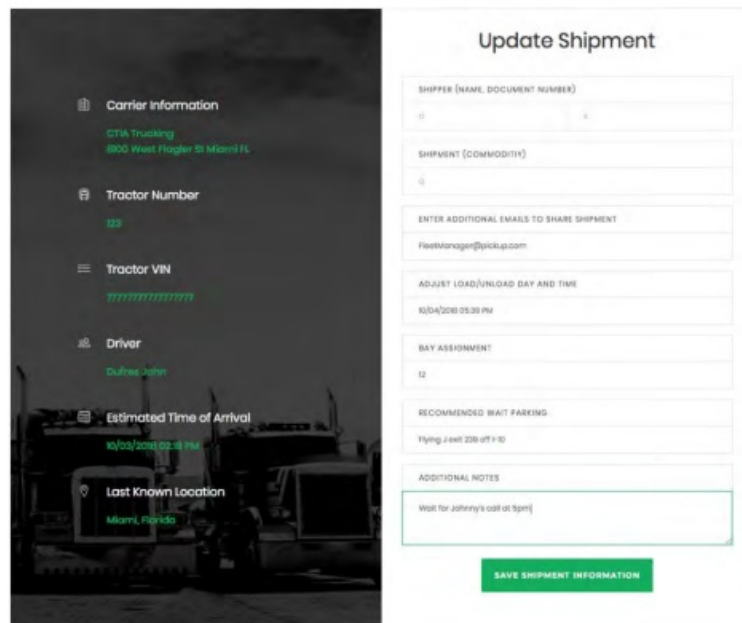


The image shows two side-by-side screenshots from an ELD application. The left screenshot displays a dark-themed menu with the following items: Carrier Information (CTA Trucking, 800 West Flagler St Miami FL), Tractor Number (123), Tractor VIN (7777777777777777), Driver (Gulrez John), Estimated Time of Arrival (10/04/2018 02:38 PM), and Last Known Location (Miami, Florida). The right screenshot shows a white 'Update Shipment' form with fields for: SHIPPER (NAME, DOCUMENT NUMBER) (12, 1), SHIPMENT (COMMODITY) (1), ENTER ADDITIONAL EMAILS TO SHARE SHIPMENT (FleetManager@pickup.com), ADJUST LOAD/UNLOAD DAY AND TIME (10/04/2018 05:38 PM), BAY ASSIGNMENT (12), RECOMMENDED WAIT PARKING (Flying 2 exit 22B off I-10), and ADDITIONAL NOTES (Wait for Johnny's call at 5pm). A green 'SAVE SHIPMENT INFORMATION' button is at the bottom.

- Once the shipment information is saved, an instant notification is sent to the driver including all the details added by the pickup/delivery personnel, keeping the driver updated at all times.

New Help and Support menu option

- There is a new option added to the app menu called “Help & Support”. That option is a link to our most up-to-date ELD support information. On that page, users will find a variety of topics that will help with the daily operation of the ELD.

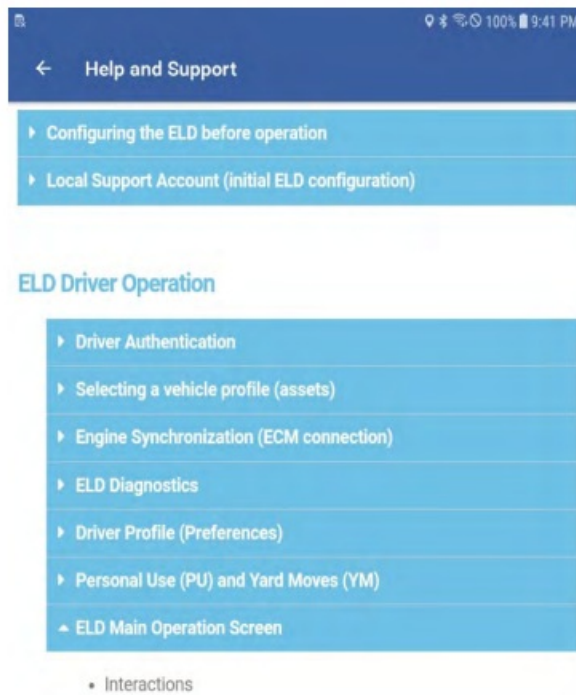

New Help and Support menu option

- There is a new option added to the app menu called “Help & Support”.
- That option is a link to our most up-to-date ELD support information.
- On that page, users will find a variety of topics that will help with the daily operation of the ELD.
- eldmandate.biz
- 3158 Redhill Ave Suite 100, Costa Mesa, CA 92626
- Phone 9493835333
- Email supportdesk@eldmandate.biz

Documents / Resources



[ELDMandate Electronic Logging Devices](#) [pdf] User Guide

Electronic Logging Devices, Electronic, Logging Devices, Devices

References

- [Best Electronic Logging Devices for sale in United States and Canada](#)
- [Sync | Secure Cloud Storage, File Sharing and Document Collaboration](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.