



eldom C255C Cordless Kettle Instruction Manual

[Home](#) » [ELDOM](#) » eldom C255C Cordless Kettle Instruction Manual 

Contents

- 1 eldom C255C Cordless Kettle
- 2 GENERAL DESCRIPTION
- 3 TECHNICAL DATA
- 4 INTENDED USE
- 5 OPERATION
- 6 FILTER
- 7 CLEANING AND MAINTENANCE
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



eldom C255C Cordless Kettle



Eldom Sp. z o.o. • ul. Pawła Chromika 5a • 40-238 Katowice, POLAND tel: +48 32 2553340 • fax: +48 32 2530412
• www.eldom.eu

The disposal of used electrical and electronic equipment (applies to European Union countries and other European countries with separate waste-collection systems).

This symbol on the product or its packaging indicates that it should not be classified as household waste. It should be handed over to an appropriate company dealing with the collection and recycling of electrical and electronic equipment. The correct disposal of the product will prevent potential negative consequences for the environment and human health resulting from hazardous substances present in the product. Electrical devices must be handed over to restrict their re-use and further treatment. If the device contains batteries, remove them, and hand them over to a storage point separately. DO NOT THROW EQUIPMENT INTO THE MUNICIPAL WASTE BIN. Material recycling helps to preserve natural resources. For detailed information on how to recycle this product, please contact your local authority, the recycling company, or the shop where you bought it.

GENERAL DESCRIPTION



1. Spout +filter
2. Opening lid
3. Lid release button
4. Handle
5. On/off switch + control lamp
6. Rotating base

TECHNICAL DATA

- power: 1500-1800W
- mains voltage: 220-240V ~ 50-60Hz
- 1.7 litre capacity

INTENDED USE

Cordless kettle C 255 C is for boiling water. It is possible to boil 0.5 – 1.7 litre of water in the kettle.

OPERATION

- The kettle base (6) must be put on a flat and dry surface.
- In the base there is some space for an excess cord.
- It is important for the cord to be led from the base (6) through a special groove so that the appliance could be stable.

Before using the kettle for the first time fill it up (2-3 times) with water, boil the water and then empty the kettle.

- The kettle can be filled with water directly through the spout (1) or after opening the lid (2).
- In order to open the lid (2) you must use the button (3).

The kettle must not be filled up when on the base .

- The highest (max) and lowest (min) permissible water level is shown inside the kettle.
- The kettle starts working after putting the switch (5).
- The kettle working is signalled by the control lamp (5).
- The kettle switches off automatically after the water has boiled.
- The device may be interrupted at any time by switching off the device (5).


FILTER

The filter does not remove the scale, but it prevents any deposits from getting inside the kettle while the water is being poured in. The filter should be cleaned regularly. Hard water may block the filter after boiling water a couple of times.

CLEANING AND MAINTENANCE

- Allow the unit to cool down completely before cleaning.
- Do not immerse the kettle in water while washing up.
- The outside of the kettle may be wiped over with a damp cloth and washing-up liquid,
- Water stains inside the kettle can be removed by rubbing with a cloth moisten with white vinegar; rinse the inside with water afterwards.
- Limescale should be removed in the following way:
 - Fill the kettle with 0.75 litre of water and bring it to boil.
 - Switch the kettle off and disconnect the kettle from the power supply.
 - Pour 0.1l of vinegar into a jug and leave the solution for a few hours.
 - Discard the solution and rinse the inside with water.
 - Fill the kettle with 1 litre of water and bring to boil.
 - Discard the water and rinse the inside with water

Documents / Resources

| | |
|---|---|
|  | <p>eldom C255C Cordless Kettle [pdf] Instruction Manual C255C Cordless Kettle, C255C, Cordless Kettle, Kettle</p> |
|---|---|

References

-  [ELDOM - Sprzęt AGD dostosowany do Twoich potrzeb](#)