



## eldom C400C Cordless Kettle Instruction Manual

[Home](#) » [ELDOM](#) » eldom C400C Cordless Kettle Instruction Manual 



glassy  
C400C C400S



**Eldon Sp. z o.o.**  
ul. Pawła Chromika 5a  
40-238 Katowice, POLAND  
tel: +48 32 2553340  
fax: +48 32 2530412  
[www.eldom.eu](http://www.eldom.eu)



**The disposal of used electrical and electronic equipment (applies to European Union countries and other European countries with separate waste-collection systems).**

This symbol on the product or its packaging indicates that it should not be classified as household waste. It should be handed over to an appropriate company dealing with the collection and recycling of electrical and electronic equipment. The correct disposal of the product will prevent potential negative consequences for the environment and human health resulting from hazardous substances present in the product. Electrical devices must be handed over to restrict their re-use and further treatment. If the device contains batteries, remove them, and hand them over to a storage point separately. **DO NOT THROW EQUIPMENT INTO THE MUNICIPAL WASTE BIN.** Material recycling helps to preserve natural resources. For detailed information on how to recycle this product, please contact your local authority, the recycling company, or the shop where you bought it.

## Contents

- 1 SAFETY INSTRUCTIONS**
- 2 OPERATING INSTRUCTION**
- 3 TECHNICAL DATA**
- 4 CLEANING AND MAINTENANCE**
- 5 ENVIRONMENTAL PROTECTION**
- 6 Documents / Resources**
  - 6.1 References**
- 7 Related Posts**

## SAFETY INSTRUCTIONS

Carefully read all instructions before using the appliance.

1. Connect the kettle only to a suitably earthed socket compatible with the parameters indicated in the instructions.
2. The appliance should be placed on a stable and dry surface.
3. Before operating, make sure that there is water inside the kettle. You should not switch the kettle on when empty.
4. You must not exceed the maximum water level mark.  
Filling over the maximum mark on the exterior of the kettle may result in the boiling water splashing out from the kettle (which may result in a short circuit).
5. The device can be used by children aged 8 and older and by persons with limited physical, sensory or mental capabilities, or persons without sufficient experience and knowledge only under supervision or if previously instructed on the safe use of the appliance and the possible risks. Children shall not play with the appliance. Cleaning and maintenance that are the responsibility of the user shall not be carried out by children without supervision. Protect the appliance and the power cord from children under 8 years old.
6. Do not leave the kettle unattended when in use, when plugged in, or containing hot water, the kettle may expose children to hazards, if left unattended.
7. Never immerse the kettle in the water while washing up.
8. You should be cautious about the steam coming from the kettle during the heating process.
9. This appliance is designed for domestic use only; when used for industrial purposes outside the product's specifications, or used not in accordance with the instructions, no liability is assumed and the warranty is nullified.
10. Do not use the appliance, if the power cord is damaged or if the appliance fell down or was otherwise damaged. The appliance should be repaired by an authorized Service Centre; a list of Service Centres can be found in the attachment and on the website [www.seldom.eu](http://www.seldom.eu).
11. The appliance can be repaired only in an authorized Service Centre. Any modernization or application of spare parts or elements other than the original ones is forbidden and dangerous for the user.
12. The company Eldon Sp. z o.o. shall not be liable for any damage caused by inappropriate use of the appliance.
13. This kettle must be used with the power base supplied.

**WARNING: Plastic bags can be dangerous, to avoid the danger of suffocation keep these bags away from babies and children.**

## OPERATING INSTRUCTION

### CORDLESS KETTLE C400

#### GENERAL DESCRIPTION

1. Spout
2. Lid
3. Lid release switch
4. Handle

5. On/off switch
6. Water level indicator
7. Base



## TECHNICAL DATA

- power: 2000W
- mains voltage: 230V ~50Hz
- 1.5-liter capacity

Cordless kettle **C400** is for boiling water. It is possible to boil 0.5 – 1.5 litre of water in the kettle.

The kettle base (7) must be put on a flat and dry surface. In the base, there is some space for an excess cord. It is important for the cord to be led from the base (7) through a special groove so that the appliance could be stable.

Before using the kettle for the first time fill it up (2-3 times) with water, boil the water and then empty the kettle.

The kettle can be filled with water directly through the spout (1) or after opening the lid (2). In order to open the lid (2), you must press the button (3). The lid should be closed by pressing until you hear it snap. The kettle must not be filled up when on the base. The minimum level of boiling water is 0.5 l. The maximum water level (1.5 l) is marked on the indicator (6). The kettle starts working after putting the switch (5) in the position 'I'. The kettle working is signalled by the control lamp. The kettle switches off automatically after the water has boiled. You can stop heating water at any time by putting the switch (5) in the position '0'.

## CLEANING AND MAINTENANCE

- Allow the unit to cool down completely before cleaning.
- Do not immerse the kettle in the water while washing up.
- The outside of the kettle may be wiped over with a damp cloth and washing-up liquid.
- Water stains inside the kettle can be removed by rubbing with a cloth moistened with white vinegar; rinse the inside with water afterwards.

- Limescale should be removed in the following way:
- Fill the kettle with 0.6 litres of water and bring it to a boil.
- Switch the kettle off and disconnect the kettle from the power supply.
- Pour 0.1 litre of white vinegar into the kettle.
- Allow standing overnight.
- Discard the solution and rinse the inside with water.
- Fill the kettle with 1 litre of water and bring to a boil.
- Discard the water and rinse the inside with water. If the scale is persistent, the cleaning should be done in the following way:
- fill the kettle with 0.6 litres of white vinegar.
- Bring the vinegar to boil and leave the hot solution inside the kettle for about 30 minutes.
- Bring the vinegar to boil again.
- Discard the vinegar and rinse the inside with water.
- Fill the kettle with 1.0 litre of water and bring it to a boil.
- Discard the water and rinse the inside with water.
- No timely removal of the scale from the heating element results in the heating element's quicker wear.
- Any damage resulting from applying harsh descaling products available in the market is not covered by the producer's warranty.
- If the power cord is damaged, it can be replaced only by an especially constructed one (with appropriate plugs and endings).

## **FILTER**

The filter provided is made of mesh retaining scale deposits. The filter does not remove the scale, but it prevents any deposits from getting inside the kettle while the water is being poured in. The filter should be cleaned regularly. Hard water may block the filter after boiling water a couple of times. The filter can be removed and rinsed with water or cleaned with a soft brush.

## **ENVIRONMENTAL PROTECTION**


- The appliance is made of materials which can be recycled.
- It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

## **WARRANTY**

- This appliance is designed for domestic use only.
- It cannot be used for professional purposes or for other than the intended use.
- Improper use will nullify the guarantee.



## Documents / Resources

|   |  |
|---|--|
|  | <a href="#">eldom C400C Cordless Kettle</a> [pdf] Instruction Manual<br>C400C Cordless Kettle, C400C, Cordless Kettle, C400S |
|---|--|

## References

-  [ELDOM - Sprzęt AGD dostosowany do Twoich potrzeb](#)