



ELDOM C480C keeti Cordless Kettle Instruction Manual

[Home](#) » [ELDOM](#) » ELDOM C480C keeti Cordless Kettle Instruction Manual 

Contents

- [1 ELDOM C480C keeti Cordless Kettle](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 OPERATING INSTRUCTION](#)
- [4 CLEANING AND MAINTENANCE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



ELDOM C480C keeti Cordless Kettle



The disposal of used electrical and electronic equipment (applies to European Union countries and other European countries with separate waste-collection systems).

This symbol on the product or its packaging indicates that it should not be classified as household waste. It should be handed over to an appropriate company dealing with the collection and recycling of electrical and electronic equipment. The correct disposal of the product will prevent potential negative consequences for the environment and human health resulting from hazardous substances present in the product. Electrical devices must be handed over to restrict their re-use and further treatment. If the device contains batteries, remove them, and hand them over to a storage point separately. **DO NOT THROW EQUIPMENT INTO THE MUNICIPAL WASTE BIN.** Material recycling helps to preserve natural resources. For detailed information on how to recycle this product, please contact your local authority, the recycling company, or the shop where you bought it.

SAFETY INSTRUCTIONS

It is recommended to keep this instructions manual for future reference. Carefully read all instructions before using the appliance.

1. Connect the kettle only to a suitably earthed socket compatible with the parameters indicated in the instructions.
2. The appliance should be placed on a stable and dry surface.
3. Before operating, make sure that there is water inside the kettle. You should not switch the kettle on when empty.
4. You must not exceed the maximum water level mark. Filling over the maximum mark on the exterior of the kettle may result in the boiling water splashing out from the kettle (which may result in a short circuit).
5. The device can be used by children aged 8 and older and by persons with limited physical, sensory or mental capabilities, or persons without sufficient experience and knowledge only under supervision or if previously instructed on the safe use of the appliance and the possible risks. Children shall not play with the appliance. Cleaning and maintenance that are the responsibility of the user shall not be carried out by children without supervision. Protect the appliance and the power cord against children under 8 years old.
6. Do not leave the kettle unattended when in use, when plugged in or containing hot water, the kettle may expose children to hazard, if left unattended.
7. Never immerse the kettle in water while washing up.
8. You should be cautious about the steam coming from the kettle during the heating process.

9. This appliance is designed for domestic use only; when used for industrial purposes outside the product's specifications, or used not in accordance with the instructions, no liability is assumed and the warranty is nullified.
10. Do not use the appliance, if the power cord is damaged or if the appliance fell down or was otherwise damaged. The appliance should be repaired by an authorised Service Centre; a list of Service Centres can be found in the attachment and on the website www.eldom.eu.
11. The appliance can be repaired only in an authorised Service Centre. Any modernisation or application of spare parts or elements other than the original ones is forbidden and dangerous for the user.
12. The company Eldom Sp. z o.o. shall not be liable for any damage caused by inappropriate use of the appliance.
13. This kettle must be used with the power base supplied.

WARNING: Improper use of the appliance may cause injury.

WARNING: Plastic bag can be dangerous, to avoid danger of suffocation keep this bag away from babies and children.

ENVIRONMENTAL PROTECTION

- The appliance is made of materials which can be recycled.
- It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

WARRANTY

- This appliance is designed for domestic use only.
- It cannot be used for professional purposes or for other than the intended use.
- Improper use will nullify the guarantee.

OPERATING INSTRUCTION

CORDLESS KETTLE C480B/C480C



GENERAL DESCRIPTION

1. Spout + net filter
2. Opening lid
3. Lid release handle
4. Handle
5. On/off switch
6. Water level indicator
7. Base
8. Glass body with LED light

TECHNICAL DATA

- power: 1850-2200W
- mains voltage: 220-240V, ~50-60Hz
- 1.7 litre capacity

Cordless kettle C480B/C480C is for boiling water. It is possible to boil 0.5 – 1.7 litre of water in the kettle. The kettle base (7) must be put on a flat and dry surface. In the base there is some space for an excess cord. It is important for the cord to be led from the base (7) through a special groove so that the appliance could be stable. Before using the kettle for the first time fill it up (2-3 times) with water, boil the water and then empty the kettle.

The kettle can be filled with water directly through the spout (1) or after opening the lid (2). In order to open the lid (2) you must press the button (3) (photo 1). The lid should be closed by pressing until you hear it snapp. The kettle must not be filled up when on the base. The minimum level of boiling water is 0.5 l. The maximum water level (1.7 l) is marked on the indicator (6). The kettle starts working after putting the switch (5) in the position 'I'. Operation of the device is indicated by illumination of the tank (8). The kettle switches off automatically after the water has boiled. You can stop heating water at any time by putting the switch (5) in the position '0'.

CLEANING AND MAINTENANCE

- Allow the unit to cool down completely before cleaning.
- Do not immerse the kettle in water while washing up.
- The outside of the kettle may be wiped over with a damp cloth and washing-up liquid.
- Water stains inside the kettle can be removed by rubbing with a cloth moisten with white vinegar; rinse the inside with water afterwards.
- Limescale should be removed in the following way:
- Fill the kettle with 0.5 litre of water and bring it to boil.
- Switch the kettle off and disconnect the kettle from the power supply.
- Pour 0.1 litre of white vinegar into the kettle.
- Allow to stand overnight.
- Discard the solution and rinse the inside with water.
- Fill the kettle with 1 litre of water and bring to boil.
- Discard the water and rinse the inside with water.

If the scale is persistent, the cleaning should be done in the following way:

- fill the kettle with 0.5 litre of white vinegar.
- Bring the vinegar to boil and leave the hot solution inside the kettle for about 30 minutes.
- Bring the vinegar to boil again.
- Discard the vinegar and rinse the inside with water.
- Fill the kettle with 1.0 litre of water and bring it to boil.
- Discard the water and rinse the inside with water.
- No timely removal of the scale from the heating element results in the heating element's quicker wear.
- Any damage resulting from applying harsh descaling products available in the market are not covered by the producer's warranty.
- If the power cord is damaged, it can be replaced only by an especially constructed one (with appropriate plugs and endings).

FILTER



The filter provided is made of mesh retaining scale deposits. The filter does not remove the scale, but it prevents any deposits from getting inside the kettle while the water is being poured in. The filter should be cleaned regularly. Hard water may block the filter after boiling water a couple of times. The filter can be removed and rinsed with water or cleaned with a soft brush.

Eldom Sp. z o.o. • ul. Pawła Chromika 5a • 40-238 Katowice, POLAND tel: +48 32 2553340 • fax: +48 32 2530412
• www.eldom.eu

Documents / Resources

	<p>ELDOM C480C keeti Cordless Kettle [pdf] Instruction Manual C480B, C480C, keeti Cordless Kettle, C480C keeti Cordless Kettle, Cordless Kettle, Kettle</p>
---	---

References

-  [ELDOM - Sprzęt AGD dostosowany do Twoich potrzeb](#)
-  [ELDOM - Sprzęt AGD dostosowany do Twoich potrzeb](#)

Manuals+.