



eldom neev C290C Cordless Kettle User Manual

[Home](#) » [ELDOM](#) » eldom neev C290C Cordless Kettle User Manual 

eldom neev C290C Cordless Kettle User Manual



The disposal of used electrical and electronic equipment (applies to European Union countries and other European countries with separatewaste-collection systems).

This symbol on the product or its packaging indicates that it should not be classified as household waste. It should be handed over to an appropriate company dealing with the collection and recycling of electrical and electronic equipment. The correct disposal of the product will prevent potential negative consequences for the environment and human health resulting from hazardous substances present in the product. Electrical devices must be handed over to restrict their re-use and further treatment. If the device contains batteries, remove them, and hand them over to a storage point separately. **DO NOT THROW EQUIPMENT INTO THE MUNICIPAL WASTE BIN.** Material recycling helps to preserve natural resources. For detailed information on how to recycle this product, please contact your local authority, the recycling company, or the shop where you bought it.

Contents

- 1 SAFETY INSTRUCTIONS
- 2 GENERAL DESCRIPTION
- 3 INTENDED USE
- 4 OPERATION
- 5 FILTER
- 6 CLEANING AND MAINTENANCE
- 7 TECHNICAL DATA
- 8 ENVIRONMENTAL PROTECTION
- 9 WARRANTY
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

SAFETY INSTRUCTIONS

Before first use, please thoroughly read the entire manual. It is recommended to keep this instructions manual for future reference.

1. The connection cable of the power supply cradle must be connected to a socket equipped with a protective pin as specified in the instructions.
2. The appliance must always be disconnected from the mains by pulling the plug and not the power cord.
3. Care should be taken not to include too many appliances in one current circuit.
4. Do not use outdoors.
5. Do not place the appliance near heat sources.
6. Place the unit on a stable and dry surface.
7. Make sure there is water in the kettle before switching it on. Do not start the kettle without water.
8. Do not pour above the maximum level on the kettle indicator. If the kettle is overfilled, there is a risk of uncontrolled outflow of hot water to the outside (risk of flooding the electrical connections and short-circuiting).
9. Switch off the appliance from the mains when it is no longer in use and before cleaning.
10. Do not move or shift during use.
11. Do not fill the jug placed on the base.
12. This equipment may be used by children of at least 8 years of age and by persons with reduced physical and mental capabilities and persons with inexperience and lack of knowledge of the equipment, if supervision or instruction is provided on how to use the equipment in a safe manner so that the associated risks are understood. Children should not play with the equipment. Unsupervised children should not carry out cleaning or maintenance of the equipment.
13. Do not leave the equipment unattended.
14. A kettle plugged in or containing hot water left unattended can be dangerous to children.
15. Do not handle the appliance with wet hands.
16. Do not immerse the kettle in water when washing.
17. The kettle may only be used with the original base attached.
18. Beware of hot steam coming out of the jug during cooking.
19. Equipment for domestic use only, in the event of industrial operation, not in accordance with the intended use or contrary to these instructions, the seller will not accept any responsibility and warranty rights will lapse.

20. If the power cord becomes damaged, it must be replaced at the Manufacturer's Service Centre to prevent danger. List of services in the appendix and at www.eldom.eu.
21. Repairs to the equipment may only be carried out by an authorised service centre. Any modernisation or use of other than original spare parts or components of the appliance is forbidden and endangers the safety of use.
22. Eldom Sp. z o. o. Company shall not be held liable for any damage resulting from improper use of the device.

WARNING: Improper use of the appliance may cause injury

WARNING: Plastic bag can be dangerous, to avoid danger of suffocation keep this bag away from babies and children.

GENERAL DESCRIPTION



1. Spout
2. Opening lid
3. Lid release button
4. On/off switch
5. Handle
6. Control lamp
7. Rotating base

INTENDED USE

Cordless kettle C290 is for boiling water. It is possible to boil 0.5 – 1.7 litre of water in the kettle.

OPERATION

- The kettle base (7) must be put on a flat and dry surface.
- In the base there is some space for an excess cord. It is important for the cord to be led from the base (7) through a special groove so that the appliance could be stable.

Before using the kettle for the first time fill it up (2-3 times) with water, boil the water and then empty the kettle.

- The kettle can be filled with water directly through the spout (1) or after opening the lid (2).
- In order to open the lid (2) you must use the button (3).

The kettle must not be filled up when on the base.

- The highest (max) and lowest (min) permissible water level is shown inside the kettle.
- The kettle starts working after putting the switch (4).
- The kettle working is signalled by the control lamp (6).
- The kettle switches off automatically after the water has boiled.

FILTER

The filter does not remove the scale, but it prevents any deposits from getting inside the kettle while the water is being poured in. The filter should be cleaned regularly. Hard water may block the filter after boiling water a couple of times.

CLEANING AND MAINTENANCE

- Allow the unit to cool down completely before cleaning.
- Do not immerse the kettle in water while washing up.
- The outside of the kettle may be wiped over with a damp cloth and washing-up liquid,
- Water stains inside the kettle can be removed by rubbing with a cloth moisten with white vinegar; rinse the inside with water afterwards.
- Limescale should be removed in the following way:
 - Fill the kettle with 0.75 litre of water and bring it to boil.
 - Switch the kettle off and disconnect the kettle from the power supply.
 - Pour 0.1l of vinegar into a jug and leave the solution for a few hours.
 - Discard the solution and rinse the inside with water.
 - Fill the kettle with 1 litre of water and bring to boil.
 - Discard the water and rinse the inside with water.

TECHNICAL DATA

- power: 1850-2200W
- mains voltage: 220-240V ~ 50/60Hz
- 1.7 litre capacity

ENVIRONMENTAL PROTECTION

- The appliance is made of materials which can be recycled.
- It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

WARRANTY

- This appliance is designed for domestic use only.
- It cannot be used for professional purposes or for other than the intended use.
- Improper use will nullify the guarantee.

Eldom Sp. z o.o.

ul. Pawła Chromika 5a
40-238 Katowice, POLAND

tel: +48 32 2553340

fax: +48 32 2530412

www.eldom.eu



Documents / Resources

	<p>eldom neev C290C Cordless Kettle [pdf] User Manual C290C, neev C290S, neev C290C Cordless Kettle, Cordless Kettle, Kettle</p>
---	--

References

-  [ELDOM - Sprzęt AGD dostosowany do Twoich potrzeb](#)