



ELECOM PM-A24ANEST-PM-A24CNEST iPhone Case Instruction Manual

July 2,
2025

Contents [[hide](#)]

- [1 PM-A24ANEST-PM-A24CNEST iPhone Case](#)
- [2 Product Specifications:](#)
- [3 Product Usage Instructions:](#)
 - [3.1 Installation:](#)
 - [3.2 How to Use the Holder:](#)
 - [3.3 How to Attach the Holder:](#)
 - [3.4 How to Use the Finger Belt:](#)
 - [3.5 Precautions:](#)
- [4 Frequently Asked Questions \(FAQ\):](#)
 - [4.1 Q: Does this product support wireless charging?](#)
 - [4.2 Q: Can I use this case with devices other than iPhones?](#)
 - [4.3 Documents / Resources](#)
 - [4.3.1 References](#)

PM-A24ANEST-PM-A24CNEST iPhone Case

“

Product Specifications:

- Model: PM-A24ANEST_PM-A24CNEST
 - Contents: Cases, Dedicated holder
 - Materials:
 - Cases: TPU (Thermoplastic polyurethane), Polycarbonate, Zinc alloy
 - Holder: Polycarbonate, PVC, Nylon
-

Product Usage Instructions:

Installation:

1. Turn off the power on your device and wipe off any dust with a dry cloth.
2. Place your device into the product.
3. Pull the belt in the direction indicated by the arrow and affix it to the fastener tightly and securely.

How to Use the Holder:

- Put the lower part of the case into the holder and push the top part in. Ensure the holder grips onto the case securely.
- Push the holder clip to easily take out the case.
- For added security, use a commercially sold strap to connect the case and the holder.

How to Attach the Holder:

1. Attach the anti-slip component to the shoulder strap of a backpack.
2. Pull the belt through the hole on the holder from over the shoulder strap on the backpack.

How to Use the Finger Belt:

- Push the strap part upwards to lift the finger belt to put your finger through.
- Lifting the finger belt to a certain position will lock it in place, and it can be used as a stand.

Precautions:

- Avoid leaving any dust or dirt between your device and the case to prevent scratches.
- Do not forcibly pull the silicone case to avoid damage.
- Remove the case before charging or using supported chargers if they do not work while the case is on your device.
- Avoid exposing the product to high temperatures, humidity, and direct sunlight to prevent deformation or deterioration.
- Stop using the product immediately if you notice any damage such as cracks, deformation, or deterioration.
- Avoid using alcohol-based agents or rough cloths to clean the product.
- Keep out of reach of children and do not use with non-supported devices.

Frequently Asked Questions (FAQ):

Q: Does this product support wireless charging?

A: No, this product does not support wireless charging.

Q: Can I use this case with devices other than iPhones?

A: The manufacturer recommends using this case only with supported devices for proper fit and protection.

[View Fullscreen](#)



Model: PM-A24ANEST_PM-A24CNEST

ENGLISH

Manual

iPhone Case

How to install

[Precautions] * To protect your device from scratches, avoid leaving any dust or dirt between your device and the case. * Be careful to not drop your device while you

are putting the

case on it. * Do not pull the silicone case forcibly as it may result in damage to the product.

Turn off the power on your device and wipe off any dust with a dry cloth.

Place your device into the product.

Pull the belt in the direction indicated by the arrow and affix it to the fastener tightly and securely.

Fabric fastener

Belt Shoulder strap

How to use the holder

Put the lower part of the case into the holder and push the top part in. Check that the holder is gripping onto the case securely. * The case can also be attached from the back. * The case may fall out with aggressive shaking or heavy impact.

Push the holder clip to easily take out the case.

Holder clip

Use a commercially sold strap to connect the case and the holder for more security.

Gently pull the upper part of the silicone case to cover your device.

The holder can be rotated 360° while attached to the shoulder strap. Rotating

* The image is for representation purposes only.

How to attach the holder

Attach the anti-slip component to the shoulder strap of a backpack.

Anti-slip component

Shoulder strap

Pull the belt through the hole on the holder from over the shoulder strap on the backpack.

Hole

Belt Shoulder strap

Shoulder strap

How to use the finger belt

Push the strap part upwards to lift the finger belt to put your finger through.

Push

Finger belt Strap part

Lifting the finger belt to a certain position will lock it in place and it can be used as a stand.

Product specifications

Contents Materials

Cases, Dedicated holder Cases : TPU (Thermoplastic polyurethane), Polycarbonate, Zinc alloy Holder : Polycarbonate, PVC, Nylon

Precautions

Sometimes, charging using cable or using supported chargers may not work while the case is on your device. In this circumstance, remove the case.

This product does not support wireless charging.

This product does not completely prevent scratches and dirt on your device.

This product does not provide your device complete protection against vibration or shock.

Please be aware that we accept no responsibility for any loss, breakdown, or data loss for your device.

Avoid exposing the product to high temperatures, humidity and direct sunlight. Doing so may cause deformation or deterioration of this product and your device.

Stop using this product immediately if you notice damage such as cracks, deformation or deterioration.

Do not use alcohol-based agents or other chemicals on this product.

Do not use rough cloths to wipe this product.

Keep out of reach of children.

<About the case>

Please observe the following to avoid accidentally dropping your device. Do not use with any non-supported devices. Check that the case is securely installed before use.

Any dust or dirt caught between your device and the case can scratch your device.

Do not place this case on objects made of resin (synthetic leather sofas, resin seats, etc.). Direct contact for long periods of time, or strong rubbing movements may cause staining.

Due to the nature of the material, the case may discolor over time.

The camera hole is designed to minimize interference from the LED flash. However, shooting conditions may cause the flash refraction may be captured. If that happens, remove the cover before taking a photo.

You may not be able to use a tabletop holder with the case installed. In this circumstance, remove the case.

The color may transfer if the case is wet by liquids such as sweat.

When the cover gets wet with sweat, rain etc., wipe it immediately with a dry towel and let it air-dry in the shade.

Let it air-dry in the shade a few times a year.

Limitation of Liability

In no event will ELECOM Co., Ltd be liable for any lost profits or special, consequential, indirect, punitive damages arising out of the use of this product. ELECOM Co., Ltd will have no liability for any loss of data, damages, or any other problems that may occur to any devices connected to this product.

Trademark and name of the manufacturer:

ELECOM CO., LTD.

Fushimimachi 4-1-1, Chuo-ku, Osaka City www.elecom.co.jp/global/

·ELECOM CO., LTD. owns the copyright of this manual. ·Unauthorised copying and/or reproducing of all or part of this manual is prohibited. ·If you have any suggestions or doubts about this manual, please contact your dealer. ·The images are for illustration purposes only and may differ from your actual product. ·The specifications and appearance of this product may be changed without prior notice for product improvement purposes. ·We shall bear no responsibility for any device failure or malfunction of other devices resulting from the use of this product. ·When exporting this product, check the export regulations for the country of origin. ·iPhone and MagSafe are a trademark of Apple Inc., registered in the U.S. and other countries. ·The company and

product names on the packaging and the manual are, in general, trademarks or registered trademarks of their respective companies. ·In order to make improvements to this product and for improved safety, the colours and specifications are subject to change without prior notice.

Global Support

www.elecom.co.jp/r/s536


A customer who purchases outside Japan should contact the local retailer in the country of purchase for enquiries. In “ELECOM CO., LTD. (Japan)” , no customer support is available for enquiries about purchases or usage in/from any countries other than Japan. Also, no foreign language other than Japanese is available. Replacements will be made under stipulation of the Elecom warranty.

iPhone Case Manual, Safety precautions, and Compliance with regulations 1st edition, December 17, 2024

©2025 ELECOM Co., Ltd. All Rights Reserved.

PM-A24ANEST_PM-A24CNEST


Documents / Resources

	<p>ELECOM PM-A24ANEST-PM-A24CNEST iPhone Case [pdf] Instruction Manual</p> <p>PM-A24ANEST, PM-A24CNEST, PM-A24ANEST-PM-A24CNEST iPhone Case, PM-A24ANEST-PM-A24CNEST, iPhone Case</p>
---	---

References

- [User Manual](#)

 ELECOM

 ELECOM, Iphone Case, PM-A24ANEST, PM-A24ANEST-PM-A24CNEST, PM-A24ANEST-PM-A24CNEST iPhone Case, PM-A24CNEST

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.