



ELECOM TK-TB01UM Wired Keyboard Instruction Manual

[Home](#) » [ELECOM](#) » ELECOM TK-TB01UM Wired Keyboard Instruction Manual 

Contents

- [1 ELECOM TK-TB01UM Wired Keyboard](#)
- [2 Manual](#)
- [3 Connecting to a PC](#)
- [4 Install the driver](#)
- [5 Setup using the driver](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

 


ELECOM TK-TB01UM Wired Keyboard




Manual

■Top

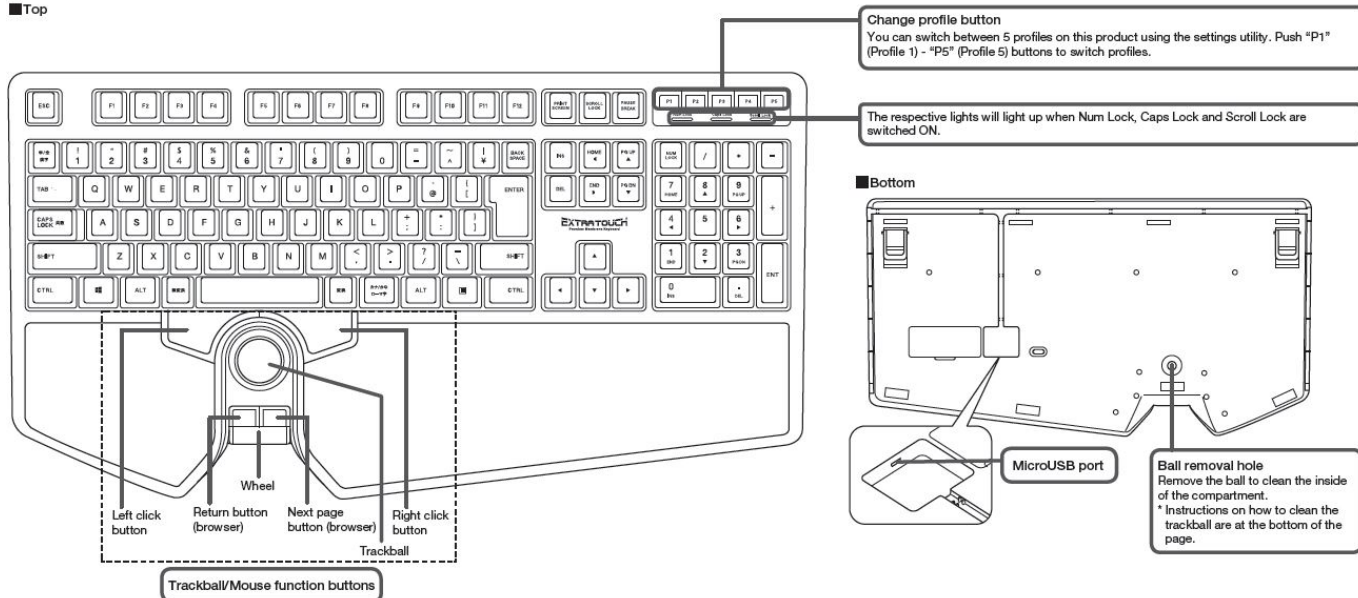

Connecting to a PC

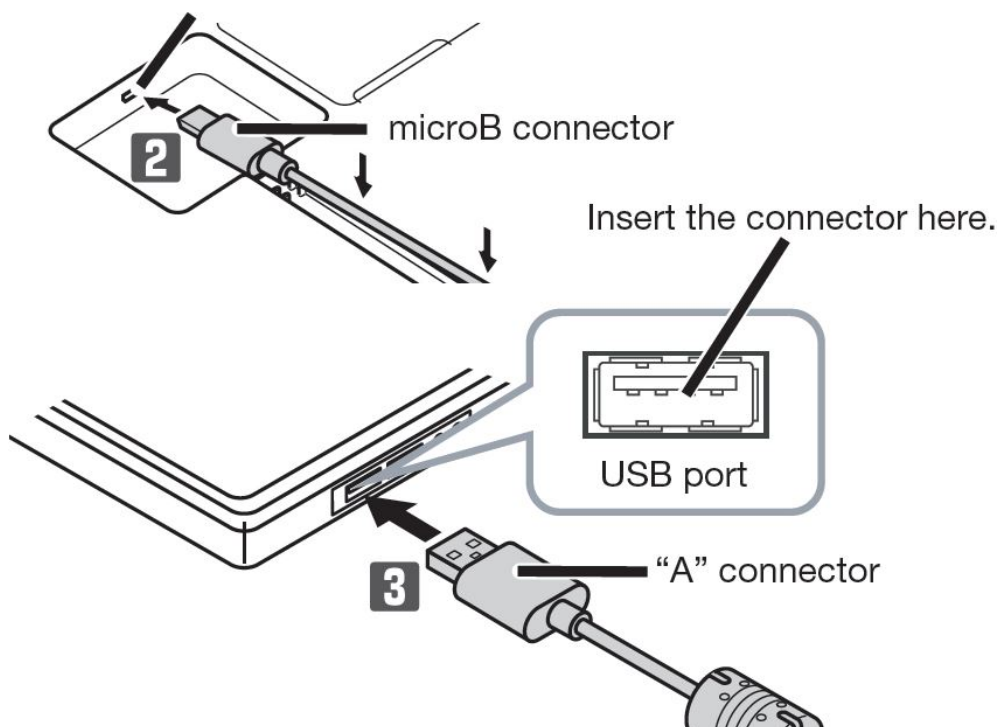 

- Start the PC.
- Connect the included USB cable microB connector to the product.
- Insert the USB cable's "A" connector into the USB port on the PC. Any USB port may be used.

Ensure the correct orientation and insertion location of the connector. If you feel a strong resistance when inserting the USB connector, check that the shape and orientation of the connector is correct. Using excessive force may damage the connector and cause injury. Do not directly touch the terminals of the USB connector.

- The Windows® standard keyboard driver will be automatically installed. You will then be able to use the keyboard.

You can assign functions and set macros for all keys by downloading and installing the ELECOM TK-TB01UM

settings software (henceforth, “software”) from the ELECOM website. <https://www.elecom.co.jp/r/s280>

You will need to change the setting to Japanese (JIS) layout keyboard if it is not recognized as a Japanese (JIS) keyboard when connected. Please refer to the “Keyboard settings guide” for settings.

<https://www.elecom.co.jp/r/s282>

Install the driver

Before reinstalling

- Connect the product first.
- If other mouse utility programs are installed, please uninstall beforehand.
- Please logon using a user account with administrative rights.
- It is recommended to end all Windows® programs (application software).

The following images are from Windows®10. The screen may look different depending on the OS, but the operation is identical.

Unzip the downloaded

ELECOM_Trackball_Keyboard_Driver_vx.x(.zip) and double click on the ELECOM_Trackball_Keyboard_Driver_vx.x(.exe) file. * The file name will be different depending on the driver version.

 
The installer will start up.

Click on “Yes” when the “User Account Control” window appears.


In the language selection window, select “English” and click on “OK”.




Click on “Next”.

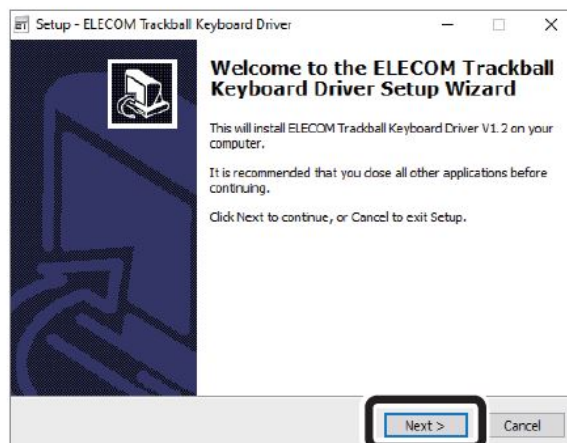

Click on “Next”.

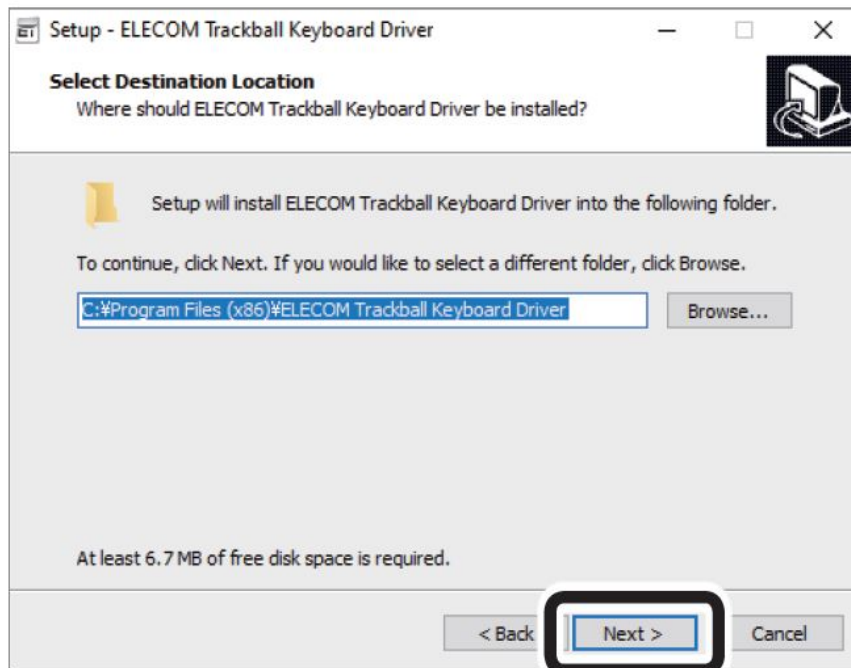 


Click on “Next”.

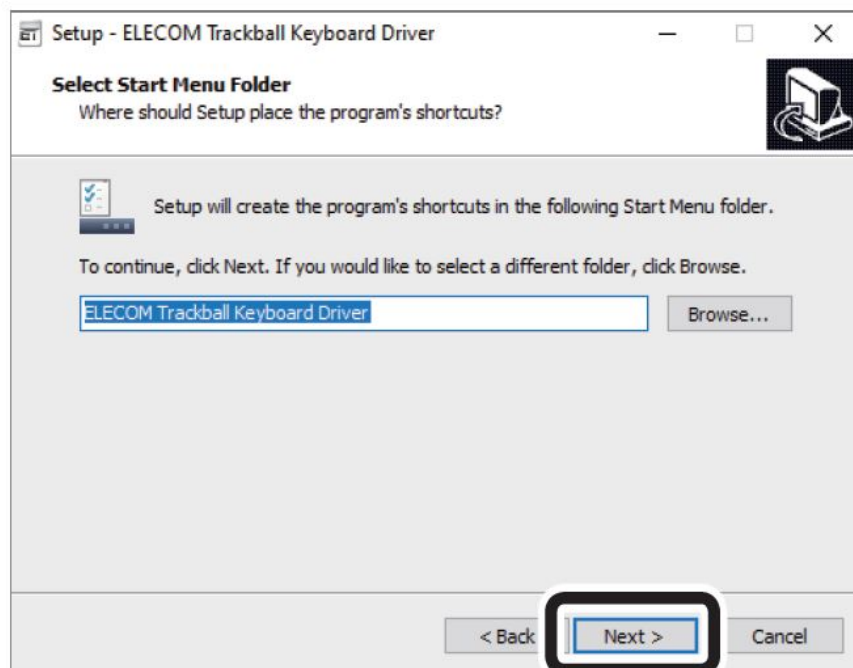 


Click on “Install”.

 The installation will start.

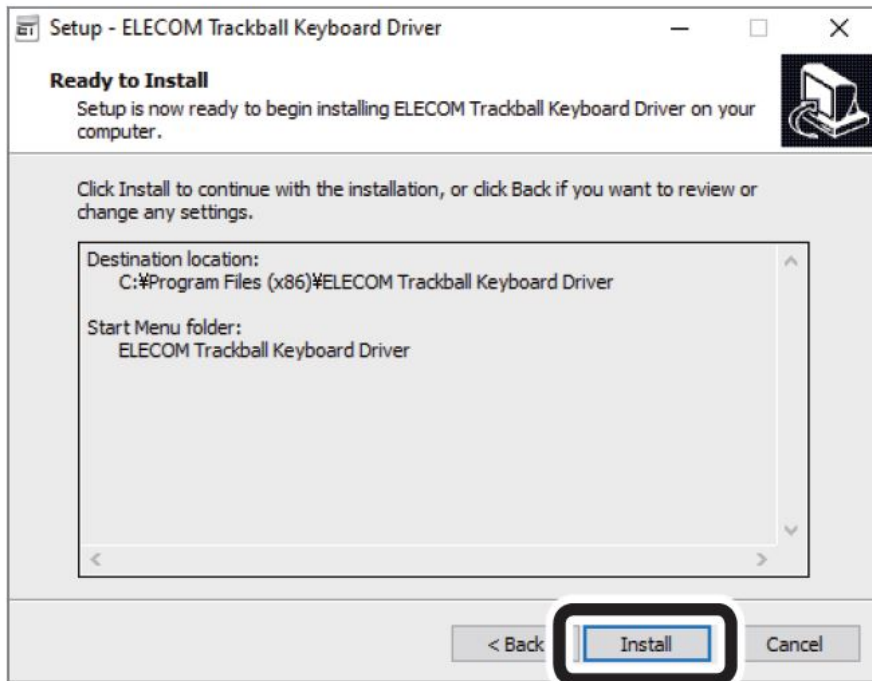

Click on “Finish”.


The settings page will startup and recognise the product.

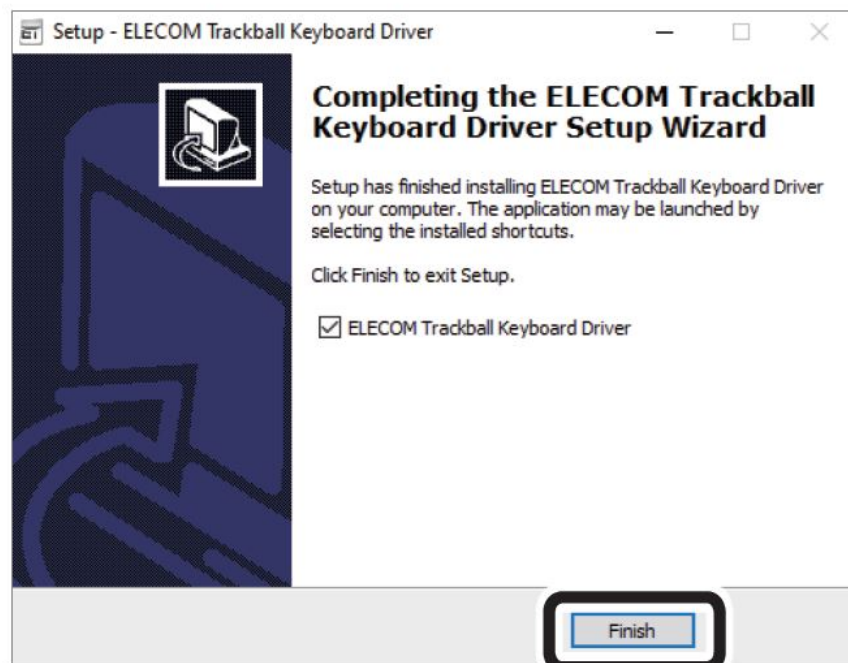

The driver installation is complete once the driver settings page appears. You can now use the keyboard with trackball.

Setup using the driver

 - Click the icon in the notification area and click on “Settings”.

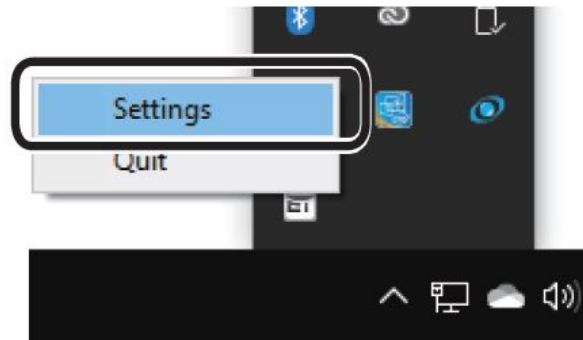


If appears in the notification, click on , right click on the icon, then click on “Settings”.


- The driver settings page will appear.



 
The page below will appear if the driver is started without connecting the product. Please ensure that the product is connected before operation.

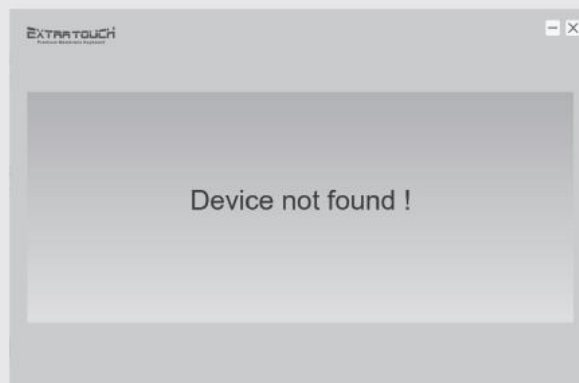

Click on “Driver settings guide” under “Others” - “Manual” to read how to change settings using the driver.

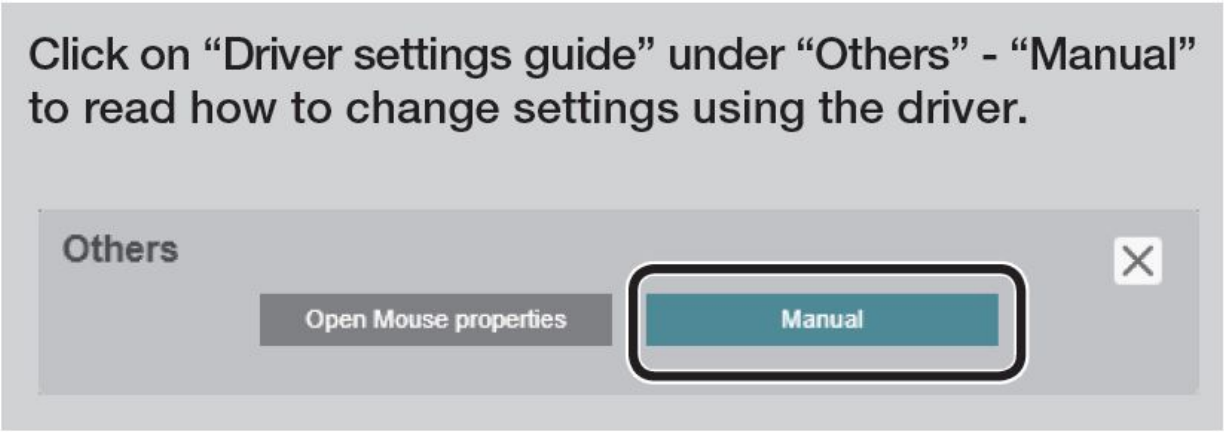

Documents / Resources

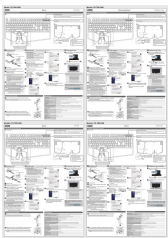	<p>ELECOM TK-TB01UM Wired Keyboard [pdf] Instruction Manual TK-TB01UM, Wired Keyboard</p>
---	---