

Electrified X1 Stealth Bottom Bracket Conversion Instruction Manual

Home » Electrified » Electrified X1 Stealth Bottom Bracket Conversion Instruction Manual



Contents

- 1 Electrified X1 Stealth Bottom Bracket Conversion
 - 1.1 Conversion for Standard Freewheel
 - 1.2 Conversion for BB92 Bottom Bracket
 - 1.3 Additional Information
- 2 Documents / Resources
- **3 Related Posts**



Electrified X1 Stealth Bottom Bracket Conversion



Product Information:

- Product Name: X1 Stealth Bottom Bracket Conversion
- Compatible with: Standard Freewheel
- Compatible Bottom Bracket Sizes: 68-83mm
- Compatible Bottom Bracket Type: BB92

Product Usage Instructions:

Conversion for Standard Freewheel

- 1. Ensure that your bottom bracket size is within the range of 68-83mm.
- If your current bottom bracket type is BB92, proceed to step 2.
 Otherwise, refer to the "Conversion for BB92 Bottom Bracket" section below.
- 3. Install the X1 Stealth Bottom Bracket Conversion by following these steps:
 - · Remove any existing freewheel spacer.
 - Replace it with the R1 Freewheel spacer provided.

Conversion for BB92 Bottom Bracket

- 1. Ensure that your bottom bracket size is within the range of 68-83mm.
- 2. If your current bottom bracket type is not BB92, refer to the "Conversion for Standard Freewheel" section above.
- 3. Install the X1 Stealth Bottom Bracket Conversion by following these steps:
 - · Remove any existing freewheel spacer.
 - Replace it with the R2 Freewheel spacer provided.
 - If using Freewheel 2.0, add the Special 11T sprocket designed for X1 Stealth BB92.
 - Watch the video tutorial at https://www.youtube.com/watch?v=FbHlrZmylq4 for additional assistance.

Additional Information

- If using Freewheel 2.0, you may need to use 11mm FW spacers in addition to the provided freewheel spacer.
- If not using Freewheel 2.0, the standard 11T sprocket should be used instead.
- For more detailed instructions, refer to the video tutorial at https://www.youtube.com/watch?v=KYIXQiNyIdE.

There are 3 kinds of mounting brackets:

- · Left mounting bracket
 - L1: suitable to 68-83mm and BB92 bottom bracket
- · Right mounting bracket
 - R1: suitable to 68-83mm version
 - R2: suitable to BB92 version

There is 1 kind of hanger:

• H1: suitable to 68-83mm & BB92

There are 2 kinds of Freewheel 2.0 spacers:

- 6.3mm for BSA
- 11mm for PF

For Standard Freewheel

From To	68-83mm	BB92
68-83mm		68-83mm bottom bracketR1Freewheel spacer
BB92	BB92 bottom bracketR2Remove freewheel spacer	

For Freewheel 2.0

From To	68-83mm	BB92
68-83mm		 68-83mm bottom bracket R1 6.3mm FW spacers Standard 11T sprocket https://www.youtube.com/ watch?v=KYIX QiNyldE
BB92	 BB92 bottom bracket R2 11mm FW spacers Special 11T sprocket for X1 Stealth BB92 https://www.youtube.com/watch?v=Fb HIrZmylq4 	

Documents / Resources



Electrified X1 Stealth Bottom Bracket Conversion [pdf] Instruction Manual X1 Stealth Bottom Bracket Conversion, X1 Stealth, Bottom Bracket Conversion, Bracket Conversion

Manuals+,