

electro-harmonix Micro Pog Polyphonic Octave Generator **User Manual**

Home » electro-harmonix » electro-harmonix Micro Pog Polyphonic Octave Generator User Manual



Contents

- 1 electro-harmonix Micro Pog Polyphonic Octave Generator
- **2 CONTROLS**
- **3 OPERATION NOTES**
- **4 WARRANTY INFORMATION**
- **5 Documents / Resources**
 - 5.1 References
- **6 Related Posts**



electro-harmonix Micro Pog Polyphonic Octave Generator



Congratulations on your purchase of the XO MICRO POG Polyphonic Octave Generator. What does that mean exactly? Well, the MICRO POG can simultaneously generate multiple octaves from your input signal. Whether you play single notes, arpeggios or full chords, the MICRO POG will track, every note or chord that you play, with precision. With the MICRO POG, you can mix together your original "dry signal" with two different octaves (one above and one below your original note) to create totally new inspiring tones.

WARNING: Use only the 9.6VDC/200mA AC adapter the Micro POG comes supplied with. Do not use any other AC adapters. Using other AC adapters, even those made by Electro-Harmonix, could cause harm to the unit, the adapter or you. The Micro POG does not use batteries.

CONTROLS

DRY Knob

Controls the output volume of the DRY signal. The DRY signal is the signal present at the INPUT jack. As this knob is turned clockwise, the volume of the DRY signal will increase.

SUB OCTAVE Knob

Controls the output volume of the SUB OCTAVE signal. The SUB OCTAVE signal is one octave below the original input signal, half the frequency of the input signal. As this knob is rotated clockwise, the volume of the SUB OCTAVE signal will increase.

OCTAVE UP Knob

Controls the output volume of the OCTAVE UP signal. The UP OCTAVE signal is one octave above the original input signal or twice the frequency of the original input signal. The volume of the UP OCTAVE signal will increase as this knob is rotated clockwise.

STATUS LED

This LED indicates the current state of the unit. When the LED is lit up, the box is in EFFECT mode. When the LED is off, the box is in BYPASS mode. Pressing the Footswitch will toggle between effect and bypass modes.

INPUT Jack

This 1/4" jack is the audio input to the POG. The input impedance presented at the Input Jack is 2 M.

EFFECT OUT Jack

This 1/4" jack outputs the effect. The output impedance at this jack is 250.

DRY OUT Jack

This 1/4" jack outputs a buffered version of the input signal. The output impedance at this jack is 250.

9V Power Jack

Connect the output plug from the AC Adapter that was supplied with your Micro POG to this jack, located at the top of the Micro POG. The Micro POG accepts Boss style AC Adapters.

OPERATION NOTES

Here are some very useful sound settings that were designed while developing the POG. They are perfectly suited for the Micro POG. They can all be seasoned to your own tastes.

12-string Guitar

Turn your 6-string into a 12 string. Set all of the knobs to 0. Bring up the INPUT knob to about 60%. While you are listening to the dry signal, rotate the +1 OCTAVE knob clockwise to about 70%. As an additional hint, combine just a touch of the Sub Bass for body.

8-string/16-string Bass

When used with a 4 string, 5 string and beyond bass, bring up your dry bass signal and rotate the + 1 octave knob until you hear the proper balance. A very realistic 8 and 10 string etc bass is easily obtained. Obviously the more strings that you have the wider the octave range...all tracking perfectly.

Phat Bass

Turn your guitar into a great sounding bass. Set all of the knobs to 0. Rotate the INPUT Knob up to 50-75%. Set the SUB OCTAVE knob to its maximum position. Perfect tracking and a really nice bass sound that can add performance bottom. Perfect for demos in your home studio.

Organ

You can do a 3 stop organ that when used with a volume pedal can be a very interesting pad. Try a little modulation from a Nano Small Stone, Polyphase, XO Clone theory, Stereo Pulsar or your favorite modulation pedal for really animated tone.

WARRANTY INFORMATION

Please register online at http://www.ehx.com/product-registration or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at

<u>info@ehx.com</u> or +1-718-937-8300. USA and Canadian customers: please obtain a Return Authorization Number (RA#) from EHX Customer Service before returning your product. Include with your returned unit: a written description of the problem as well as your name, address, telephone number, e-mail address, and RA#; and a copy of your receipt clearly showing the purchase date.

FCC COMPLIANCE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

United States & Canada

EHX CUSTOMER SERVICE ELECTRO-HARMONIX c/o NEW SENSOR CORP. 47-50 33RD STREET LONG ISLAND CITY, NY 11101

Tel: 718-937-8300 Email: info@ehx.com

Europe

JOHN WILLIAMS
ELECTRO-HARMONIX UK
13 CWMDONKIN TERRACE
SWANSEA SA2 0RQ
UNITED KINGDOM

Tel: +44 179 247 3258

Email: electroharmonixuk@virginmedia.com

This warranty gives a purchaser specific legal rights. A purchaser may have even greater rights depending upon the laws of the jurisdiction within which the product was purchased. To hear demos on all EHX pedals visit us on the web at www.ehx.com

Email us at info@ehx.com



Documents / Resources



<u>electro-harmonix Micro Pog Polyphonic Octave Generator</u> [pdf] User Manual Micro Pog, Polyphonic Octave Generator

References

• Electro-Harmonix