

Electrobess WiFi Smart Camera App User Guide

 
[Home](#) » [ELECTROBES](#) » Electrobess WiFi Smart Camera App User Guide 

Contents

- [1 Electrobess WiFi Smart Camera App](#)
- [2 Product Information](#)
 - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Operation](#)
- [5 Cloud storage features](#)
- [6 Installation Instructions](#)
- [7 FAQs](#)
- [8 Notice](#)
- [9 Directions](#)
- [10 Warranty Card](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



Electrobess WiFi Smart Camera App

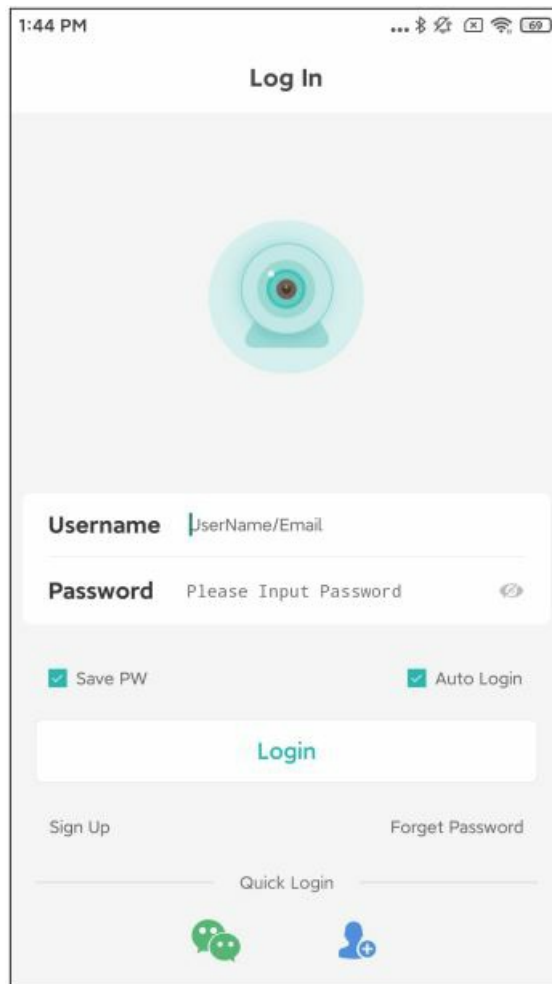

Product Information

The WIFI Smart Camera is a universal version camera designed to provide easy installation and quick configuration for a normal working environment. It can be connected to an appropriate power source and operated to capture high-quality images and videos.

Specifications

- **Model:** WFGM -EN V1.01 211022
- **Connectivity:** WIFI
- **Power Source:** AC Adapter
- **Resolution:** High-Quality Images and Videos
- **Working Environment:** Normal

Product Usage Instructions

1. Install the camera to the corresponding position.
2. Connect the camera to an appropriate power source or turn it on.
3. Wait until you hear "Wait to be configuration".
4. Proceed with the quick configuration process.

Note:

For a detailed guide on how to configure the camera, please refer to the user manual provided with the product.

Operation

1. Download APP

Tip one: Scan the QR code.



Tips two: Search KiCSee~ in the App Store and download.

2. Start-Up The Device

 
1. After installing the equipment to the corresponding position, Connect the device to an appropriate power source or Power on an operation to ensure that the camera is the normal working environment. After hearing "Wait to be configuration", Continue to step 3 02 Quick configuration

Note:

If you need local storage, please install the memory card first, and then power on the device (the memory card does not support hot swapping, please plug and unplug the memory card when the device is powered off). Cloud storage is recommended, which is safe and convenient. Details See "Step 4" for operation.

3. Camera configuration

1. User login
 - Connect your phone to Wi-Fi.
 - Open the iCSee app, register an account and log in (Figure 1).

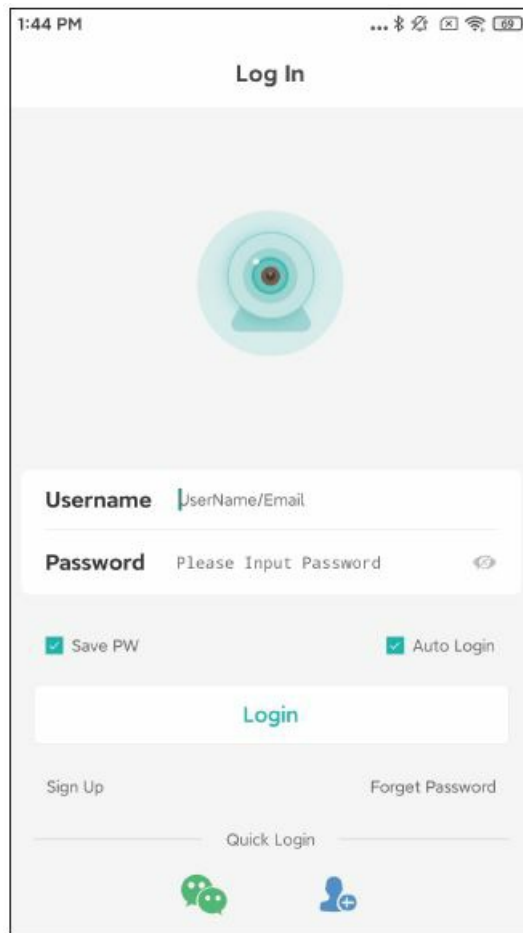

2. Quick configuration

- After successful login, Click the "+" button (Figure 2).
- Click the "WiFi Camera" (Figure 3).
- Set network configuration according to the camera's voice prompts and the APP interface step-by-step guide. When the camera emits a "Connect router successfully" prompt, it means that the camera has successfully configured the network.

Note: When the camera is powered on, it will send a "Wait to be connected" prompt after several seconds, Then you can go to the next step(if the camera does not show the prompt for a long time, you can long-press the camera reset button to restore the device to factory settings. When you hear the prompt, wait to be connected", means entering the network configuration mode, if you don't hear any prompt sound for more than 10 seconds, a short press the reset button to wake up the device and network configuration again)

Figure 2



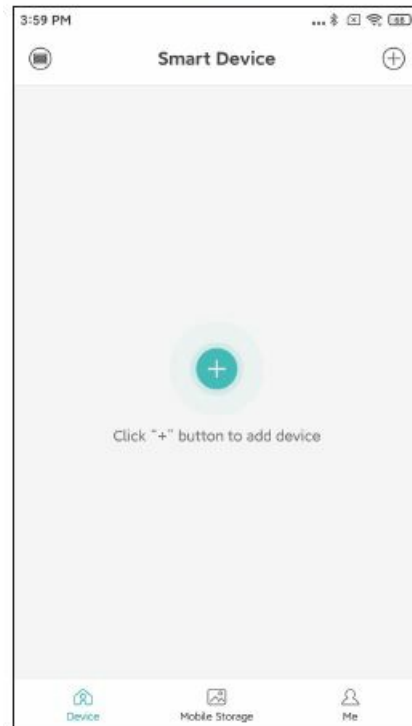 


Figure 3

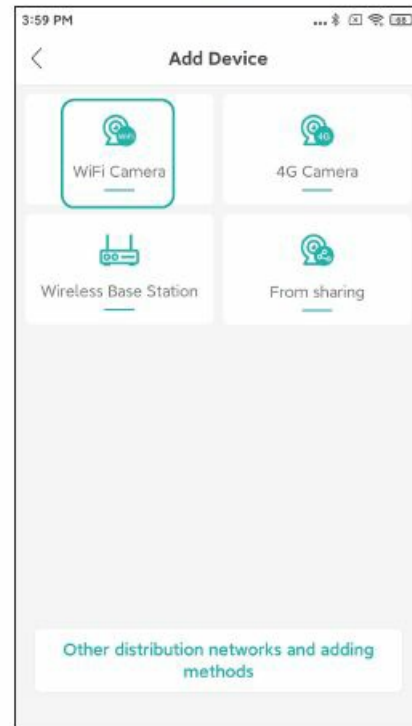 

- After the network configuration is successful, follow the instructions on the APP interface to set the camera password and name.
- After the configuration is completed, the device is displayed in the device list interface. Click to open the real-time preview screen, and carry out relevant operations and settings(Figure 4).

 
Figure 4

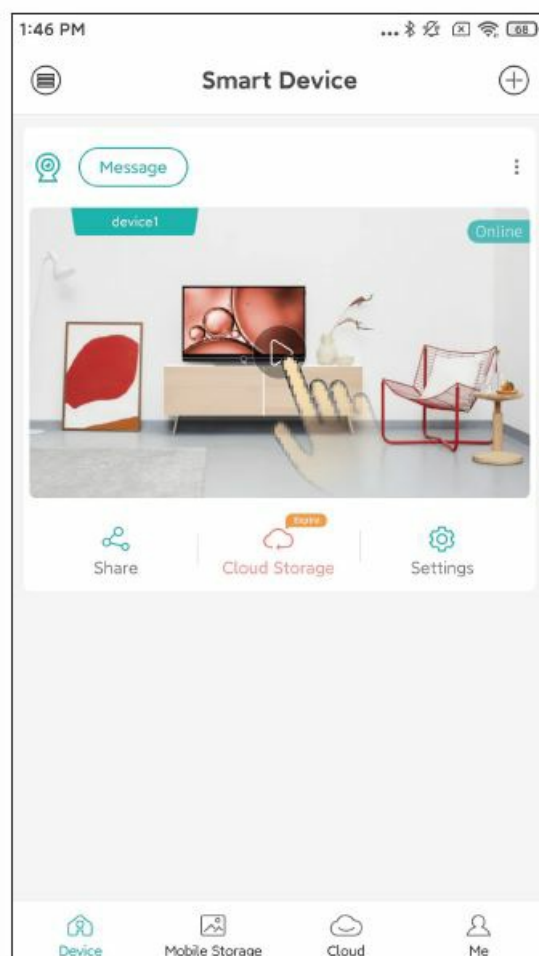





 
4. Cloud storage

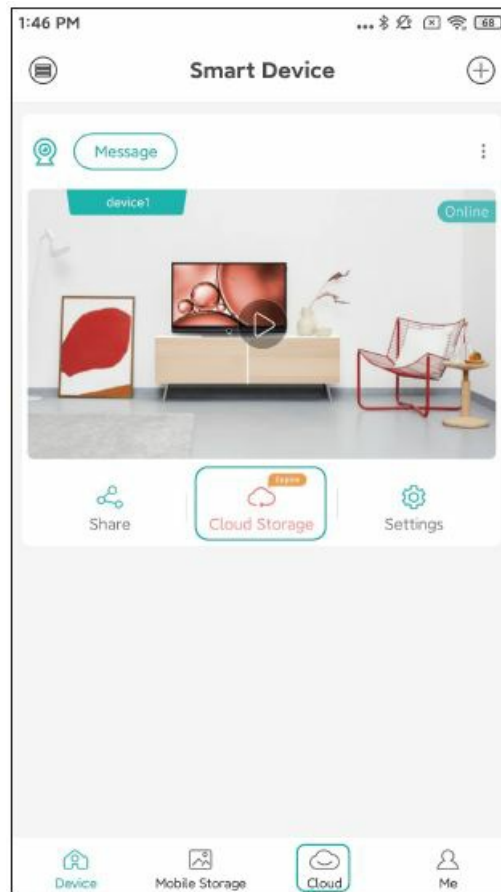Steps to open cloud storage: click the “cloud storage” or “cloud” icon in the device list interface, and follow the

guidance of the app interface to understand and open the cloud storage package, with a variety of packages available.



Cloud storage features

-  **Cloud recording:** cloud storage of dynamic video recording helps you to check the historic recording, and m11M sure video can not be stolen and damaged.
-  **Infinite space:** cloud storage can store alarm recording without quantity and video size limitations within the expiration date.
-  **Real-time alarm:** The device will push a short alarm video instantly to mobile when detecting human wandering, which shows alarm scenery for timely controlling.
-  **Quick searching:** each dynamic video recording will be pushed to mobile as a short video according to time sequence, which helps to increase recording searching efficiency.
-  **Safe and reliable:** All dynamic video recordings are encrypted and uploaded to the cloud for storage. Safe and reliable.

Installation Instructions

- Please confirm that the camera is successfully added before installation and fixation.

- The wall shall be able to bear at least 3 times the weight of the camera.
- Scan below QR Code to view the detailed installation video tutorial.



FAQs

Q: How does the camera store recordings?

A:

1. Local TF card storage, maximum support 128G, automatically deletes earlier videos after the TF card is full, and loop recording.
2. Cloud storage.

Q: How to deal with the issue when forgot the device access password?

A: Reconnect the device after restoring the device to factory settings and set a new password.

Note: The access password involves privacy and security, please treat it with caution.

Q: How to deal with the issue if the camera cannot be connected or is abnormally offline during use?

A:

1. Check whether the camera power supply and router network are normal.
2. Unplug and plug the power of the camera to restart the camera.
3. Restore the camera to the factory settings, and then re-add the device according to the instructions.

Q: Is a 5g router supported?

A: If you use a 5g router, 5G and 2.4G use the same connection hotspot (that is, SSID is the same), you can connect directly. If 5G and 2.4G are not the same connection hotspot (that is, SSID is different, generally, SSID of 2.4G is xxxxx-2.4G, SSID of 5G is xxxxx-5G), please connect the WiFi of your mobile phone to the hotspot of xxxxx-2.4G of the router before configuring the camera.

Notice

1. Please change the user password while using this product to avoid being misappropriated by criminals
2. Do not install the device in a place that is damp, dusty, or accessible to children.
3. Please use and store within the allowable temperature and humidity range, and do not disassemble the equipment at will.

Directions

1. Please refer to the actual product, the manual is for reference only.
2. The APP and product firmware will be updated from time to time. You can upgrade to the latest firmware online by yourself without notice. The manual is for reference only.
3. The manual may contain technically inaccurate parts or parts that are inconsistent with product functions or printed errors.

Please refer to our company's final interpretation.


Warranty Card

Product Name	Model	
Purchase Date	Purchase Store	
Cause		
Process		
Customer Name	Customer Gender	
Customer Phone	ZIP	
Address		

Warranty period: one year.

This warranty card is only for our company's products.

Documents / Resources

	Electrobes WiFi Smart Camera App [pdf] User Guide WiFi Smart Camera App, WiFi Smart Camera, App
---	--