

ELECTRON TECHNOLOGY E0059 Android Tablet



ELECTRON TECHNOLOGY E0059 Android Tablet User Guide

[Home](#) » [ELECTRON TECHNOLOGY](#) » ELECTRON TECHNOLOGY E0059 Android Tablet User Guide 

Contents

- 1 ELECTRON TECHNOLOGY E0059 Android Tablet
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 ATTENTION
- 6 FUNCTION OVERVIEW
- 7 SPECIFICATIONS
- 8 START
- 9 HOME SCREEN
- 10 Home settings, Wallpapers, Widgets
- 11 BASIC SETTINGS
- 12 NETWORK CONNECTION
- 13 APP MANAGEMENT
- 14 INTERNET NAVIGATION
- 15 MULTIMEDIA
- 16 TROUBLESHOOTING
- 17 FCC STATEMENT
- 18 Documents / Resources
 - 18.1 References

ELECTRON TECHNOLOGY

ELECTRON TECHNOLOGY E0059 Android Tablet



Product Information

Specifications

- **Wireless Frequency:** 5.2G WiFi
- **Intended Use:** Indoor use only
- **Compliance:** Industry Canada's licence-exempt RSSs

Product Usage Instructions

1. Indoor Use Only

This device is designed for indoor use only. Avoid using it outdoors to ensure optimal performance and longevity.

2. Compliance with Regulations

Ensure that the device complies with Industry Canada's licence-exempt RSSs. Adherence to regulations is essential for lawful operation.

3. Interference

This device must not cause interference with other devices. It should also be able to accept any interference that may affect its operation without malfunctioning.

FAQ

- **Q: Can this device be used outdoors?**
 - A: No, this device is intended for indoor use only to ensure proper functionality.
- **Q: What should I do if the device causes interference?**
 - A: If the device causes interference, try adjusting its placement or contacting customer support for further assistance.

 
USER GUIDE

Please read the manual before using this product, and save it for future use.

ATTENTION

1. Before using the tablet, please read the manual of the tablet carefully, and operate it according to the requirements and specifications in the manual.
2. Use the charger that comes with the original machine to charge, do not replace other chargers casually. If the charger is damaged, replace it with a new regular charger (current voltage is 5V/2A).
3. When the tablet prompts for charging during use (the power is generally about 20%), it should be charged in time.
4. The duration of use should not exceed 3-4 hours. It is best not to use it while charging. (The body is in a state of constant heat for a long time, which may easily lead to the degradation of hardware performance, or accelerate the aging and damage of hardware).
5. When the tablet encounters a power failure during charging, you should unplug the tablet first.
6. Other items should not be placed on the tablet to avoid damage to the screen.
7. When the tablet is not in use, it should be placed on a stable desktop to avoid damage to the body due to accidental falls.
8. The tablet screen is afraid of squeezing and collision, please handle it with care. In addition, do not use fingernails during use. Generally light touch, not heavy pressure.
9. When cleaning the tablet, do not directly rinse it with water, as the tablet that is not waterproof may be useless after washing.
10. The built-in electronic components of the tablet are afraid of moisture and water, and must be kept away from high temperature, humidity and dust. Please keep it in a dry place and avoid direct sunlight.

FUNCTION OVERVIEW

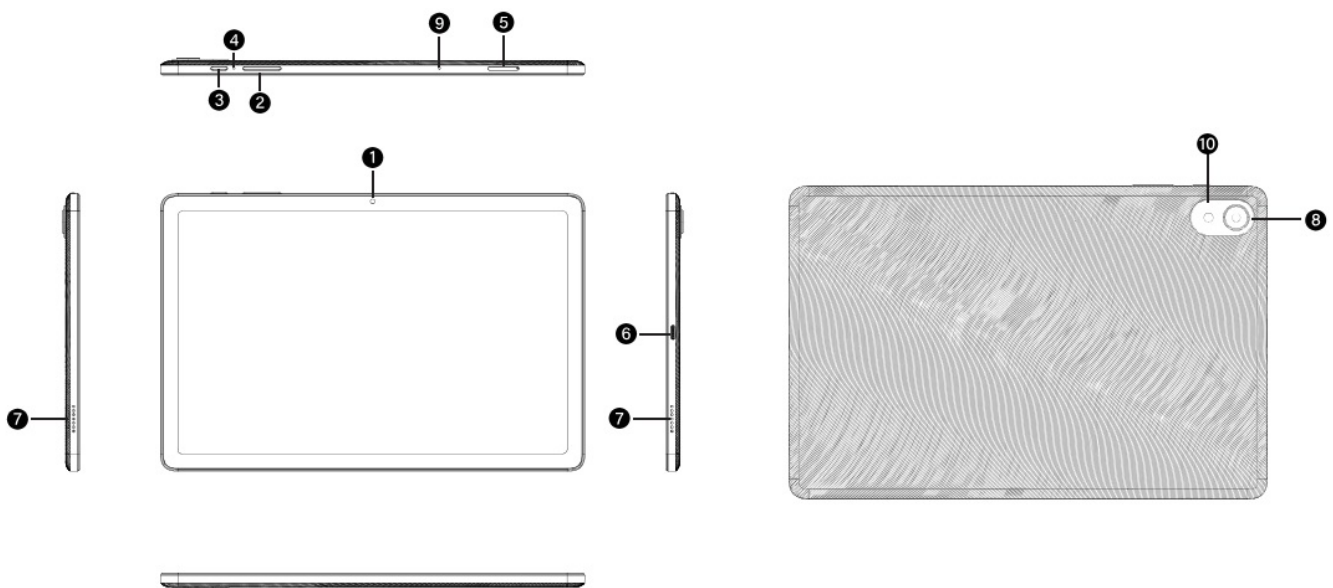

SPECIFICATIONS

Tablet Specifications			
Tablet Size	10.95"	Connectivity	Wi-Fi/Bluetooth
Chipset	T606	CPU	T606 Octa-core 2.0GHz
GPU	Mali-G57-3EE-1core 650MHz	RAM	4GB+4GB
Display	IPS/800*1280 HD	ROM	128GB
Front Camera	5MP	WiFi	802.11a/b/g/n/ac/ax 2.4GHz + 5GHz
Rear Camera	8MP	Power Supply	DC 5V 2A
Battery	7000mAh	Touchscreen	Multi-Touch
Operating System	Android 14	Ports	USB Type-c/TF card

START

Power On/Off

1. Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
2. Hold down the power button for 2 seconds to display Power off / Restart options on the screen. Tap Power off to turn off the tablet. Tap Restart to restart.
3. If the tablet freezes, press and hold the power button for 6-7 seconds to do a forced shutdown.

Battery

1. A rechargeable Li-ion battery is installed in the tablet.
2. We suggest you drain the battery completely once a month if you only use your tablet occasionally.
3. DO NOT dispose of tablet in fire.
4. Charge the device fully each time to increase the battery life.
5. You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
6. A full charge can be used for an average of 3-4 hours.

Sleep Mode

Simply press the power button once to switch the tablet into sleep mode when the tablet is ON; press again to wake it up.

Tip: Go to Settings > Display > Screen timeout to adjust automatic sleep settings

Sleep Mode

 
Simply press the power button once to switch the tablet into sleep mode when the tablet is ON; press again to

wake it up.

Tip: Go to Settings > Display > Screen timeout to adjust automatic sleep settings

HOME SCREEN

Icon on the Bottom Menu

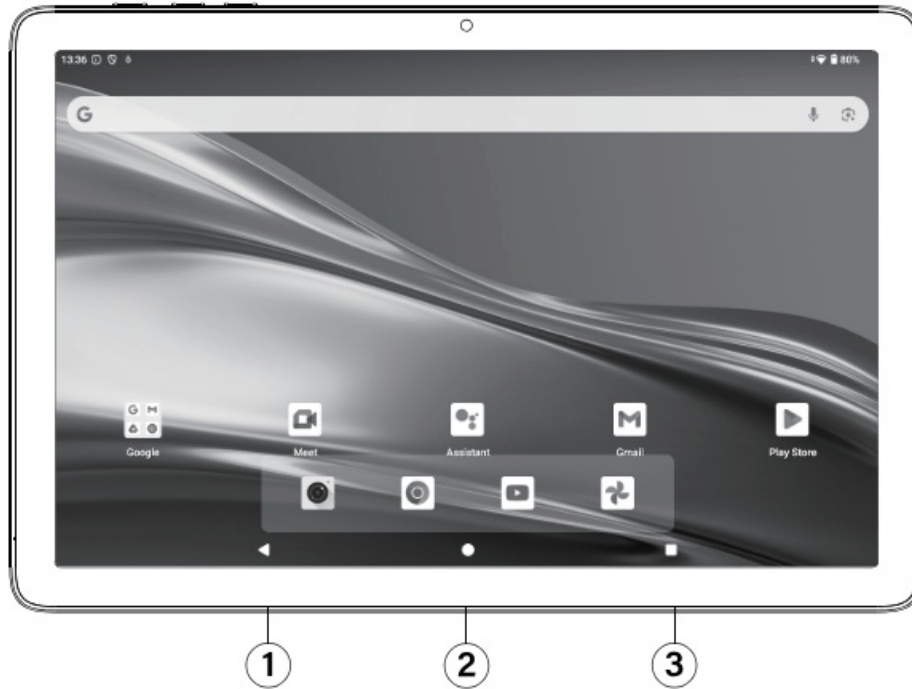

1. Back
2. Home Screen
3. Recent Activities

Home settings, Wallpapers, Widgets

Home settings

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. Tap Home Settings to enable/disable adding icons to the Home screen. This applies to new Apps installed from Play Store.

Wallpapers

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. You can choose a wallpaper from the Gallery or your downloaded files. Set the one you like to be the wallpaper.

Widgets


Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. Tap Widgets, then tap and hold the desired widget, drag the widget to the target homepage, and finish adding.


Tips

Tap an icon and move it on top of another icon to create a new folder on the home screen. Open the folder; tap “Edit Name” to rename the folder.


BASIC SETTINGS

 Quick Settings

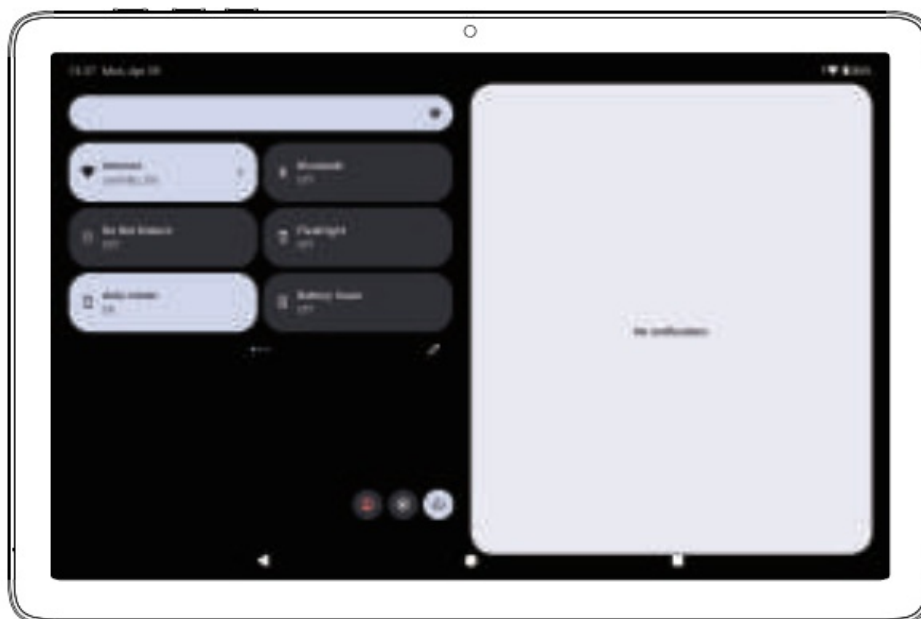

Swipe down from the top of the screen, then continue to swipe down. Tap the  icon to change the options in the quick settings.

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface or swipe up from the bottom of the screen, and then tap Settings to enter the setting interface.



Network & Internet

- Connect to any working Wi-Fi
- Enable/disable airplane mode
- Hotspot & tethering

Connected Devices

- Connect the device and check the connected device
- Add and check printers

Apps & Notifications

- Check recently opened apps
- Check all apps on the tablet
- Set app permissions
- Uninstall third-party apps
- Adjust app notification settings
- Clear the cache for apps

Battery

- Display the remaining battery power as a percentage
- Enable/disable battery saver mode

Storage

- View and manage your storage space

Display & Wallpaper

- Adjust the screen brightness
- Adjust the font size and display size
- Set eye comfort mode
- Set a screensaver
- Change the wallpaper

Sound

- Set volume levels for media, call, ring & notifications and alarms
- Set Do Not Disturb preferences
- Turn on / off the sound for screen lock, charging, and touch

Scheduled power on / off

- Set a scheduled start time
- Set a scheduled shutdown time

Accessibility

- For vision and hearing impaired users, manage settings for screen readers, subtitles, and more

Privacy, Location, Security

- Set screen lock pattern, e.g. password, PIN, Swipe, etc
- Enable/disable all notifications while the screen is locked
- Turn on / off the location services for a specific app
- Set show/hide password when inputting a password

Accounts & Password

- Add and manage the user accounts on your tablet

Digital Wellbeing & Parental Controls

- Set timers for your apps
- Set up parental controls with Google's Family link

Google

- Set the preferences for Google-related services

System

- Set Language
Tap Languages & input > Languages > + Add a language. After adding, hold and slide the = icon to the top to change the language
- Restore Factory Settings
Tap System > Advanced > Reset options > Erase all data (factory reset) to restore to factory settings
- Other Settings
Set the date and time
Turn on / off the backup

About Tablet

- Check detailed information about the tablet

NETWORK CONNECTION

Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings

Wi-Fi Connection

1. Go to Settings > Network & Internet > Internet > Turn on the Wi-Fi. All available Wi-Fi connections will be listed.



2. . Select your Wi-Fi, and input the correct password.



APP MANAGEMENT

App Download and Installation

1. Tap and open Play Store on the Home screen.
2. Log into your Google account; search and download the apps you need.

Move an App

Tap and hold the app, then slide to desired screen.

Remove an App from the Home screen

Tap and hold the App, then slide to the x to remove it from your home screen.

Uninstall an App

Tap and hold the app, then slide to the uninstall to uninstall the app.

Clear the App Cache

1. Go to Settings > Apps & notifications
2. Select an App > Storage & cache > CLEAR CACHE

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet. You can use the Chrome browser that is pre-installed or download another browser from the Play Store.

MULTIMEDIA

Connecting to the Computer

 
1. Connect your tablet to a computer via USB type-c cable and go to Quick Settings.
2. Tap Android Systems > Charge this device via USB > Tap for more options > Media device(MTP)
3. Go to your computer and find tablet to transfer files between your tablet and computer.

Tip


- Select Charge only if you only need to charge the tablet.
- Select Camera (PTP) to transfer photos between the devices.

Connecting to an External Device

1. Insert a micro SD card into the micro SD card slot and go to Quick Settings.
2. Tap to set up.

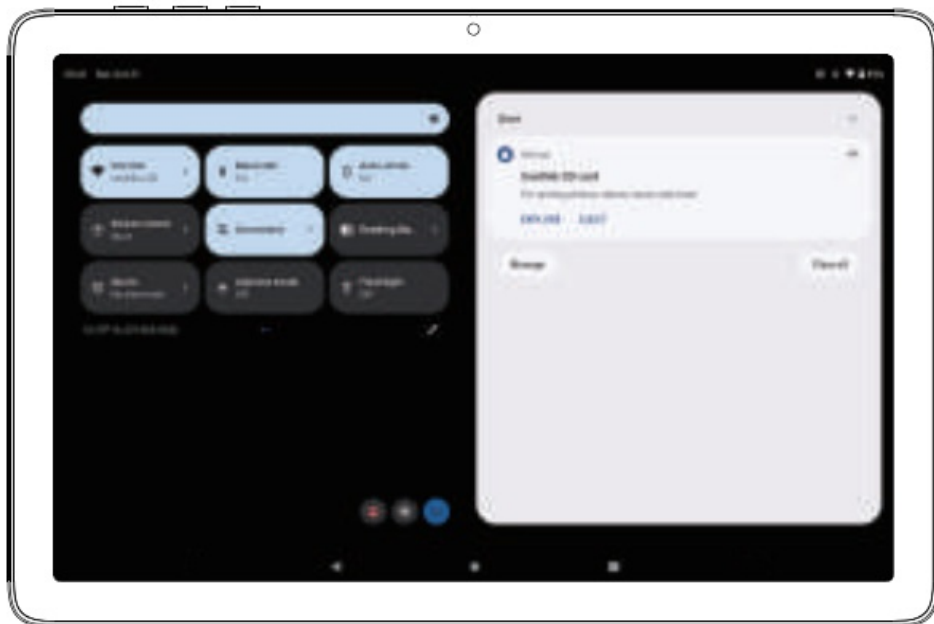

 3. Set the micro SD card as portable storage by selecting use for portable storage. Enter micro SD card storage to move files between the card and tablet.

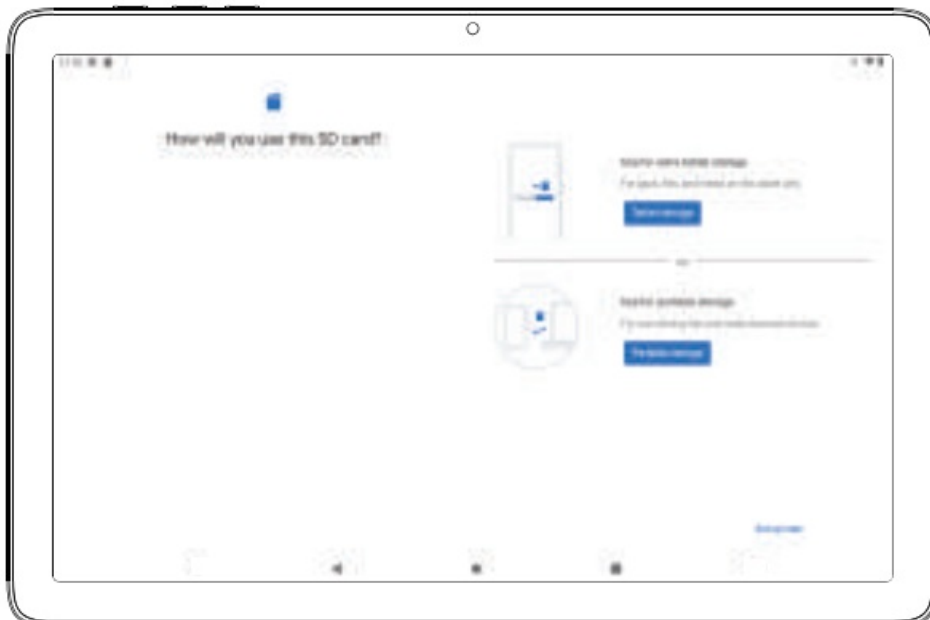

TROUBLESHOOTING

Q1. The tablet can not be turned on

- Reboot your tablet after charging for 30 minutes
- Press the power button to see if the tablet is in Sleep Mode
- Press and hold the power button for 7 seconds to turn off the tablet, then turn on it

Q2. The tablet can not be charged

- Charge the device for at least 30 minutes, in case the battery was completely drained
- Make sure the USB cable is properly plugged into the charging port
- Try another compatible USB cable and adapter

Q3. Error message occurs during operation

- Uninstall the app displaying the error message, then download and install again

Q4. The tablet cannot be detected by the computer

- Make sure the tablet is powered on
- Try another USB cable
- Try another USB port on the computer
- Instead of Charge this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer

Q5. The tablet cannot connect to the Wi-Fi

- Make sure the Wi-Fi on your tablet is powered on
- Make sure you input the correct password
- Reboot the router
- Make sure there is no filter setting or device connection limitation in the settings of the router
- Forget the current Wi-Fi, reset the router and connect to the network again

Q6. The storage space of the tablet is not enough

- Uninstall the apps you don't use
- Clear the app cache regularly
- Insert a micro SD card to expand the storage

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC

- This device complies with parts of the FCC rules. Operation is subject to the following two conditions:
- This device will not cause harmful interference; This device must accept any interference received, including interference that may cause undesired operation.

IC WARNINGS


5.2G WiFi indoor use only

This device complies with Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources

 <p>EMPOWERING YOUNG MINDS EPI095T</p> <p>USER GUIDE <small>Please read the manual before using this product, and save it for future use.</small></p>	<p>ELECTRON TECHNOLOGY E0059 Android Tablet [pdf] User Guide E0059 Android Tablet, E0059, Android Tablet, Tablet</p>
--	--

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.