




Electron X Gigster I Speaker Box User Guide

[Home](#) » [Electron X](#) » Electron X Gigster I Speaker Box User Guide 

ELECTRON

GIGSTER I&II

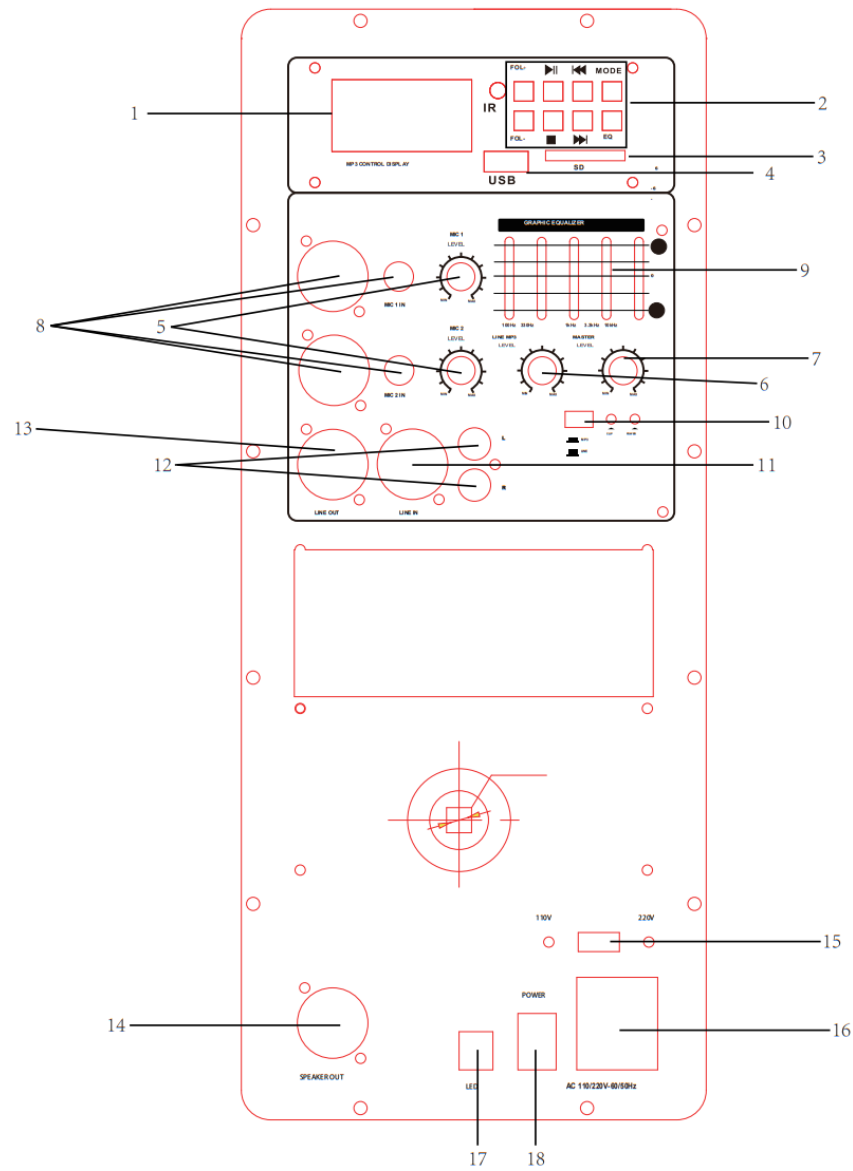

1. USB / MP3 level control
2. Play/Pause/Scan/Reception/Auterior/Silent
3. USB input
4. SD card input
5. Mic level control
6. Line level control
7. Master volume control
8. MIC input
9. EQ control
10. Mic/Line control knob
11. Line IN
12. RCA (R & L) Auxiliary line inputs
13. Line out
14. Speaker out
15. 110~220V Voltage control
16. Power plug
17. LED control
18. Power switch

Contents

[1 OPERATION](#)

[2 FCC warning:](#)

[3 Documents / Resources](#)

[4 Related Posts](#)

OPERATION

1. Prior to switching it on, turn the volume down to a minimum.
2. Connect the audio source to the appropriate input socket.
3. Another Speaker can be connected to the output socket so that several boxes can be daisy-chained.
4. Connect to the mains supply.
5. Switch on the audio source, followed by the active speaker.
6. Set the volume with the applicable control.
7. Adjust the bass+treble.
8. Activate the Bluetooth: Input password"0000" if asked for.

FCC warning:


Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body.

Documents / Resources

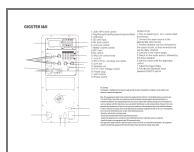

[Electron X Gigster I Speaker Box](#) [pdf] User Guide
GIGSTER, 2AXSN-GIGSTER, 2AXSNGIGSTER, Gigster I Speaker Box, Gigster I, Speaker Bo
x