



Electronics 10 128GB Digital Voice Recorder with Playback User Manual

[Home](#) » [Electronics](#) » Electronics 10 128GB Digital Voice Recorder with Playback User Manual



Contents

- [1 Electronics 10 128GB Digital Voice Recorder with Playback](#)
- [2 Specifications](#)
- [3 Declaration](#)
- [4 Precautions](#)
- [5 SPECIFICATIONS](#)
- [6 WHAT'S INCLUDED](#)
- [7 PARTS & CONTROLS](#)
- [8 OPERATIONS](#)
- [9 TROUBLESHOOT](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Electronics

Electronics 10 128GB Digital Voice Recorder with Playback



Specifications

- **Model:** 10
- **Dimensions (inches):** 1.11*0.4*4.1
- **Weight (lbs):** 0.13
- **Capacity:** Built-in 128G memory card
- **Noise reduction:** Included
- **Voice-activated:** Included
- **Music file format/Recordings format:** Wav.
- **Supported music format:** MP3, WMA, DRM WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible, ext.
- Operating temperature:
- Operating humidity:
- Storage temperature:
- Storage humidity:
- Maximum recording time (built-in memory):
 - **Wav 3072 Kbps:** 80h
 - **Wav 1536 Kbps:** 160h
 - **Wav 512 Kbps:** 496h

Model: 10

- USB Connector
- Volume up
- Volume down
- Back/Return

- Display screen
- Last track/Select
- Play/Pause/Enter
- Next track/Select
- Speaker
- Earphone jack
- One-key record button
- Power On/Off, Lock screen
- Built-in dual microphones (13 & 14)

Declaration

1. There may be some errors or omissions in the manual. Please in kind prevail.
2. To meet market demands, we will revise and improve the product without notice.
3. In any case, we are not responsible for the losses caused by data damage stored in the machine

Precautions

On power

- **DC 5.0V:** when charged using USB.
- **Rated current consumption:** 1A.

On handling

- Do not leave the unit in a location near heat sources, or a place subject to direct sunlight, excessive dust, or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the battery and have the unit checked by qualified personnel before operating it any further.
- When using your recorder, remember to follow the precautions below to avoid warping the cabinet or causing the recorder to malfunction.
- Do not sit down with the recorder in your back pocket.
- Do not put your recorder into a bag with the headphones/earphones cord wrapped around it and subject the bag to strong impact.

The unit is NOT waterproof. Be careful not to allow water to splash on the unit in the following circumstances:

- When you use the unit in an environment where the unit is exposed to rain, snow, or humidity.
- In circumstances where you get sweaty. If you touch the unit with wet hands or if you put the unit in the pocket of sweaty clothes, the unit may get wet.

While listening

- Listening to this unit at a high volume may affect your hearing.

- For traffic safety, do not use this unit while driving or cycling.
- Do not use this unit at a place where the inability to hear surrounding sounds may present a danger. You may feel pain in your ears if you use the headphones when the ambient air is very dry.

This is not because of a malfunction of the headphones, but because of static electricity accumulated in your body. You can reduce static electricity by wearing non-synthetic clothes that prevent the emergence of static electricity.

Do not place this product close to medical devices.

This product (including accessories) has a magnet(s) that may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

SPECIFICATIONS

Dimensions (inches)	1.11*0.4*4.1
Weight (lbs)	0.13
Capacity	Built-in 128G memory card
Noise reduction	Included
Voice-activated	Included
Music file format/ Recordings format*	Wav.
Supported music format	MP3, WMA, DRM WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP, Audible, ext.
Operating temperature	41 °F – 95 °F (5°C – 35°C)
Operating humidity	25% – 75%
Storage temperature	14 °F – 113 °F (-10°C – +45°C)
Storage humidity	25% – 75%

Maximum recording time (built-in memory)

 
Wav 3072 Kbps	80h
Wav 1536 Kbps	160h
Wav 512 Kbps	496h

WHAT'S INCLUDED

- Digital Voice Recorder
- Operating instructions (this sheet)
- Warranty (at the end of this sheet)
- USB Cord


- Earphones

PARTS & CONTROLS

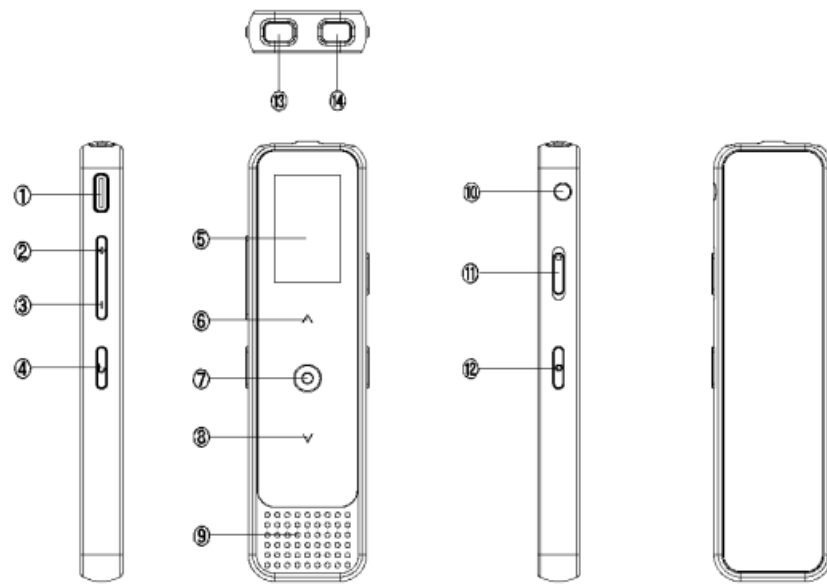

1. USB Connector
2. Volume up
3. Volume down
4. Back/Return
5. Display screen
6. Last track/Select
7. Play/Pause/Enter
8. Next track/Select
9. Speaker
10. Earphone jack
11. One-key record button
12. Power On/Off, Lock screen
13. Built-in dual microphones

 OPERATIONS

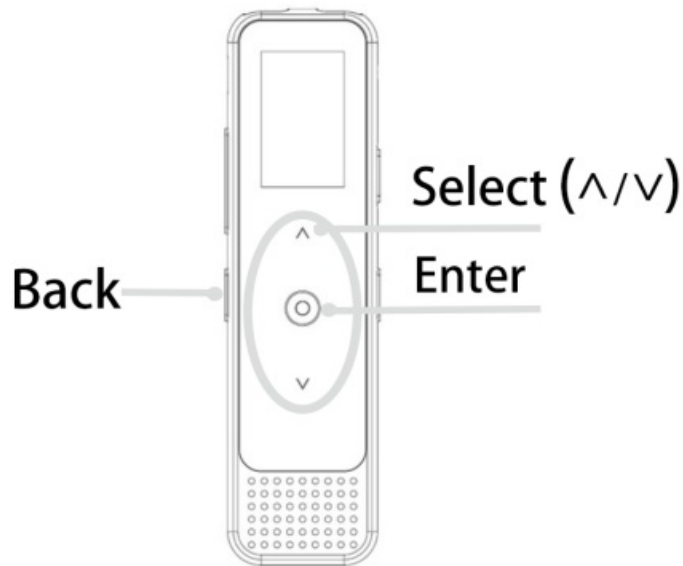

Thanks for using our digital voice recorder!

Please read this manual carefully before using this product. It will help you to operate the product freely.

Power On/Off



Hold the power button for 3 seconds to power on or off the unit.

Note: The recorder will show a backlight after 1 minute of no applications and will power off automatically if inactive and no applications operating backstage for 5 min. This can be re-set in the 'Settings'.

Charging the Device

To charge the device:

1. Connect the USB Type-C cord included in the package to the recorder.
2. Plug the USB connector into an adapter or computer for charging.

Battery Status

- When the battery is about to be less than 5%, the battery bar on the right corner will turn red, please charge immediately to avoid inconvenience.

- The charging bar will move when charging, when it reaches full capacity and stops moving, the charging is complete.

One-key Record Button



The one-key record button allows for easy recording and file-saving operations:

1. Slide up the button on the side to record and down to save files.
Note: you can activate the unit to record even if the recorder has been powered off.
2. The recording will start automatically when sliding up the button. Pressing the play/pause button will stop the recording, and a red dot will appear in the middle of the screen.
3. To save the recording, slide down the one-key button. You will be directed to the recorded file section, where you can access the newly recorded sound.

Listening to Recordings

1. Go to the home page and use the select button to locate 'Recorder'
2. Select 'Recording Library' and locate your desired files

Deleting Files


1. Navigate to the 'Folder' section and find the file you wish to delete.
2. Press the 'back' button until the "Delete files?" appears and wait for your confirmation.
Notice: The file cannot be recovered if you delete it.

Adjust the Volume

Use the "+" and "-" buttons on the side of the recorder.

THE HOME MENU

1. Power on the unit to the home menu. if you wish to go back to the home menu from the sub-menu, please the back button located on the left side of the unit.
2. The HOME menu items are aligned as follows:

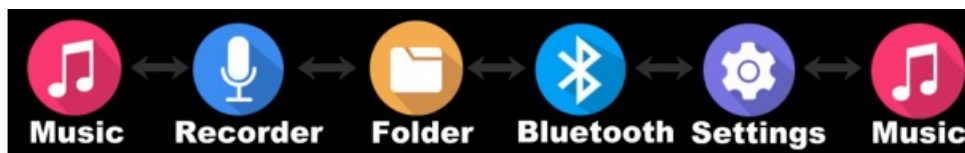

3. Select your desire function from the following:

Music	You can select and play one of the files you have imported from the computer. To locate a music file, go to 'All songs', 'Last played', 'Artists', 'Albums', or 'Favorite'. <u>When importing music files, make sure you import them into the music folder.</u>
Recorder	'Recordings library' select here to play one of the files you have recorded with your recorder.
	'Recording bit rate' You may get your recording bit rate sets here from 3072kbps to 1536kbps and 512kbps
	'Recording Scene' Enhance recording quality by selecting the appropriate recording scene as an interview, meeting, station, or teaching.
	'Recording segment', you may choose the length of each recording from 30,60 to 90 minutes. Once it reaches limits, the recordings will stop and start a new file.

	'Noise control switch' is available here to adjust to your needs.
	'Voice-activated recording' can be activated or shut down here, when turned on, the recorder will record when the voice level is reaching 60-65dB.
	'Recording monitoring' enables you to listen while recording, simply turn on this feature and insert your earphones before recording.
	'Timing Record' To set a specific time for the recorder to start recording. Ensure the device is powered on and sufficiently charged.
Folder	In here, you may check all the files you imputed from your computer and delete the files not in need.
Bluetooth	<p>1. Turn on Bluetooth and click 'Available Devices' to search for nearby devices. Make sure the desired device is powered on and within range.</p> <p>2. Once the connected sign appears on the unit screen alongside the detected devices, you can use your Bluetooth media to enjoy recordings or music.</p>
Settings	'Languages' are available in 6
	'Date & time' are adjustable here.
	'Brightness' is also manageable here.
	'Backlight Timer', you may select if you want your recorder to be always on or down after a few minutes of not operating.
	'Idle shutdown', you can set your recorder to be automatically power off when not in use, the max. timer is 60 minutes.
	'Information', in here you may check your model's name & storage usage situation. System files will not take up any the spaces of your built-in memory card in this model α10.
	<p>'Factory Settings', in here, you can change everything back to what it's like to be delivered to you, it will not affect the files in</p> <p>your recorder, the changes only affect the settings of your</p>

	recorder.
	Use the 'Update Playlist' feature to refresh/update the system and resolve any issues with the playlist.
	Secure your files by setting a power-on password for the recorder. <u>The initial password is 9999.</u> Please notice that you need to shut down the unit once you finish setting the password to activate this function.
	The unit will be automatically locked whenever the unit has been shut down, please refer to our product detail page for a video on password setting details.

Sub menu and operation

To navigate the submenu of the voice recorder, follow these steps:

1. Use the select “^” or “v” buttons to browse the main interface.
2. Press the enter button “Ⓢ” to enter the subdirectory.
3. Press the back button to return to the main interface.

Repeat Mode (A-B repeat)

While playing,

1. Press and hold the select “Ⓢ” button until the ‘A-B’ icon turns green, this means you enter the start point (A point) of this A-B loop.
2. Release the button and wait till the progress bar runs to the end point (B point) where you wanted then to press “Ⓢ” again until the ‘A-B’ icon turns orange, release the button and you will get the A-B loop.
3. To revert to normal settings, simply press the “Ⓢ” button until the ‘A-B’ icon turns white, like the rest of the icons.

Please refer to our product detail page for a video on the A-B repeat settings.

Connect to PC

1. Connect your recorder to your PC using the USB cable we offered.
2. The file will show up in your computer in ‘devices and drives’ or your desktop, please use ‘Eject [USB Drive]’ to safely remove the hardware, and then physically remove it from the USB port.

TROUBLESHOOT


The machine cannot boot	please check whether the battery is exhausted and try again after charging.
Cannot hear the sound through earphone/ headset	<ul style="list-style-type: none"> ● Please check whether the volume is set to zero. ● Please check whether the headset is properly inserted into the headphone jack. ● Please check if the earphone/headset can work properly with your other devices. ● Try using the ‘update the playlist’ in the settings to refresh.

Serious noise	<ul style="list-style-type: none"> ● Please check whether the headset plug is clean. Dirt can cause noise. ● Please check whether the music file is damaged. If the music file is damaged, it may cause serious noise or skips. Try to play another music files.
The screen shows garbled characters	<ul style="list-style-type: none"> ● Please check whether the language is set correctly.
Cannot download files	<ul style="list-style-type: none"> ● Please make sure the player and computer are connected properly. ● Please check whether the internal memory space is full. ● Please check whether the USB cable is damaged.

FAQ

- **Q: Is the recorder waterproof?**
 - A: No, the unit is NOT waterproof.
- **Q: Can I use the recorder close to medical devices?**
 - A: No, this product has a magnet(s) that may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

Documents / Resources

	<p>Electronics 10 128GB Digital Voice Recorder with Playback [pdf] User Manual 10 128GB Digital Voice Recorder with Playback, 10, 128GB Digital Voice Recorder with Playback, Digital Voice Recorder with Playback, Recorder with Playback</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.