



Electronics Record Player Bluetooth Turntable with Built in Speaker User Manual

[Home](#) » [Electronics](#) » Electronics Record Player Bluetooth Turntable with Built in Speaker User Manual 

Contents

- [1 Electronics Record Player Bluetooth Turntable with Built-in Speaker](#)
- [2 BEFORE USING THE UNIT](#)
- [3 HANDLING RECORDS](#)
- [4 PARTS ILLUSTRATION](#)
- [5 FUNCTION](#)
- [6 MAINTENANCE](#)
- [7 SPECIFICATIONS](#)
- [8 ACCESSORIES](#)
- [9 TROUBLESHOOTING](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Electronics

Electronics Record Player Bluetooth Turntable with Built-in Speaker



BEFORE USING THE UNIT

- As the unit may become warm during operation, always leave sufficient space around the unit for ventilation.
- The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.
- Choose the installation location of your unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, heat, cold or moisture.
- Do not place the unit on an amplifier/receiver.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank the cord.
- To keep the laser pickup clean, do not touch it, and always close the disc tray.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

DO NOT MOVE THE UNIT DURING PLAYBACK

 
- During playback, the disc rotates at high speed.
- Doing so may damage the disc or the unit.

WHEN MOVING THIS UNIT

When changing the unit's location or packing the unit for moving, be sure to remove the record or disc. Moving this unit with the record or disc loaded may result in damage to this unit. If the unit is to be packed and moved a great distance, it is also advisable to tighten the turntable transport locking screw.

HANDLING RECORDS

- Do not touch the record's grooves. Only handle records by the edges or the label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

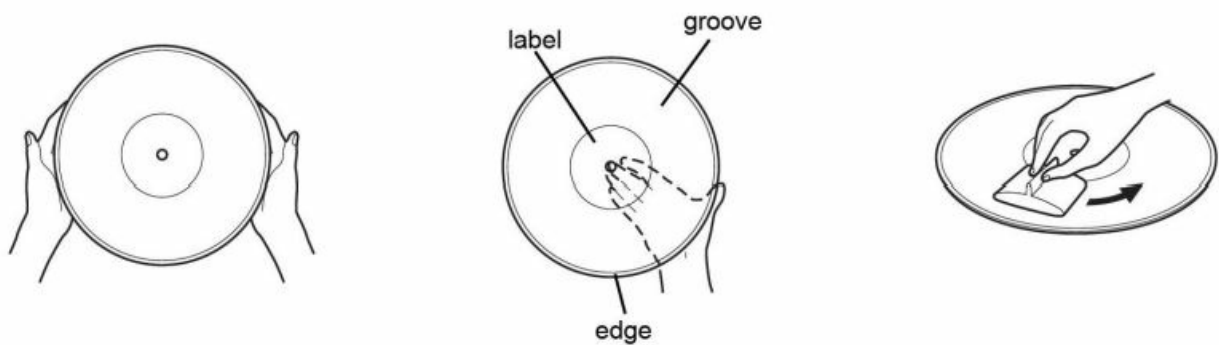


- Should the record become dirty, gently wipe the surface in a circular motion, using a soft anti-static cloth.
- Keep your records away from dust. Keep them in a cool, dry place.
- To avoid dust and scratches, keep records in their sleeves and jackets when not in use.
- Store records upright on their edges. Records stored horizontally will eventually bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp the record.
- Do not store your records in the trunk of your car. The temperature in a closed trunk can ruin your collection.
- Store records in an area with a stable temperature and low humidity.

PARTS ILLUSTRATION



1. Dust cover
2. Turntable Platter
3. 45 RPM adaptor
4. Tone arm lift lever
5. Tonearm

6. Speeds select switch
7. Auto stop ON/OFF switch
8. Power ON-OFF/Volume knob
9. Cartridge Stylus

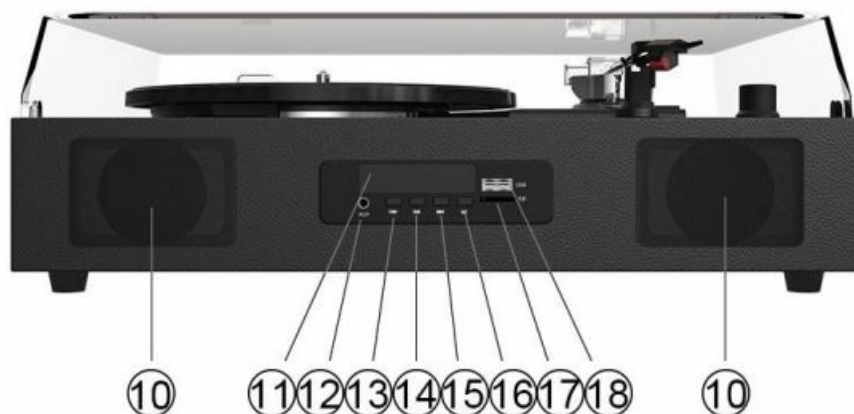

10. Speakers
11. LED Display
12. Aux in jack
13. ⏮ Previous music
14. ⏸ Pause and Play switch and DEL button
15. ⏭ Next music
16. M Button- Modes select key/ Record button
17. TF/SD connector
18. USB slot
19. Hinges
20. RCA audio out
21. DC in Power

 
FUNCTION

1. 3 speeds: 33, 45 , 78 RPM
2. Built-in stereo speakers
3. Belt-driven turntable mechanism
4. Auto stop function
5. RCA audio out
6. USB and SD/TF card Recording
7. USB and SD/TF card Playback
8. Bluetooth connection
9. 3.5mm Aux input for playing other devices
10. All-in-one control panel

BEFORE STARTED General

- Plug in the original DC adapter into the power strip or wall outlet instead of your own.
- Clean the vinyl records with cleaning kits before using it


- Check the needle if it's in the right position or in good condition, and replace it if it's skipping or damaged
- Dust cover needs to stay open when playing a 10" and 12" vinyl record.
- Doesn't support Bluetooth output or connection to Bluetooth speakers.
- Turn to the TROUBLESHOOTING section or technical support if you need help.

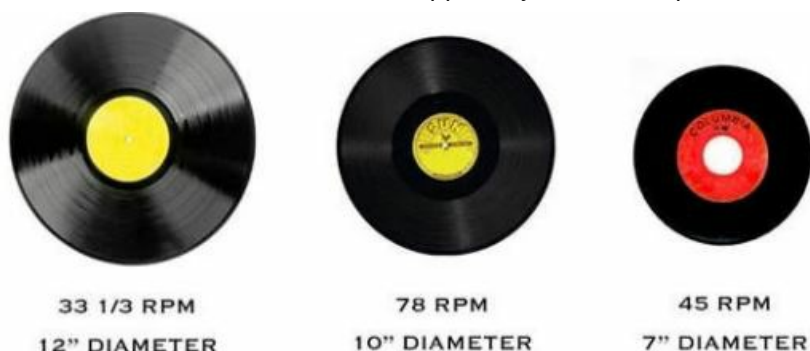

Adjust the Speed switch to the RIGHT SPEED

- Playing a record

 1. Before starting, remove the protective shell from the stylus as illustrated below:

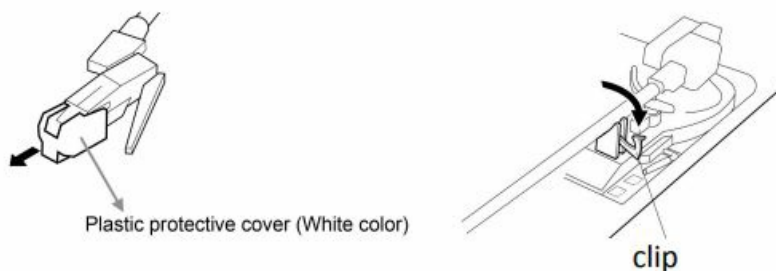

2. Unlock the tone arm from the holder as illustrated above.
3. Place the record on the centre spindle. For a 7-inch record in diameter, place the embedded core adapter(3) on the center spindle then place the record on it.
4. Select the Speed (6) to 33 45 or 78 to match the play speed of the record.
5. Set the auto stop control (7) to ON if you want the turntable to stop turning when it has reached the end of the record. If the switch is set to OFF , the turntable will continue turning.
6. Turn on the Power Switch /Volume control knob(8), the panel (11) displays “-Pho” as in phono mode
7. Raise up the Lever (4) to lift the tone arm then move it on the top of the desired location of the record. Release down the Lever (4) to put the tone arm on record. Record Playing will start automatically.
8. When finished playback, the unit will auto stop turning when Auto stop switch at the “ ON” position. If Auto stop switch at the “OFF’ position, the turntable will continue turning at the end of the record.
9. Raise up the Lever (4) to lift the Tone Arm then put the lever back near the Holder. Release down the Lever, the arm will drop down near the holder then lock the Tone Arm in the Holder.

NOTED TIPS :




- Before switching functions by pressing “M” button(16) Please stop the turntable by putting the cartridge on the holder, The instructions as above, then it allows to switch to other modes.
- Clean your old/new vinyl records and let the stylus needle in the middle as not bent or diverged.
- Use a RCA output cable (not included) for connecting to POWERED SPEAKERS for louder sound.
- Turn off the “auto-stop” switch If the turntable doesn't move when power on

External Speakers Connection (support Powered Speaker connection via RCA cable)

You can listen to vinyl records or phone music with the built-in speakers when connected, you may also wish to connect it to your home stereo system. Connect the “audio out” RCA ports (21) to the “audio input” on your mixer or Powered Speakers using an RCA cable (not included). Red connector to red jack; White to white

Bluetooth function





For first-time use or re-pairing to a new BT Device, pairing it as below:

- Turn on the Power Switch (8), then press the “ M” button (16) till it enters into Bluetooth mode. The display shows (11)“ bt”.Note: The display (11) shows “-Lod” when searching.
- Turn on the Bluetooth function of your device and enable the search or scan feature to find the Bluetooth pairing name “TE-2017” (Depends device’s model number). Select “TE-2017” from the device list when it appears on your device screen. If required, enter the passcode “0000” to pair (link) with your device.
- It will have a beep sound if connected successfully, then you can play music from your Bluetooth device.
- Press the Button  (13) or (15)  to select the previous or next track.
- Press button  (14) to pause and play music.
- Adjust the volume by volume control (8) or by your Bluetooth device.

Re-pairing to BT:

 
- Turn on the Power Switch (8), then press the “ M” button (16) till it enters into Bluetooth mode. The display (11) shows “ bt”.
- Wait a few seconds until the unit auto paired to the external BT Device. NOTE: If auto-pairing lasts for over a minute, please cancel connecting, then re-searching and re-select “TE-2017” from the device list.
- It will beep if connected successfully.
- During playback, use the control buttons on the paired cell phone to skip the tracks; pause; play... etc.

USB Playback

- Turn on the Power Switch (8), and Insert your USB flash drive to SD/TF slot (17) or USB(18), press the “ M” button(16) till enter USB mode.
- The LED panel (11) will show “-Lod” and then the turntable will begin to play the music files in the USB disk.
- Press the Button  (13) or (15)  to select the previous or next track. Press and hold the Button (13)  or(15) to fast-forward or fast-backward. 
- Adjust volume by volume control (8), it works also as power switch.

Aux in function

- Turn on the Power Switch (8), and Insert the AUX-IN male-to-male cable (not included) to Aux in jack (12) and the other side of aux in cable connects with your device, then you can enjoy the music.

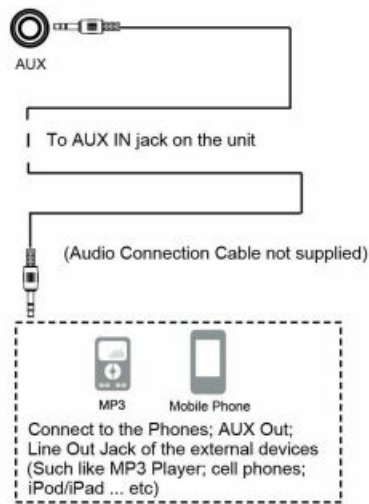

USB Recording

NOTE:

The recording function supports ONLY FAT/FAT32 format and saves as WAV. files please format your USB flash drive into FAT/FAT32 format if the below steps not working or your USB in exFAT or NTFS format. change to another USB flash drive if your USB stick doesn't work.

1. Turn on the Power Switch (8), and Insert your TF/SD card or USB card to slot (17) or (18). Press the “ M” button (16) till enter into Phono mode
2. Then press and hold the “M” button (16) till the display shows ”rEC”, you will hear a one-time beep sound and the ”rEC” display begins to flash it means recording from vinyl to a USB flash drive or TF/SD card.
3. Stop recording. Press and hold the “M” button (16) or press the button (14) , It stop recording and save the recorded songs to USB or SD/TF card as the last song.


MAINTENANCE

How to replace the stylus

The stylus should last about 200-300 hours depending on the usage and maintenance condition . However, it is recommended that replace the stylus as soon as you notice a change in sound quality.(The stylus needle is universal and available on Amazon.com or Walmart.com marketplace)


Removing an old stylus:

1. Set a screwdriver at the tip of the stylus and push down to the direction “A”.
2. Pull the stylus out toward direction “B”.

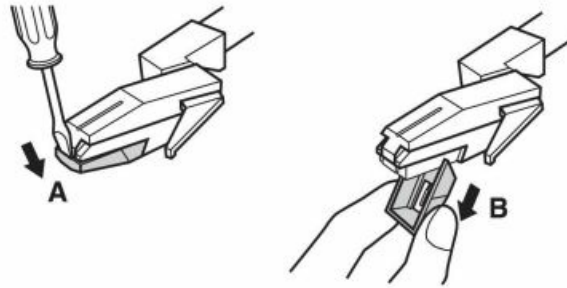

Installing a new stylus

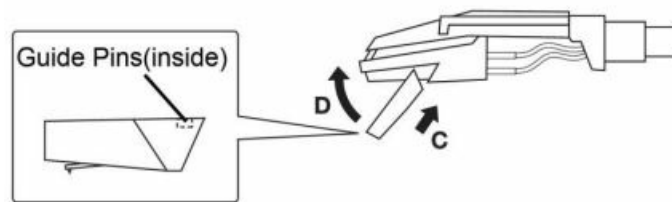

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.



Caution:

- Do not remove or bend the stylus.
- To avoid injury, do not touch the needle.
- Turn off the unit's power before you replace the stylus.
- Keep out of the reach of children.
- Handle with care, as the stylus is delicate. Use of a bent or broken stylus may damage the record and cause the turntable stylus to malfunction.
- Do not expose the stylus to extreme heat.

SPECIFICATIONS

Product Name	All-in-one Bluetooth Turntable Record Player
Speaker Driver	5W *2
Dimension	L14.1" x D11.22"x H4.9"(L360 x D285 x H125mm)
Power	DC5V  1A 
Input Connections supported	1 x 3.5mm aux jack 1 x Bluetooth input 1 x USB slot 1 x SD/TF slot
Power Output	5 Watts
Power Input:	5V/1A
3 Speeds	33; 45; 78 rpm

ACCESSORIES

- 1 x User's Manual
- 1 x AC/DC Adapter (Input: AC 100-240V~; 50/60 Hz; Output: DC 5V, 1A,)
- 1 x 45 RPM Adapter
- 1 x Replacement Stylus Needle


TROUBLESHOOTING

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	RECOMMENDED SOLUTIONS
GENERAL		
No sound in general. The turntable doesn't move when the unit	Volume is muted or power off	Turn on and adjust the Volume knob.
	Wrong mode setup The auto-stop function is ON	Select the proper function Turn off the auto-stop
	The power cable disconnected or loose.	Check the connection or the Power cable.
The unit does not respond to the operation of any button	Under the influence of electrostatic phenomenon, the product may malfunction and require the user to disconnect	Turn off the unit, disconnect the mains plug, and reconnect after a few seconds.
PHONO		
No sound when playing vinyl records	Volume is muted	Adjust the Volume knob.
The sound is breaking up or buzzing.	needle is broken	replace the needle
	Play 7" vinyl record without core adapter	Use adapter when play 7 inch RPM vinyl records
	There are obstacles when rotating	Remove the obstacles and put the device on a horizontal position
BLUETOOTH		
	Your Bluetooth device has not been paired properly.	Re-pairing your Bluetooth device to the device name "TE-2017" from the list

No sound when playing audio via Bluetooth	The volume control of your Bluetooth device is set at too low.	Increase the volume of your Bluetooth device.
	The volume of the audio source is too low.	Increase the volume of the main unit
USB/TF		
No sound in USB/TF mode	Volume is muted	Adjust the volume knob.
Recording doesn't work	Your U-disk is in NTFS format	Change your USB drive to FAT32/FAT format
AUX		
No sound in AUX mode	Volume at minimum.	Volume up the volume knob.
	External devices not connected properly.	Clear contact pins and connect again.

Documents / Resources

 <p>All-in-one Bluetooth Record Player User's Manual BLUETOOTH TURNTABLE WITH SPEAKERS</p>	<p>Electronics Record Player Bluetooth Turntable with Built in Speaker [pdf] User Manual Record Player Bluetooth Turntable with Built in Speaker, Record Player, Bluetooth Turntable with Built in Speaker, Turntable with Built in Speaker, Built in Speaker</p>
---	---

References

- [Amazon. Spend less. Smile more.](#)
- [Walmart has deals on the most-wanted gifts](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.