

**ELEMENTAL
MACHINES**
EB1,EB2
Element-B For
Incubators



ELEMENTAL MACHINES EB1,EB2 Element-B For Incubators Installation Guide

[Home](#) » [ELEMENTAL MACHINES](#) » ELEMENTAL MACHINES EB1,EB2 Element-B For Incubators Installation Guide 

Contents

- [1 ELEMENTAL MACHINES EB1,EB2 Element-B For Incubators](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Package Contents](#)
- [5 Safety Information](#)
- [6 Installation Instructions](#)
- [7 References](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



ELEMENTAL MACHINES EB1,EB2 Element-B For Incubators



Product Specifications

- **Models:** EB1, EB2
- For Matheson PM-24 Manifold Alarm
- **Applicable Asset Models:** PM-24
- **Package Contents:**
 - Element-B (Qty: 2)
 - Connection Cable
 - Mounting Plate (Qty: 2)

Product Usage Instructions

Installation Instructions:

1. Receiving the Shipment:

1. Set up the Elemental Machines system and verify the dashboard account.
2. Upon shipment, check the Elemental Insights™ Dashboard for device status.
3. Inspect contents upon arrival and report any damages.
4. Verify Element-B configuration as Normally Closed (NC).
5. Ensure proximity to Elemental Machines Gateway within 30 meters.

2. Attaching Connection Cable to Asset:

Attach the connection cable to the 'output' port on the Matheson manifold alarm.

3. Attaching Connection Cable to Element:

Connect the cable's thermocouple end to Element-B, ensuring proper prong alignment.

4. Positioning the Element B:

1. Determine optimal placement for Element-Bs for wireless connectivity.
2. Securely position Element-Bs using magnets or adhesive metal mounting plates.

Package Contents

- Element-B (Qty: 2)
- Connection Cable
- Mounting Plate (Qty: 2)

Safety Information

Review and abide by the safety information found in the Element-B and asset user manuals. Ensure compliance with your company's safety best practices, which may include de-energizing equipment before working with electrical connections. Tidy the connection cable to prevent tripping hazards.

Installation Instructions

Receiving the Shipment

1. If this is your first time setting up the Elemental Machines system, you will receive an email for your dashboard account verification. Save this email for when the devices arrive.
2. When devices are shipped, they will be added to your Elemental Insights™ Dashboard with default names. When you first log in, you will see all your devices with a 'disconnected' status.
3. When devices arrive, carefully remove the contents from the packaging. If any of the contents look damaged, please send a picture to help@elementalmachines.com.
4. If you have ordered multiple Element-Bs, ensure the Element-B being used is configured as Normally Closed (NC). This can be verified by checking the device label, the dashboard under 'Machine Model', or the packing list sent with your shipment. Both Normally Open (NO) and Normally Closed (NC) configurations are available and may be shipped in the same box. These are not interchangeable.
5. Ensure there is an Elemental Machines Gateway set up within 30 meters of the Element-B. Some installations may require shorter distances.
Depending on your location and application, your Gateway type may vary. Please follow the setup instructions in your GW2 or GW3 User Manual.

Attaching Connection Cable to Asset

Attach the provided connection cable to the port on the underside of the Matheson manifold alarm labeled 'output' (located in the center). You may need to remove the port dust cover before attaching the connector.

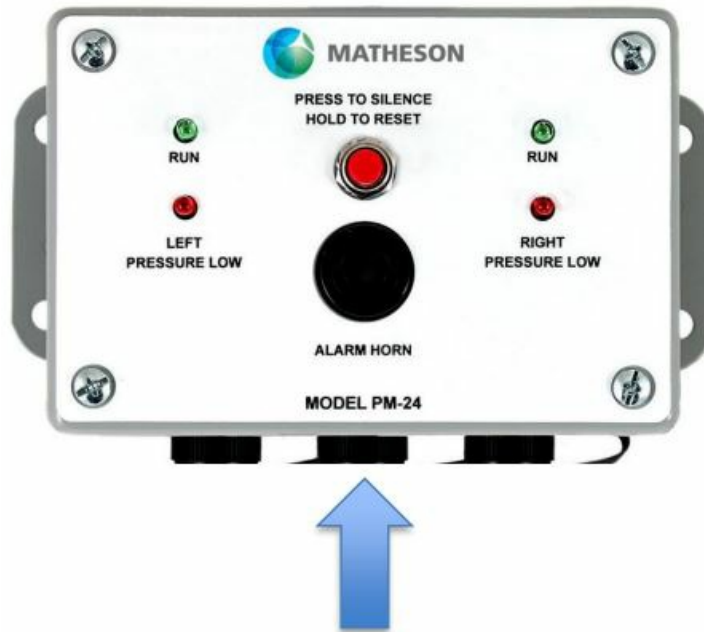


Figure 1: (PM-24 Pressure Monitor, 2024)

Attaching Connection Cable to Element

1. The provided connection cable has two orange Thermocouple connectors. Refer to the label on each side of the cable for left and right tank alarms. Select one Element-B for each side and label accordingly.
2. Plug the thermocouple end (Figure 2) of the connection cable into Element-B. Ensure the (-) and (+) prongs of the thermocouple end are properly matched.



Figure 2 Thermocouple end of Element-B connection cable

3. Pull the battery tab on the Element-B.

Positioning the Element-B

1. Determine where the Element-Bs should be placed so that they are not blocked, which allows a better wireless connection, and so that the connection cable is tidy.
2. Securely position the Element-Bs in the chosen location. Each Element-B has magnets that make it easily mountable to magnetic surfaces. If applicable, an adhesive metal mounting plate available from EM may be used.

Programming Alerts

1. Refer to the asset user manual for which alarm conditions it can detect.
 2. Set up alert rules on the Elemental Insights™ Dashboard for Elemental-B. Guidance on how to do so is available in the Support section of the dashboard.
- NOTE:** Alerts must be programmed on both the asset and the Elemental Insights™ Dashboard to receive threshold alerts through the Elemental Machines platform.

References

PM-24 Pressure Monitor. (2024). From Matheson: <https://store.mathesongas.com/pm-24-pressure-monitor/>


Copyright © 2024 Elemental Machines
help@elementalmachines.co.m

FAQ

Can Element-B devices be used interchangeably in Normally Open (NO) and Normally Closed (NC) configurations?

No, Element-B devices must be used according to their configured state as NO or NC, as specified on the device label, dashboard, or packing list.

Documents / Resources

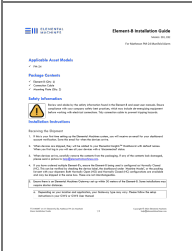	<p>ELEMENTAL MACHINES EB1,EB2 Element-B For Incubators [pdf] Installation Guide EB1, EB2, EB1 EB2 Element-B For Incubators, EB1 EB2, Element-B For Incubators, For Incubators</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.