



Elite Screens Visual Sound ZRC1-RF RF Remote Controller User Guide

[Home](#) » [Elite Screens Visual Sound](#) » Elite Screens Visual Sound ZRC1-RF RF Remote Controller User Guide 

Contents

- [1 Elite Screens Visual Sound ZRC1-RF RF Remote Controller](#)
- [2 Infrared \(IR\), Radio Frequency \(RF\) and Wall-box controls](#)
 - [2.1 ZRC1-IR IR remote control](#)
 - [2.2 ZRC1-RF RF remote controller](#)
- [3 How to change the RF code](#)
- [4 FCC Warning](#)
- [5 ZRC1-WB Wall-box controller](#)
- [6 Programming Key Instructions:](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




Elite Screens Visual Sound ZRC1-RF RF Remote Controller




Infrared (IR), Radio Frequency (RF) and Wall-box controls

ZRC1-IR IR remote control

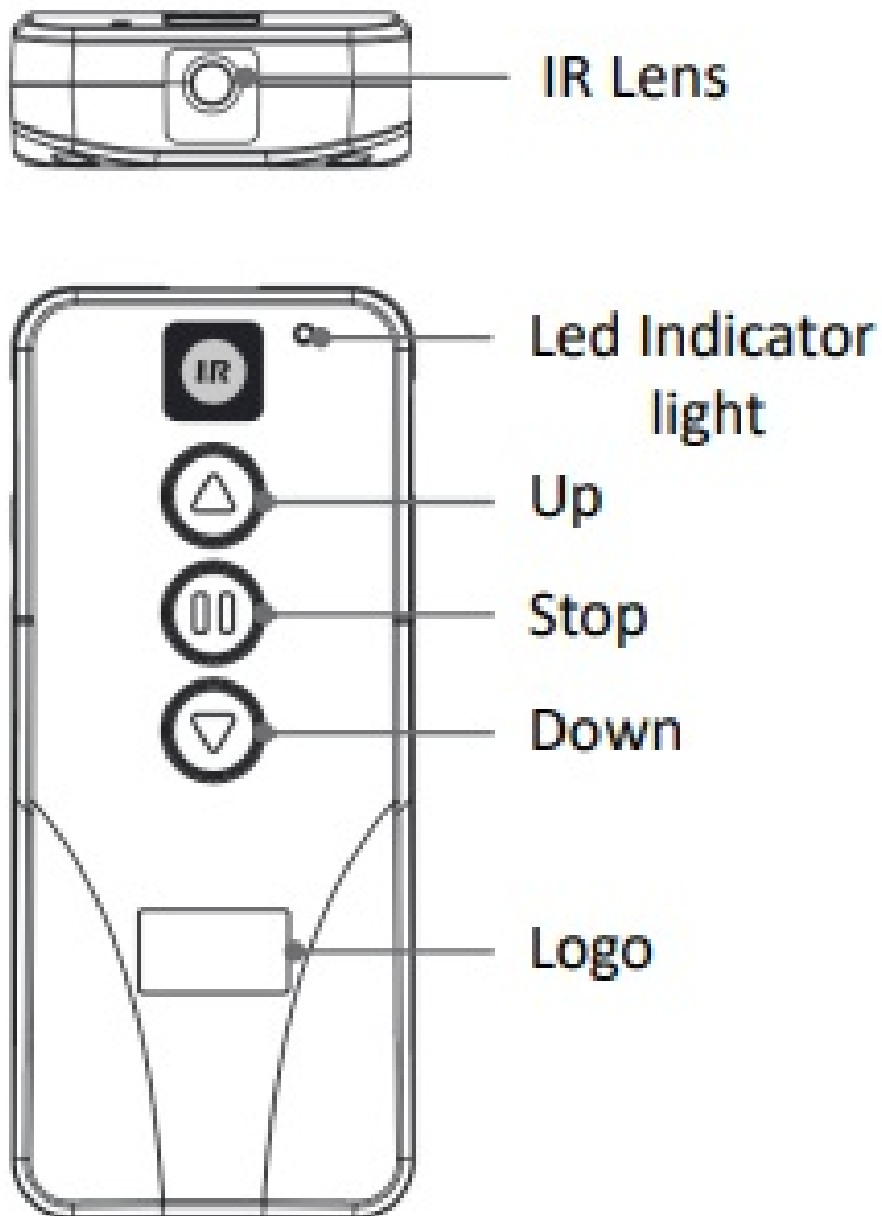

ZRC1-RF RF remote controller

Note: IR remote operation requires a clear line of sight. Assure the IR receiver is not obstructed. When operating the screen with the IR remote, point the “IR Lens/IR LED” directly to the screen’s “IR receiver”.

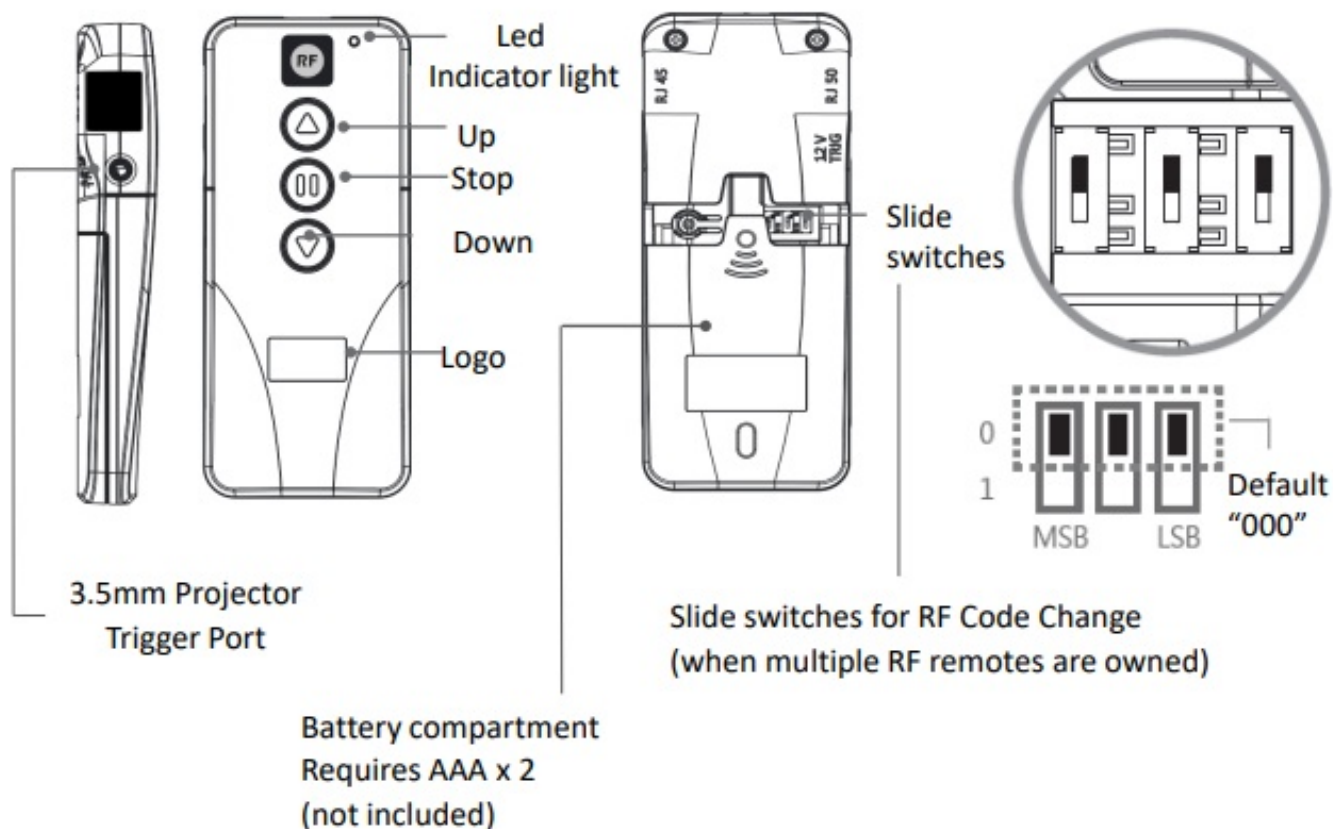

How to change the RF code

1. Remove the batteries
2. Change switch,
3. Insert the batteries
4. Synchronize it with the wall box (Refer to the Wall-box controller guide for pairing.)

FCC Warning


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, **the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ZRC1-WB Wall-box controller

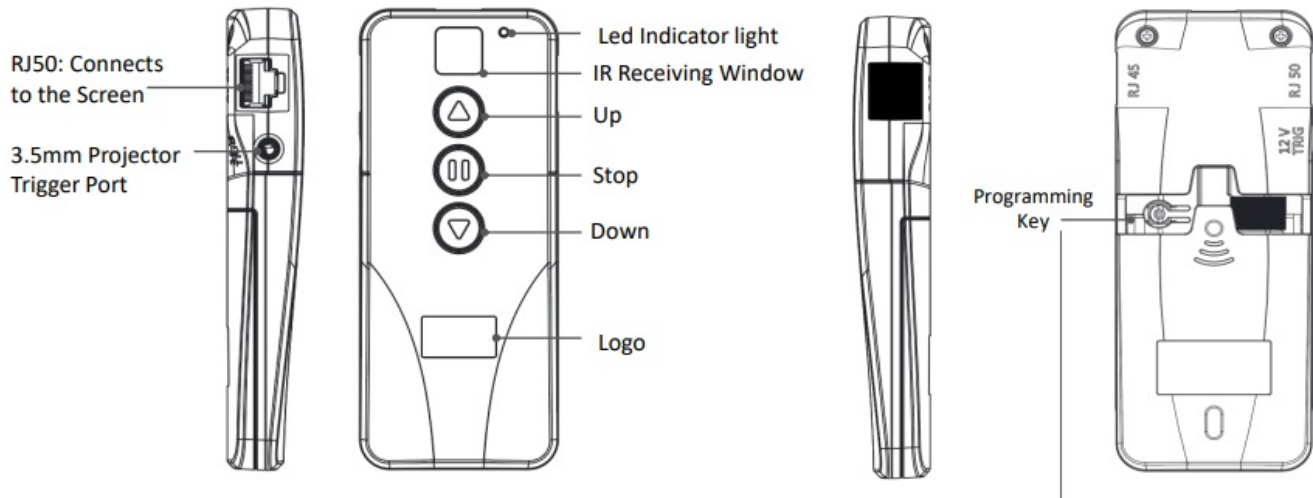

Programming Key Instructions:

1. **How to Preset the Screen's Drop Position:** Drop the screen to the desired position you want to set it at.
Press & hold the **"Programming Key"**, then press the **"down key"**.
2. **Clear/Reset the Screen's Drop Position:** Press & Hold the **"Programming Key"**, then press the **"stop key"**.
3. **How to Synchronize/pair a new RF remote:** Press & Hold the **"Programming Key"**, then press the **"Up key"** on the wall-box (wall-box LED flashes).
4. Then press the **"Up key"** on the RF remote.
5. The wall-box LED will flash 5 times, to indicate the RF remote has been properly synchronized/paired.

Documents / Resources

	<p>Elite Screens Visual Sound ZRC1-RF RF Remote Controller [pdf] User Guide ZRC1-RF, ZRC1RF, 2AUGVZRC1-RF, 2AUGVZRC1RF, ZRC1-RF RF Remote Controller, ZRC1-RF, RF Remote Controller, Remote Controller, Controller</p>
--	--