


CLR 3 Series
Kestrel Tab
Tension 2



ELITE SCREENS CLR 3 Series Kestrel Tab Tension 2 User Guide

[Home](#) » [ELITE SCREENS](#) » ELITE SCREENS CLR 3 Series Kestrel Tab Tension 2 User Guide 

Contents

- [1 ELITE SCREENS CLR 3 Series Kestrel Tab-Tension 2](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 SCREEN MAINTAINANCE](#)
- [4 FCC Regulatory Compliance](#)
- [5 PARTS IDENTIFICATION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



ELITE SCREENS CLR 3 Series Kestrel Tab-Tension 2



IMPORTANT SAFEGUARDS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

Caution

The screen's Black Bottom Drop is already set to its maximum drop distance. There is NO extra Black Bottom Drop in the roller. Please be aware of this as it will void your warranty with Elite Screens®

- Unapproved changes or modifications (except for cutting the power cord for hardwire installations) to this unit are prohibited and will void your warranty.
- To avoid damaging the unit, do not use any unauthorized accessories not recommended by the supplier.
- Handle the unit carefully during transportation to avoid any damage.
- To ensure safe and reliable operation, direct connection to a properly grounded power source is advised.
- The power outlet supplying power to the unit should be close to the unit and easily accessible.
- Do not install the unit on uneven or inclined surfaces.
- Do not put heavy objects on the power cord and position it properly to avoid creating a trip obstacle.
- Never overload the power cord to prevent an electric shock or fire due to a loose contact or a short circuit.
- There are no user-serviceable parts in this unit. Do not attempt to disassemble this unit by yourself. No one except authorized technicians can open and make repairs to this unit.
- Make sure the power source this unit is connected to has a continuous power flow.
- If there is a need to use an extension cord, make sure the cord has an equal rating as the appliance to avoid overheating.
- Do not handle the power plug when your hands are wet, or your feet are in contact with water.

- Do not use this unit under the following circumstances.
- Disconnect the power cord under the conditions of heavy rain, wind, thunder, or lightning.
- Avoid direct Sunshine, rain showers, and moisture.
- Keep away from fire sources and high temperatures to prevent this device from overheating.
- Cut off the power supply first before transportation or maintenance.
- Fully disconnect from the power supply when the unit is not in use for a long period, as should be done with any other electric household appliance.
- To avoid possible injury and/or an electric shock, do not attempt to use the screen if there is obvious damage or if there are any evident broken parts.
- Keep hands clear from the closing panels.
- Keep away from children when the screen is in operation.

WARNING

Individual modifications to this product are prohibited and will void the supplier's warranty. Please contact the Elite Screens® Customer Service Team with any questions.

SCREEN MAINTAINANCE

Dust, dirt, and scratches on the projection screen surface will affect the quality and performance of the projection image. For optimal results, we advise you to pay attention to the following instructions.

1. The screen surface has a horizontal structure. DO NOT wipe the screen up and down or in a circular motion.
2. Wipe very gently when needed from left to right only.
3. Please clean the dust on the screen surface with a soft brush or microfiber cloth (a rough towel or cloth may damage the screen's surface).
4. Gently wipe the screen with a lightly moistened microfiber cloth with mild soap diluted in water.

Notes

The following precautions should be always followed to avoid damaging the material, which is not covered under warranty.

- NEVER touch the screen material with your bare hands as it will leave oily fingerprints that are permanent and not removable. Use cotton gloves when handling the material.
- NEVER scratch the material, as it will leave permanent markings on the screen's surface.
- NEVER point to the screen material with a fingertip or other sharp objects to prevent damage to the material.
- NEVER use acetone, benzene, alcohol, or any other organic solvents to clean the screen material. Using such chemicals will permanently damage the screen.

FCC Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device is susceptible to receiving interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

 
residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

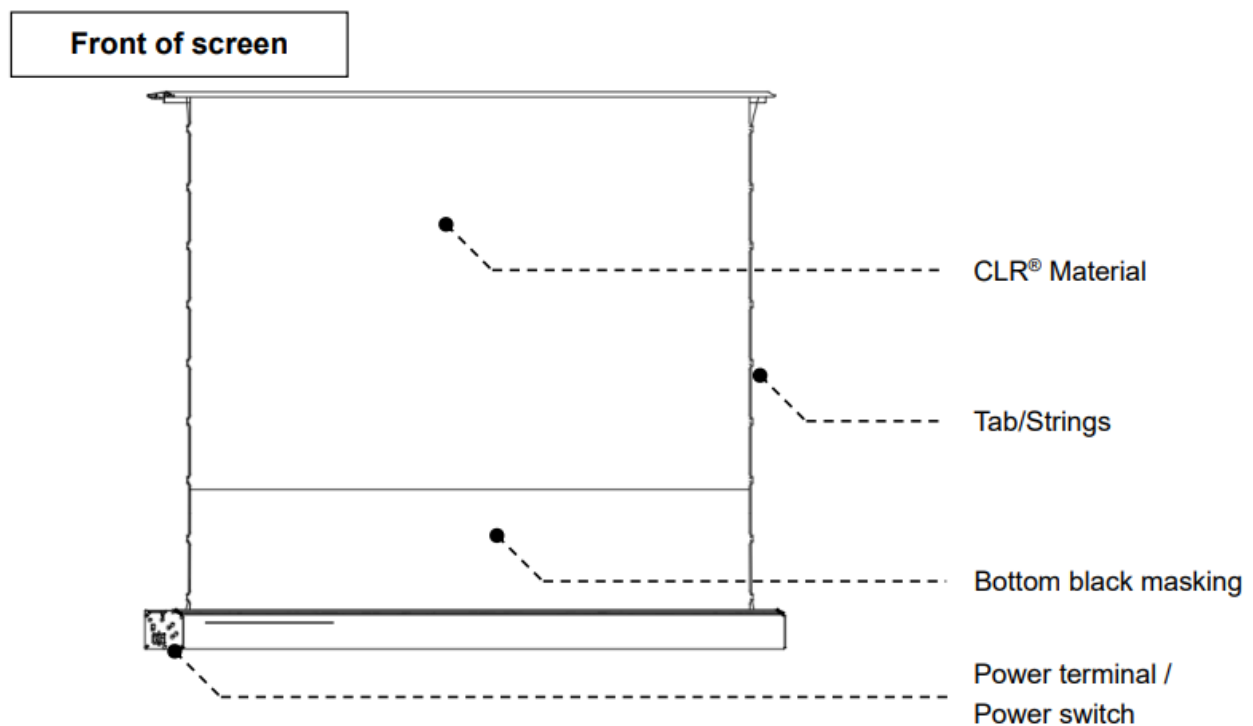


 
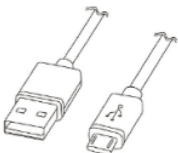 
PARTS IDENTIFICATION

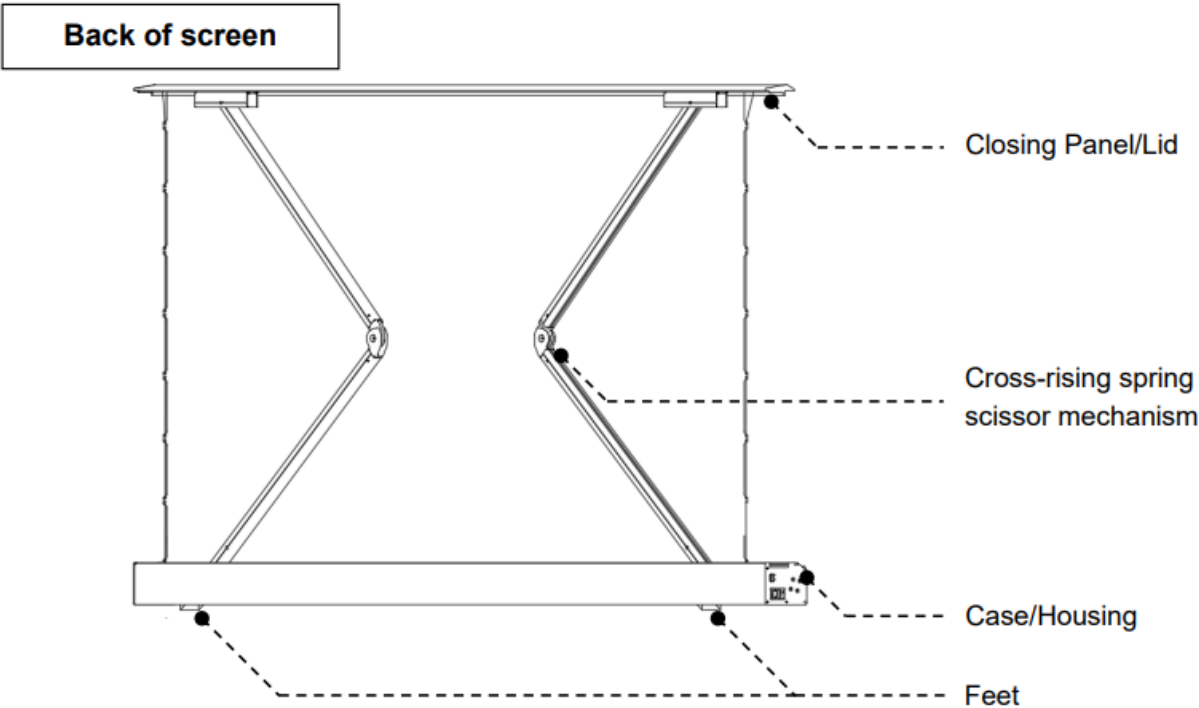



Note
Please always store the screen flat horizontally. Never store the screen in a vertical position as it will permanently damage the screen’s structure, shift the material, and cause wrinkles/folds which will void the warranty.

Kestrel Tab-Tension 2 CLR® Series | Controls and Accessories

A. Radio Frequency (RF) Remote control	B. Infrared (IR) Remote Control	C. IR extended receiver	D. Radio Frequency (RF) USB wireless trigger	* E. Micro USB Charging Cable
		Installed inside housing near circuit board box 		

 
Included with rechargeable remote version only

SCREEN OPERATION

Electric Current: Depending on your region, the screen will operate in either 110v or 220v voltage.

1. After ensuring the power outlet & screen are compatible (voltage), plug the power cord into the power outlet.
2. Once the screen has power, you'll be able to control it using any of the 4 methods described below.

4 ways to control your Kestrel Tab-Tension 2 CLR® Screen

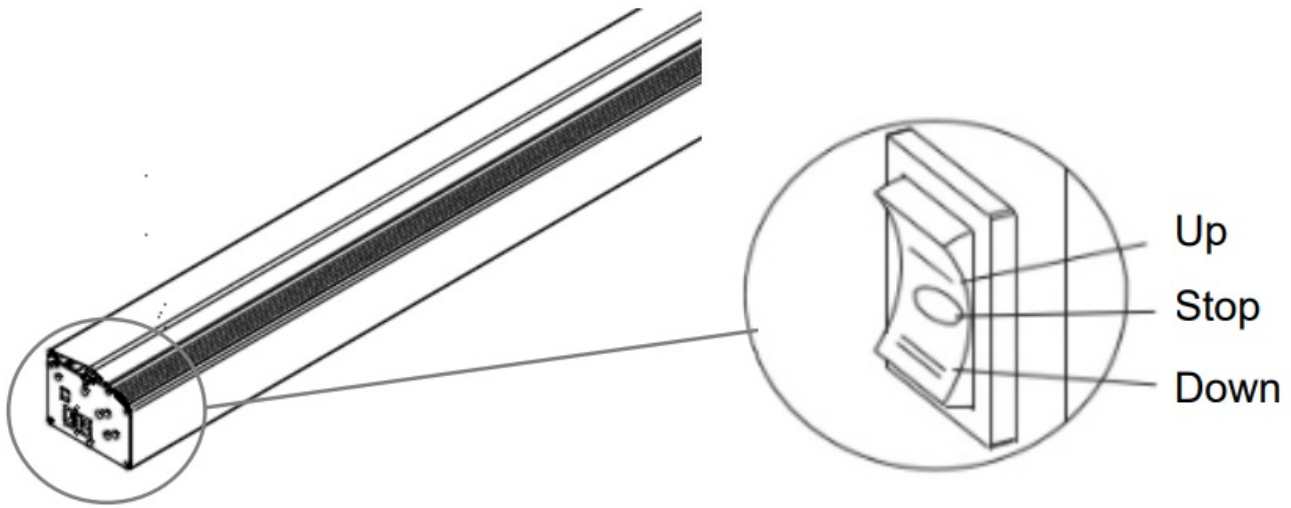

1. Manual Operation Switch: The left side of the screen's housing includes a UP/STOP/DOWN switch to raise, lower, and stop the screen without the use of the RF/IR remote.
2. RF Remote Control (Item A): The RF (A) remote is best used when the screen is concealed or when long-distance control is required.
3. The RF technology therefore is more versatile as it does not require line of sight to operate the screen.
4. IR Remote Control (Item B) and IR Eye Receiver (Item C): The IR remote (B) requires a direct line of sight through the screen's IR receiver.
5. Place the IR Eye Receiver (C) in a suitable location free from obstruction. Then point the IR remote to the IR Eye receiver to operate the screen. IR Eye Receiver has been installed inside the housing on the left side (power terminal side)
6. USB RF wireless trigger (Item D): The RF wireless trigger (D) can synchronize your projector's power cycle to the screen's UP/DOWN operation.

The trigger has been synchronized to your electric screen.

 
- Connect the RF wireless trigger to the projector's USB port.
- Make sure to enable this feature if needed in your projector's menu settings.
- Power ON the projector. The screen should raise (up) the screen automatically.
- Power OFF the projector. The screen should descend (down) the screen automatically.

NOTE

- When powering off the projector, ensure it is completely powered off (ex. fan off), then the screen will retract automatically.
- If the motorized screen does not automatically drop or retract, repeat the process from step one.
- Remote control battery operated and charging instructions:
Note: One or the other type is included not both types.


Rechargeable version

Charge the RF or IR remote by plugging the Micro USB Charging cable (Item E) into any USB power source and the left side of your RF or IR Remote Control. While charging, you will see a solid red light above the touch-sensitive buttons. For your convenience, you may use the remote while it charges. Note: The red light may dim while charging.

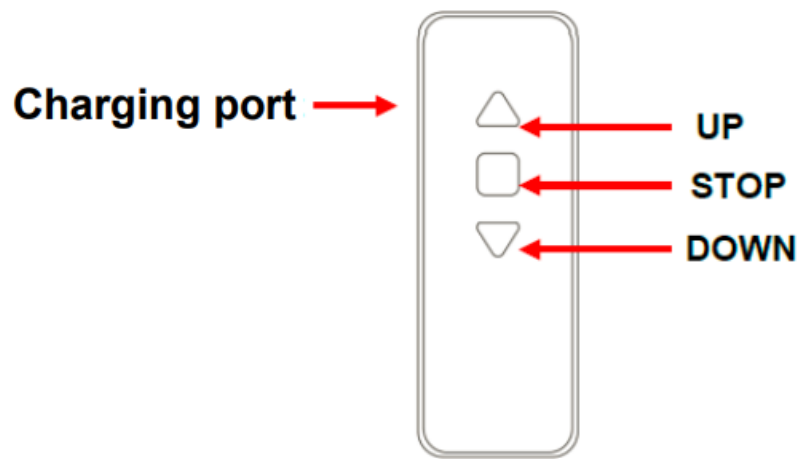

Battery version

 Follow the steps below to replace the CR232 button cell batteries (2x required) on the remote control.

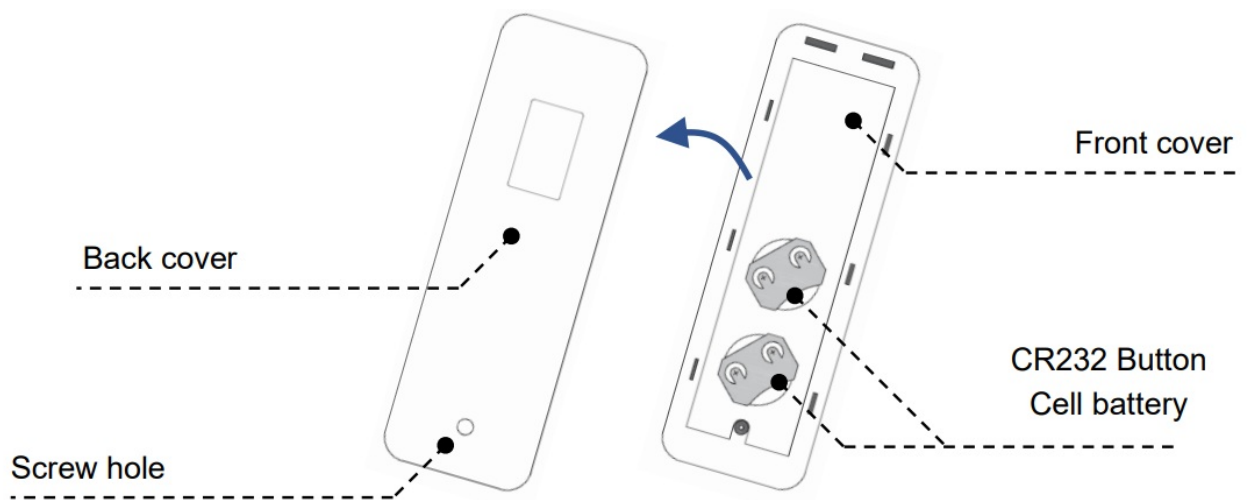

- Unscrew the back cover of the remote control.
- PUSH UP to remove the back cover.
- Replace the old batteries with new batteries.
- Put the back cover on the remote control and secure it with the screw.
- Check the operation of the remote control to verify screen responds to the commands.

Notice to Installer

 
PROPER PROJECTOR PLACEMENT

The CLR® 3 is exclusively for tabletop/bottom-mounted ultra-short throw projectors. See the illustrations below for limits and criteria. Tabletop mounted ultra-short throw projection illustration


IMPROPER PROJECTOR PLACEMENT


1. Overhead placement or a standard throw projector will make the image very dark on account of the screen's absorbent layer deflecting light that is not aligned with its reflective angle. 1)

CEILING (OFF-AXIS) LIGHT SOURCE

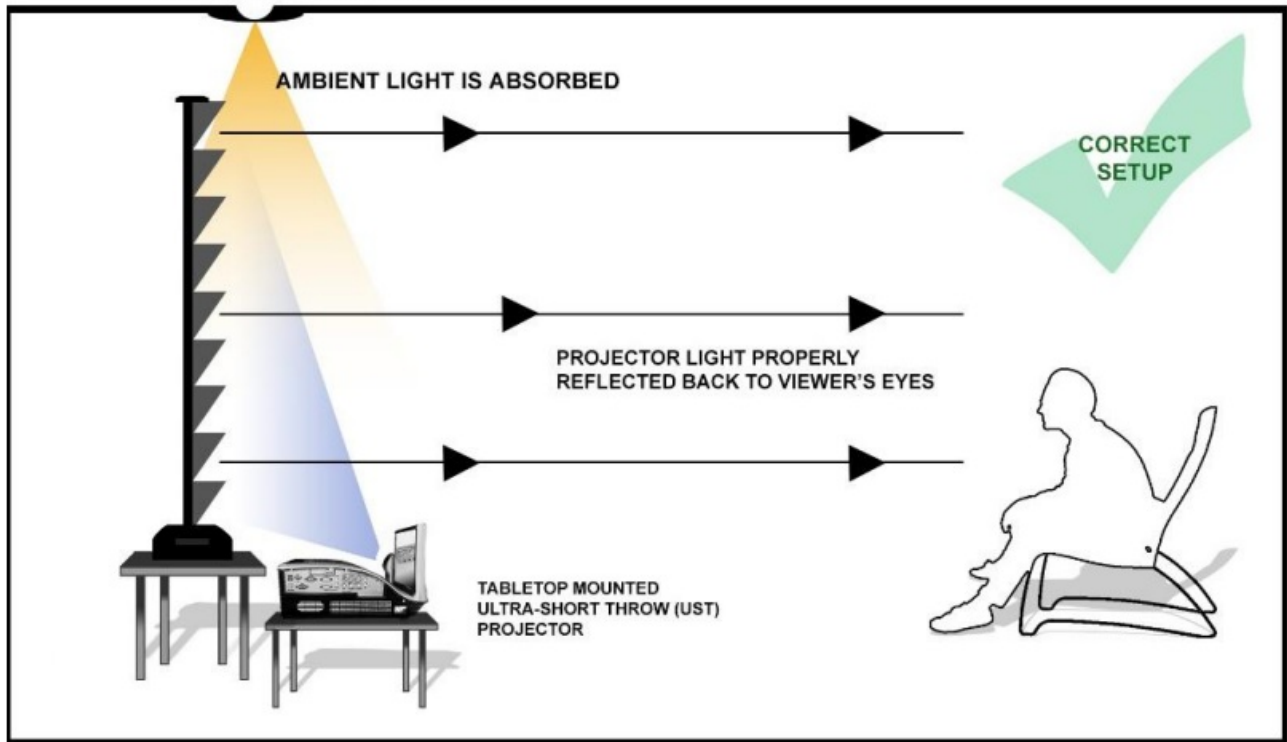

CEILING (OFF-AXIS) LIGHT SOURCE

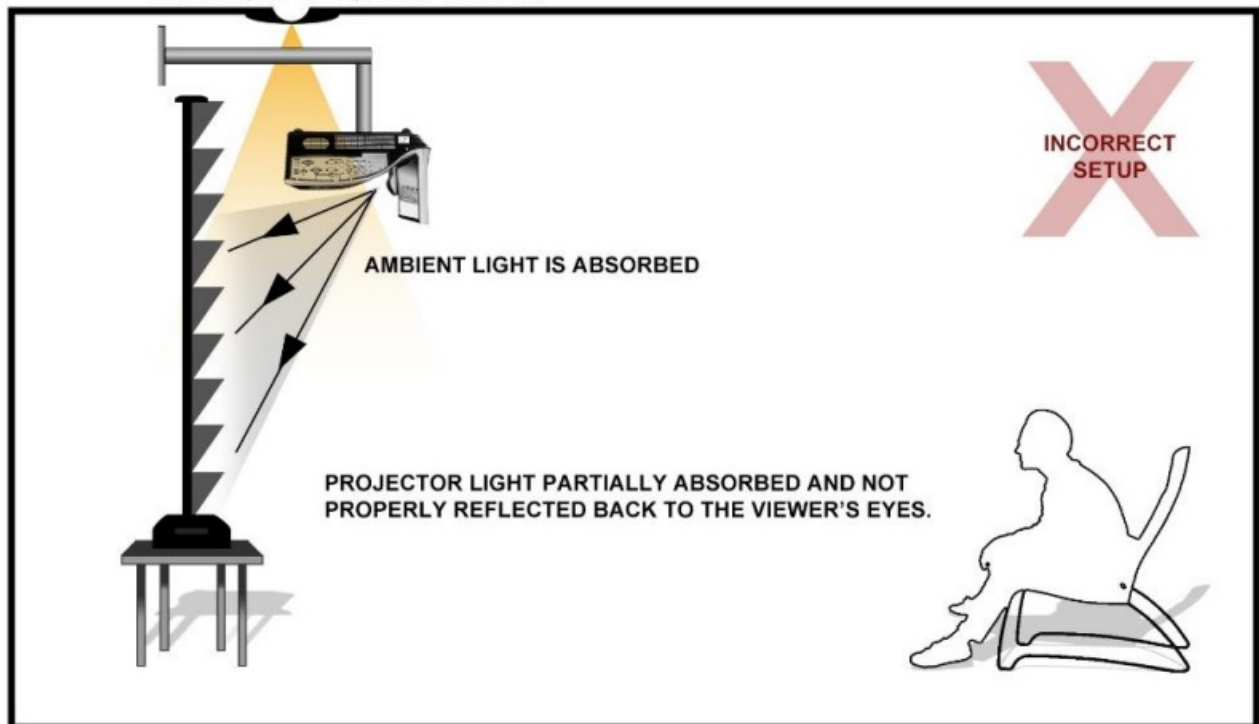 

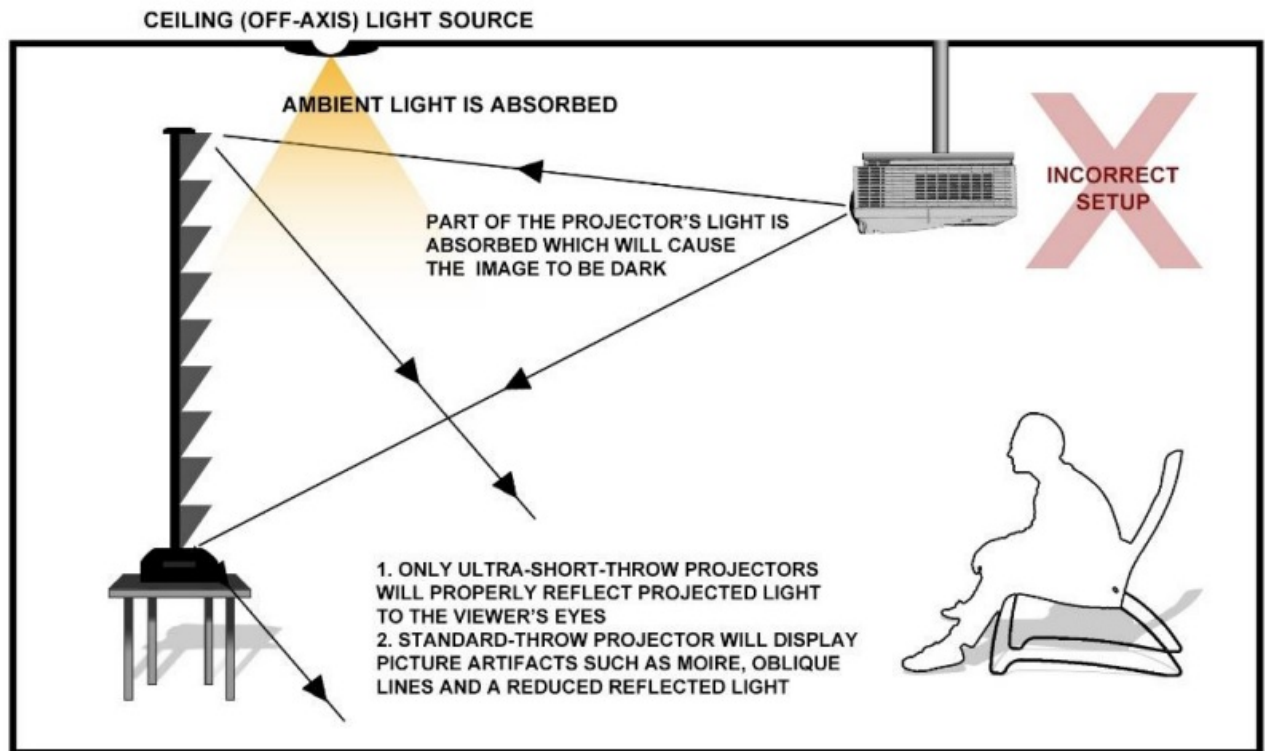 


2. Ceiling-mounted Ultra-short throw projector illustration.
3. Ceiling mounted Short and Standard throw Projector Illustration.

Note


Images are not up to scale and are for illustration purposes only

 ANTI-PINCH SAFETY FEATURE

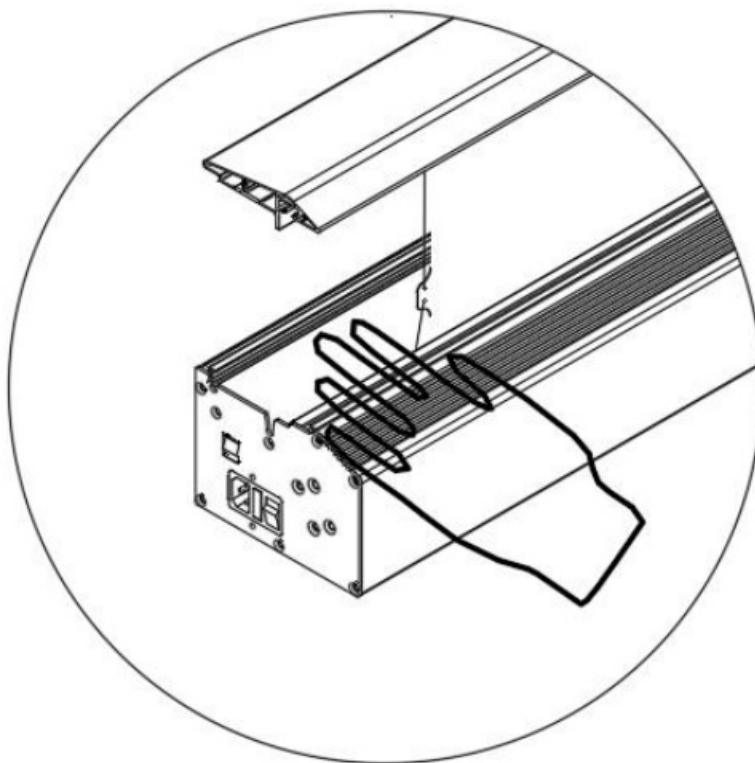

Prevent injury or damage to the screen when an object interferes with the screen's descent during its operation. The screen is equipped with an anti-pinch safety feature which prevents the closing panel/lid from stopping when it detects an object. For more information, technical support, or your local Elite Screens® contact, please visit <http://www.elitescreens.com/>

 Documents / Resources

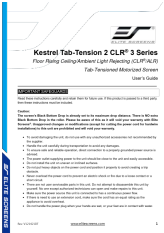	<p>ELITE SCREENS CLR 3 Series Kestrel Tab Tension 2 [pdf] User Guide</p> <p>CLR 3 Series Kestrel Tab Tension 2, CLR 3 Series, Kestrel Tab Tension 2, Tab Tension 2, Tension 2</p>
---	--

References

- [Elite Screens 4K/ 8K Cinema Quality Projector Screens | Elite Screens](#)
- [Elite Screens 4K/ 8K Cinema Quality Projector Screens | Elite Screens](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.