



ELITE SCREENS Z Type Pull-Down Projector Screen User Guide

[Home](#) » [ELITE SCREENS](#) » ELITE SCREENS Z Type Pull-Down Projector Screen User Guide



Contents [[hide](#)]

- [1 Screen Installation](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Screen Installation

A. Flush Wall Installation

 
1. Measure the distance of the keyholes on the end caps and mark the location of where the screen is to be installed for the pre-drilled hole.

Note: You can also refer to the dimensions table on the website for this measurement


(https://elitescreens.com/wp-content/uploads/ES_Site_Manual_ZType.pdf)

2. Drill a hole in the marked areas, insert the proper screw and leave about 1/8 of an inch from the wall to mount the screen.
3. Mount your screen from the keyhole located on the back of the screen's left and right end caps.

Keyhole located on back of end cap

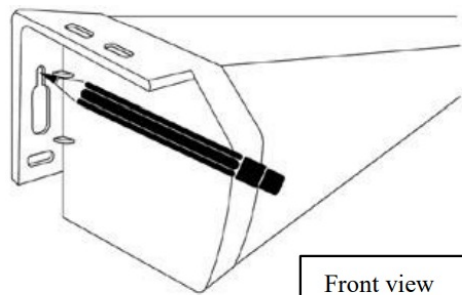


Front view

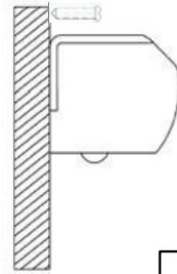 

Side view

B. Flush Ceiling Mounting

 
1. Remove D-rings from the left and right end caps.
2. Measure the distance between the top screw holes located on top of the end caps.
3. Mark the location of where the screen is to be installed for the pre-drilled hole.
4. Drill your hole, use a hollow wall anchor if needed
5. Insert the proper screw into the drilled hole and secure the screen to the ceiling.

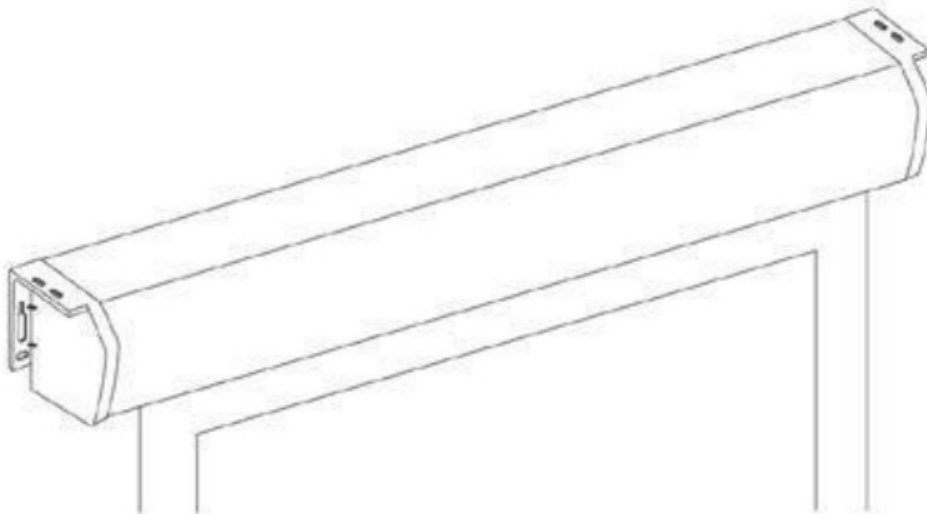

C. Suspended Ceiling Installation


1. Hang the screen from the ceiling using chains (not included) and hooking them to the D-ring located on each end cap.

 Note: D-rings or U-bolts are not included with models above 135" due to weight capacity.

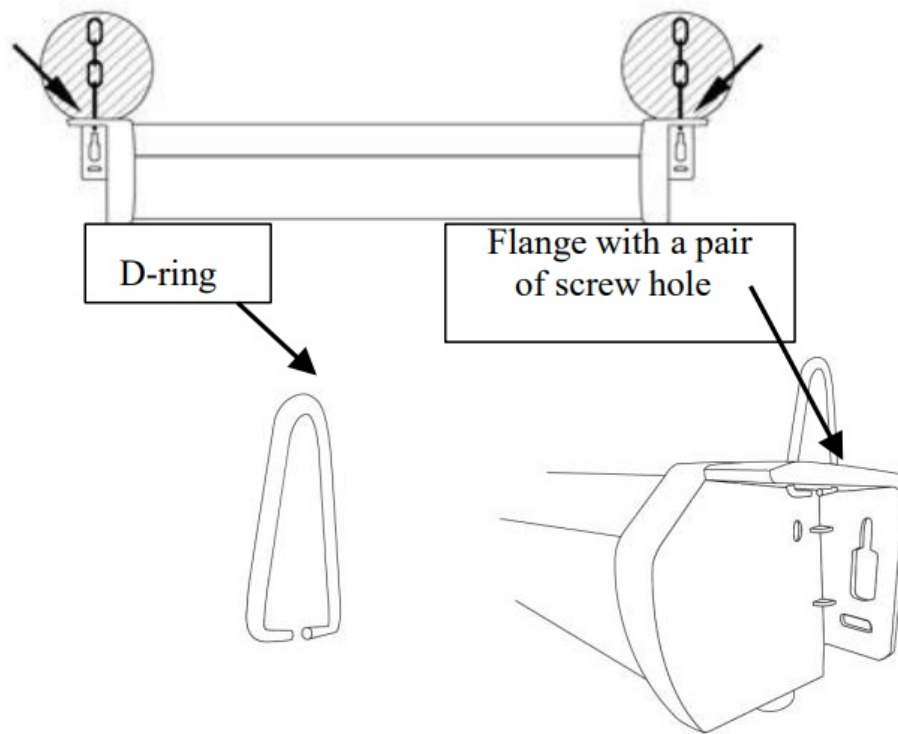

Note: Please consult with a hardware store professional for proper screws for your specific wall or ceiling installation. The installer must ensure that proper mounting hardware and fasteners used are of adequate strength and suitable for the mounting surface.

 1. Pull the screen down from the lanyard or from the handle only at a 90-degree angle. The screen is designed to lock at different intervals. To achieve this, make sure to pull straight down and allowing the screen to come up to lock into place. Do not attempt to pull the screen down by the surface or touch the screen, as it will damage the screen and void the warranty.

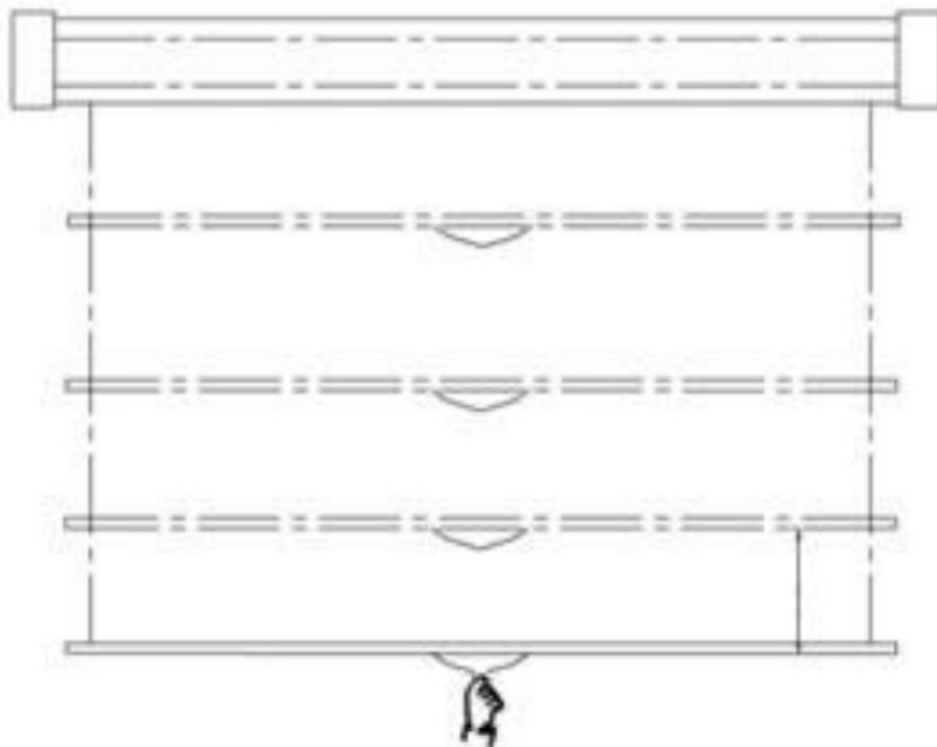

2. To retract the screen, simply pull the screen down more than two inches with a quick snap of the wrist and allow the screen to slowly retract itself back up into the housing.

Attention: When retracting, always pull the screen down at a 90-degree angle. If ever the screen feels stuck, keep


in mind that the screen’s mechanism is new and needs to be run up/down a few times to loosen up. If this happens, carefully, with a little force, yank the screen straight down to unlock the mechanism.

RETRACTION TIP: If you are not able to pull the screen down two inches when attempting to retract it, give the screen a quick yank downwards with a little bit of force. Please be sure to not stand directly under the housing of the unit when yanking down on the screen.

For more information or tech support, please visit www.elitescreens.com

Rev. 070822-BR
www.elitescreens.com

 Documents / Resources
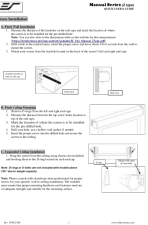
| | |
|---|---|
|  | <p>ELITE SCREENS Z Type Pull-Down Projector Screen [pdf] User Guide Z Type, Pull-Down Projector Screen, Projector Screen, Pull-Down Screen, Screen, Z Type Projector Screen</p> |
|---|---|

References

- [Cinema Quality Projector Screens | Elite Screens](#)