



## Elitech Multi Use Temperature Data Logger User Manual

[Home](#) » [Elitech](#) » Elitech Multi Use Temperature Data Logger User Manual 

Elitech Multi Use Temperature  
Data Logger User Manual

**USER MANUAL**  
RC-4 / RC-4HC




## **Contents**

- [1 Overview](#)
- [2 Specifications](#)
- [3 Operation](#)
  - [3.1 Battery Activation](#)
  - [3.2 Install Probe](#)
  - [3.3 Install Software](#)
  - [3.4 Configure Parameters](#)
  - [3.5 Start Logging](#)
  - [3.6 Stop Logging](#)
  - [3.7 Download Data](#)
  - [3.8 Reuse the Logger](#)
- [4 Status Indication](#)
  - [4.1 Buttons](#)
  - [4.2 LCD Screen](#)
  - [4.3 LCD Interface](#)
  - [4.4 LCD-Buzzer](#)
- [5 Battery Replacement](#)
- [6 What's Included](#)
- [7 Appendix](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

## **Overview**

The RC -4 series are multi – use data loggers with external temperature probe, where RC-4 is a temperature logger, RC-4HC is a temperature and humidity logger.

They can be used to record temperature/humidity of foods, medicines and other goods during storage, transportation and in each stage of the cold chain including cooler bags, cooling cabinets, medicine cabinets, refrigerators, laboratories, reefer containers and trucks.

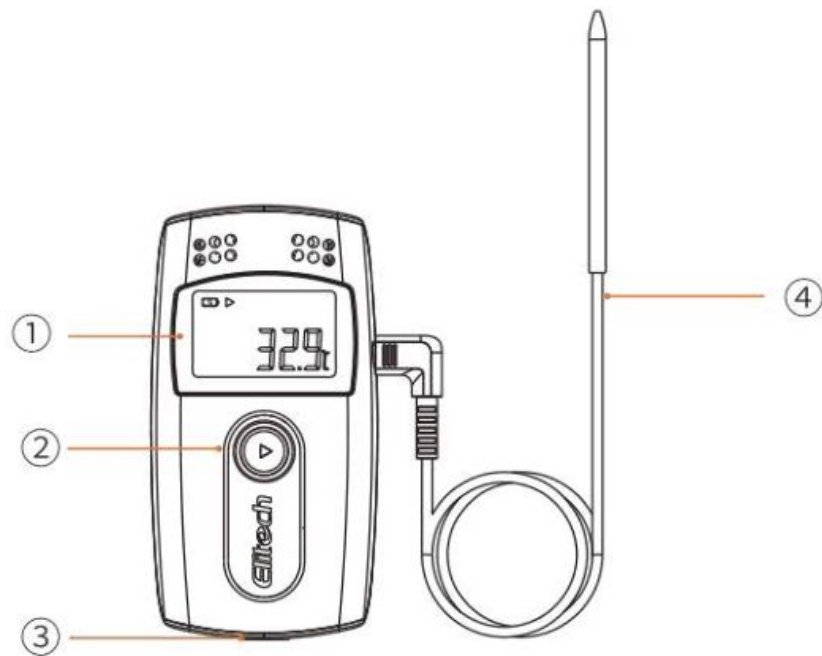

---

① LCD Screen

---

② Button

---

---

③ USB Port

---

④ External Temperature Probe

---

## Specifications

Model	RC-4	RC-4HC
Temperature Measurement Range	-30°C~+60°C (-22°F~140°F) -40°C~+85°C (-40°F~185°F)	
Temperature Accuracy	±0.5°C/±0.9°F (-20°C~+40°C) ±1°C/±1.8°F (others)	
Humidity Measurement Range		0~100%RH
Humidity Accuracy		±3%RH (25°C, 20~80%RH) ±5%RH (others)
Resolution	0.1°C/°F	0.1°C/°F; 0.1%RH
Memory	Maximum 16,000 points	
Logging Interval	10 seconds to 24 hours	
Data Interface	USB	
Start Mode	Press button; Use software	
Stop Mode	Press button; Auto stop; Use software	
Software	ElitechLog for macOS & Windows system	
Report Format	PDF/EXCEL/TXT* by ElitechLog software	
Power	CR2450 battery/USB	
Shelf Life	2 years	
Certification	EN12830, CE, RoHS	
Dimensions	84 x 44 x 20 mm	
Weight	60g	


*\*TXT for Windows ONLY*

## Operation

### Battery Activation

1. Turn the battery cover counterclockwise to open it .


2. Gently press the battery to hold it in position, then pull out the battery insulator strip.
3. Turn the battery cover clockwise and tighten it.

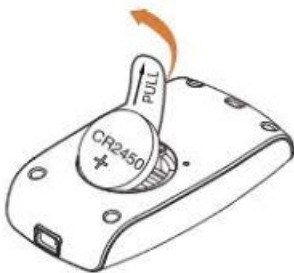

### Install Probe

By default, RC-4/4HC uses the internal sensor to measure temperatures.

If you need to use the external temperature probe, simply install it as shown below:

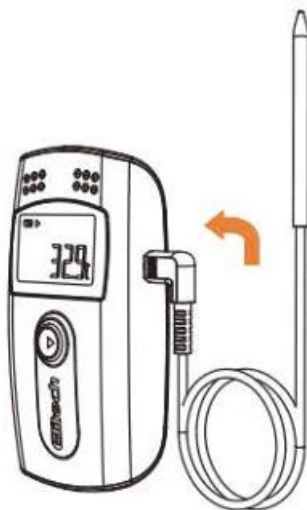

### Install Software


Please download and install the free Elitechlog software (macOS and Windows) from Elitech US:

[www.elitechstore.com/pages/download](http://www.elitechstore.com/pages/download)

or Elitech UK: [www.elitechonline.co.uk/software](http://www.elitechonline.co.uk/software)

or Elitech BR: [www.elitechbrasil.com.br](http://www.elitechbrasil.com.br).

### Configure Parameters

First, connect the data logger to your computer via USB cable, wait until the  icon shows on the LCD; then configure via:

#### Elitechlog Software:

- If you do not need to change the default parameters (in Appendix); please click Quick Reset under Summary menu to synchronize local time before usage;
- If you need to change the parameters, please click the Parameter menu, enter your preferred values, and click the Save Parameter button to complete the configuration.

**Warning! For first time user or after battery replacement:**

To avoid time or time zone errors , please make sure you click Quick Reset or Save Parameter before usage to sync and configure your local time into the logger.

### Start Logging

**Press Button:** Press and hold the button for 5 seconds until the ► icon shows on the LCD, indicating the logger starts logging.

**Note:** If the ► icon keeps flashing, it means the logger configured the start delay; it will start logging after the set delay time elapses.

### Stop Logging


**Press Button\*:** Press and hold the button for 5 seconds until the ■ icon shows on the LCD, indicating the logger stops logging.

**Auto Stop:** When the logging points reach the maximum memory of 16 ,000 points, the logger will stop automatically.

**Use Software:** Open ElitechLog software , click Summary menu, and Stop Logging button.

**Note:** \*Default stop is via Press Button , if set as disabled, the button stop function will be invalid; Please open the ElitechLog software and click Stop Logging button to stop it .

### Download Data

Connect the data logger to your computer via USB cable, wait until the  icon shows on the LCD; then download via :

ElitechLog Software: The logger will auto-upload data to ElitechLog, then click

Export to select your desired file format to export. If data failed for auto-upload, please manually click Download and then follow the export operation.

### Reuse the Logger

To reuse a logger, please stop it first; then connect it to your computer and use ElitechLog software to save or export the data.

Next, reconfigure the logger by repeating the operations in 4. Configure Parameters \*.

After finished, follow 5. Start Logging to restart the logger for new logging.


Warning' • To make space for new loggings, all previous logging data inside the logger will be deleted after re-configuration.

### Status Indication

#### Buttons

Operation	Function
Press and hold the button (▶) for 5 seconds	Start/Stop logging
Press the button (▶)	Check/Switch interfaces

#### LCD Screen

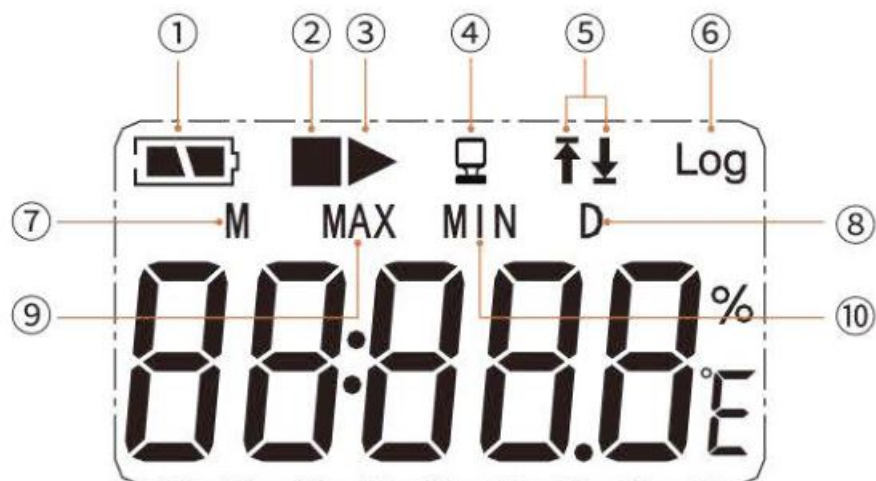

① Battery Level	⑥ Memory
② Stopped	⑦ Month
③ Logging	⑧ Day
④ Connected to PC	⑨ Maximum Temperature/Humidity
⑤ High/Low Temperature Alarm	⑩ Minimum Temperature/Humidity

#### LCD Interface

Temperature		Minimum Temperature	
Humidity		Maximum Humidity	
Logging Points		Minimum Humidity	
Current Time		High Temperature Limit	
Current Date (Month-Day)		Low Temperature Limit	
Maximum Temperature		<i>Note: Only RC-4HC displays humidity-related interfaces.</i>	

#### LCD-Buzzer Indication

LCD Display...	Buzzer*	Meaning...
		Started
		Stopped
and  not displayed		Not started
/ (Maximum/Minimum Temperature)	Beeps 3 times /10 times	High/low temperature limit exceeded
/ (Maximum/Minimum Humidity)		High/low humidity limit exceeded

\* To enable buzzer function, please open ElitechLog software and go to **Parameter** menu -> **Buzzer** -> **Enable**.

#### Battery Replacement

1. Turn the battery cover counterclockwise to open it.


2. Install the new and wide-temperature CR24S0 battery into the battery compartment with its+ facing upward.
3. Turn the battery cover clockwise and tighten it .

## What's Included

- Data Logger x 1
- CR24S0 battery x 1
- External Temperature Probe x 1 (1.lrn)
- USB Cable x 1
- User Manual x 1
- Certificate of Calibration x 1



### Warning


- Please store your logger at room temperature.
- Please pull out the battery insulator strip in the battery compartment before using.
- If you use the logger for the first time, please use ElitechLag software to synchronize system time and configure parameters.
- Do not remove the battery if the logger is recording.
- The LCD screen will be auto off after 75 seconds of inactivity (by default). Press the button again to turn on the screen.
- Any parameter configuration in ElitechLag software will delete all lagged data inside the logger. Please save data before you apply any new configurations.
- To ensure the humidity accuracy of RC-4HC, please avoid contact with unstable chemical solvents or compounds, especially avoid long-term storage or exposure to the environments with high concentrations of ketene, acetone, ethanol, isopropanol, toluene, etc.
- Do not use the logger for long-distance transport if the battery icon is less than half as .

## Appendix

### Default Parameter Configurations

Model	RC-4	RC-4HC
Logging Interval	15 minutes	15 minutes
Start Mode	Press Button	Press Button
Start Delay	0	0
Stop Mode	Use Software	Use Software
Repeat Start	Disable	Disable
Circular Logging	Disable	Disable
Time Zone		
Temperature Unit	°C	°C
High Temperature Limit	60 °C	60 °C
Low Temperature Limit	-30 °C	-30 °C
Calibration Temperature	0 °C	0 °C
High Humidity Limit		90%RH
Low Humidity Limit		10%RH
Calibration Humidity		0%RH
Button Tone	Disable	Disable
Audible Alarm	Disable	Disable

## Documents / Resources

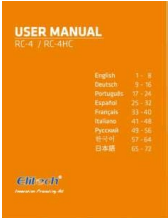 <p><b>USER MANUAL</b> RC-4 / RC-4HC</p> <p>English 1 - 8 Russian 9 - 16 Portuguese 17 - 25 Chinese 26 - 33 French 34 - 41 German 42 - 49 Italian 50 - 57 Spanish 58 - 65 Dutch 66 - 73 Polish 74 - 81 Czech 82 - 89</p> <p><b>Elitech</b> Precision Measuring</p>	<p><a href="#">Elitech Multi Use Temperature Data Logger</a> [pdf] User Manual RC-4, RC-4HC, Temperature Data Logger</p>
---	--