



Elitech RCW-2000 Wireless Temperature and Humidity Monitor System User Manual

[Home](#) » [Elitech](#) » Elitech RCW-2000 Wireless Temperature and Humidity Monitor System User Manual 

Elitech RCW-2000 Wireless Temperature and Humidity Monitor System User Manual



Contents

- [1 Overview](#)
- [2 Technical Specification](#)
- [3 Appearance](#)
- [4 Indicator Status](#)
- [5 Elitech App](#)
- [6 Operation](#)
- [7 Elitech Cloud](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Overview

The wireless temperature and humidity monitor system uses advanced LoRa communication technology and is consists of the wireless temperature and humidity sensors RCW-2100/2200, the wireless gateway RCW-2000WiFi, Elitech app and Cloud platform etc. By networking these products with various transmission methods of LoRa/Wi-Fi and combinations of Elitech app and cloud platform, the system allows users to not only view the real-time data remotely but also view historical data and graphs, export data reports, ana.

Technical Specification

RCW-2000 (Wi-Fi versions)

- Power supply: 12V/2.5A(DC)
- Communication mode: Wi-Fi
- Alarm mode: LCD indicator, buzzer, SMS and APP notification
- Maximum transmission distance: 1km at open space
- Battery: Rechargeable lithium battery(5,000mAh capacity)
- Maximum sensors loading number:
 - 12 Wireless sensors (uploading intervals under 5 minutes)
 - 30 Wireless sensors (uploading intervals over 5 minutes)

RCW-2100

- Measurement range: Temperature: -30°C~65°C; Humidity: 10%RH~100%RH
- Accuracy: Temperature: $\pm 0.5^{\circ}\text{C}$; Humidity: $\pm 5\%\text{RH}$
- Memory capacity: 20,000 recording points
- Record interval: 1 minute to 24 hours
- Uploading mode: LoRa
- Battery: Two ER14335 lithium batteries (non-rechargeable)
- Durations: Up to 1 year (uploading interval under 10 minutes) (@25°C)
- Protection level: IP65
- Operating frequency: 470~510 MHz ISM band

RCW-2200


- Measurement range: Temperature: -30°C~65°C (SHT30), -150°C~150°C(PT100); Humidity: 10%RH~100%RH
- Accuracy: Temperature: $\pm 0.5^{\circ}\text{C}$; Humidity: $\pm 5\%\text{RH}$
- Memory capacity: 20,000 recording points
- Record interval: 1 minute to 24 hours
- Uploading mode: LoRa
- Battery: Rechargeable Lithium batteries
- Durations: Up to 1 year (fully charged, uploading interval under 3 minutes) (@25°C)
- Protection level: IP64
- Operating frequency: 470~510 MHz ISM band

Appearance

RCW-2200



RCW-2000/2000WiFi

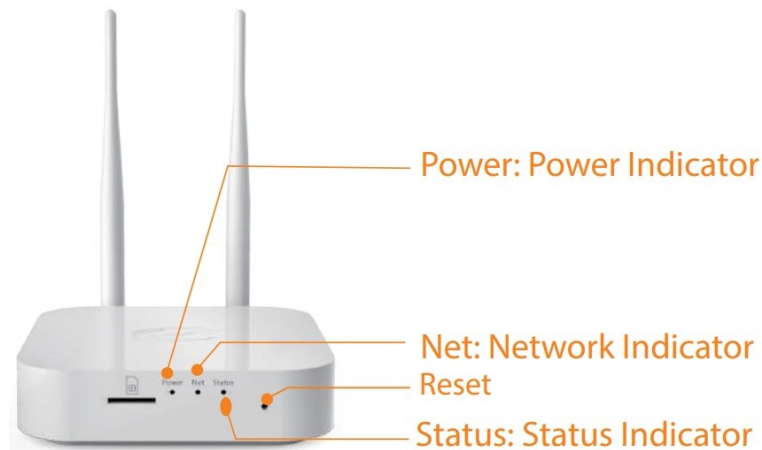

RCW-2100



Indicator Status

RCW-2000 (Wireless Gateway)

1. **Power (Power Indicator):**

Power ON: Solid green light;

Power OFF: Light off completely.

2. **Net (Network Indicator):**

Wi-Fi connected: Green LED light always on.

3. **Status (Status Indicator):**

Normal status: Green LED light blinks once per second;

Data uploaded: Green LED light continues to blink quickly.

RCW-2100/2200 (wireless sensor)

1. **Status Indicator:**

Online: Green LED light blinks once every 5 seconds;

Offline: Green LED light blinks twice every seconds.

2. **Alarm Indicator:**

Low battery: Red LED blinks twice every second.

Over limits: Red LED blinks once every minute (over temperature or humidity thresholds).

3. **Optional GPS Function*:**

Collect GPS information to realize GPS locating (outdoors only).

*Please contact us if you need this optional function.

Elitech App

Download:

Please scan the QR code below or search Elitech on App Store or Google Play to download Elitech app

iOS APP Scan the QR code or download on the App Store




Android APP Scan the QR code or download on the Google play



Login:

Click “Register now” to enter registration page. After finishing registration, please enter your username and password to login to your account.

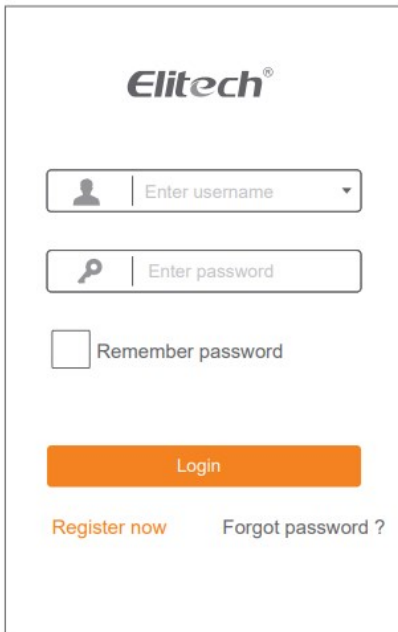A screenshot of the Elitech login page. At the top is the Elitech logo. Below it are two input fields: the first has a person icon and the placeholder text "Enter username"; the second has a key icon and the placeholder text "Enter password". Below these fields is a checkbox labeled "Remember password". At the bottom is an orange "Login" button. Below the button are two links: "Register now" in orange and "Forgot password ?" in black.


Operation


The Gateway RCW 2000WiFi


Please follow the steps below to add and configure the gateway.

- **a.** Match the provided two antennae with gateway's antennae ports and install them correctly.
- **b.** Plug RCW 2000Wi-Fi into a power outlet by using the provided power cord.
- **c.** Press the power button on the side of the gateway to turn it on.
- **d.** Use a pin or stick to press “Reset” hole to make sure it entered configuration mode.


1. Click “” first.

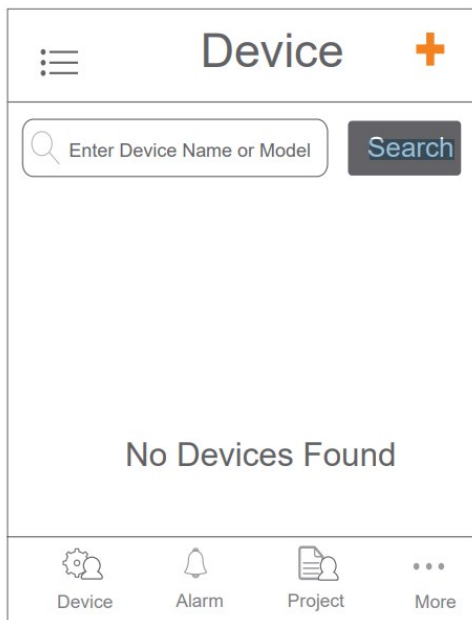

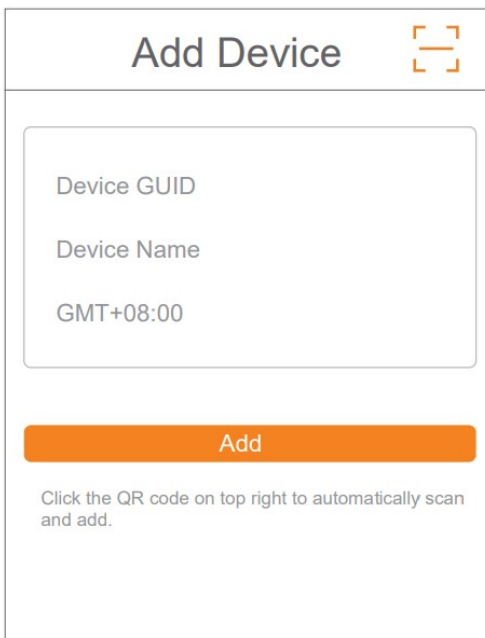

2. Click “” and scan the QR code on the back of the device.




3. Type in device name, select time zone and click “Add”

Add Device


 564569584350391*****

 2000 wifi

 GMT+08:00


Add


Click the QR code on top right to automatically scan and add.


Cancel
OK


(GMT-08:00) Anchorage
(GMT-07:00) Los Angeles
(GMT-07:00) Tijuana
(GMT-07:00) Phoenix

4. “Added Successfully” will shows. Please click “OK” to continue.

Add Device


 564569584350391*****

 2000 wifi

 GMT+08:00

Add

Click the QR code on top right to automatically scan

Added successfully

The device scanned is a Wi-Fi device.
Would you like to set WiFi

Cancel
OK

Please connect your mobile phone to your preferred Wi-Fi network first. Then follow the steps below to connect the gateway to Wi-Fi Network.

Note: If the Wi-Fi names shows on the configuration page is not your desired Wi-Fi, please reconnect your mobile phone to your desired Wi-Fi network and repeat this step.

5. The Wi-Fi’s name will be filled automatically on the “Configure Wi-Fi” page. Please type in the correct Wi-Fi password and click “Enter Configuration” button for next step.

Configure WiFi

!

Make sure your device is in config mode before any operation. See details in User Manual.

jcrb_ior

jcrb123456

Entered Configuration

6. When page shows “Configuration Successful”. Please click OK to finish all configuration of the gateway

Add Device

i

564569584350391*****

2000 wifi

GMT+08:00

Add

Click the QR code on top right to automatically scan


Configuration Successful


Please return to the device list to continue


Cancel

OK

1. Click ” ” first.

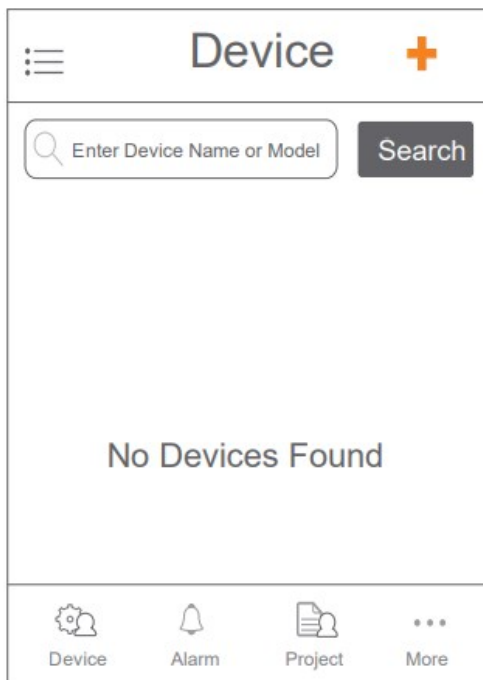

2. Click “” and scan the QR code on the back of the

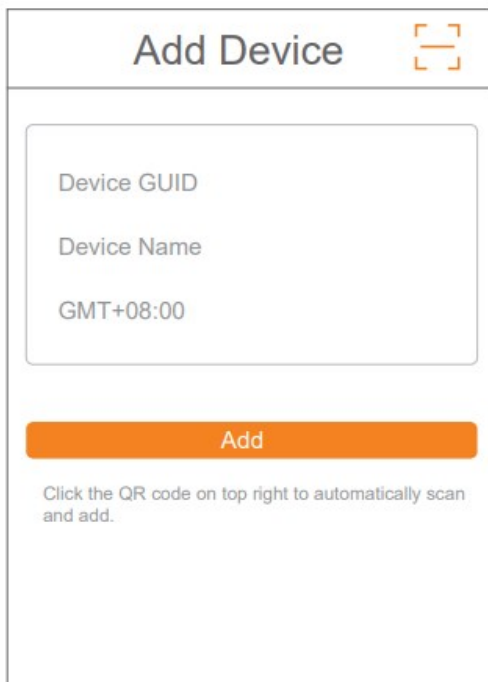

3. Click “Add” to add sensor to your account.

Add Device

786568484350291*****

2100

GMT+08:00

Add

Click the QR code on top right to automatically scan and add.

Turn on sensor RCW-2100/2200 as shown below. Then sensor will automatically search and connect to any nearby or available gateway. Once it has been connected, sensor(s) will start uploading the real-time data automatically based on your setted uploading intervals.



Press 3 seconds to turn on sensor

RCW-2100



Press 3 seconds to turn on sensor

RCW-2200

Elitech Cloud

Login Cloud Portal

Please type in the URL <http://www.i-elitech.com> to login for more operation. Click 'Help' to obtain cloud and app operation instructions.



Elitech Technology. Inc.

1551 McCarthy Blvd Suite 112 Milpitas CA 95035

Sales Support: sales@e-elitech.com

Tech Support: info@e-elitech.com

<http://www.elitechlog.com>



Documents / Resources

	<p>Elitech RCW-2000 Wireless Temperature and Humidity Monitor System [pdf] User Manual RCW-2000 Wireless Temperature and Humidity Monitor System, RCW-2000, Wireless Temperature and Humidity Monitor System, Temperature and Humidity Monitor System, Humidity Monitor System, Monitor System</p>
--	--

References

- [Temperature Data Logger Manufacturer & Supplier for Cold Chain Management](#)
- i-elitech.com