



EliteControl ESL-2 IoT EliteCloud App Module for ESL-2 System User Manual

[Home](#) » [EliteControl](#) » EliteControl ESL-2 IoT EliteCloud App Module for ESL-2 System User Manual 

Contents

- [1 EliteControl ESL-2 IoT EliteCloud App Module for ESL-2 System](#)
- [2 Specifications](#)
- [3 App & Site Setup](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



EliteControl ESL-2 IoT EliteCloud App Module for ESL-2 System




Specifications

- Power Supply: 12VDC 150mA (from ESL-2)
- Hardware Connection: Plugs into ESL-2
- Internet Connection: Ethernet
- App Support: EliteCloud
- Phone Support: iOS 14 + OR Android 10 +
- Dashboard Support: www.elitecloud.co.nz
- ESL-2 IoT Updates: Over the Air
- ESL-2 Programming: Over the Air
- Security Encryption: 2048 bits RSA SSL-TLS
- Status: LED Indication
- Warranty: 5 Years

Hardware Connection

- ESL-2 must be powered down before proceeding.
- Plug the 'ESL-2 IoT' directly into the 'ESL-2' control panel (no bus cabling or serial loom required).
- Supply an internet connection to the 'ESL-2 IoT' with an Ethernet cable as shown below:

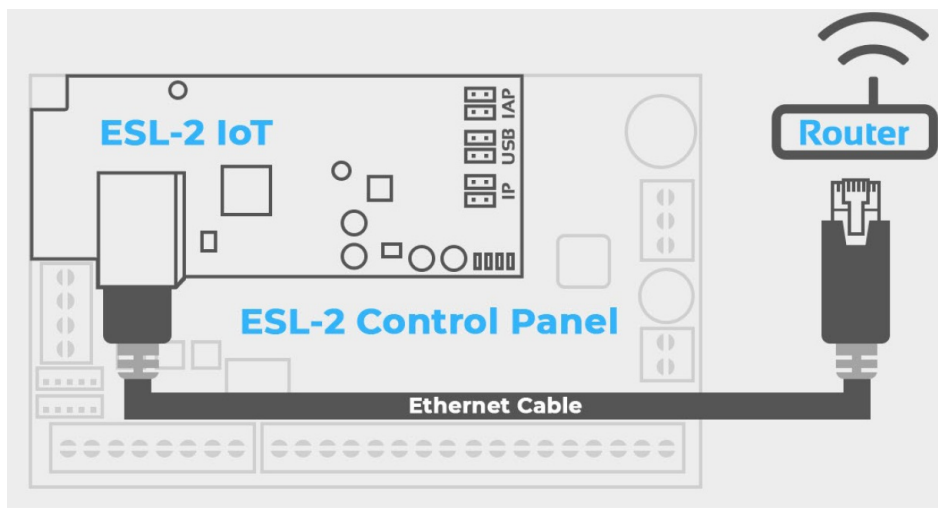


- It is recommended to use the plastic supports provided to help secure the 'ESL-2 IoT' module to the 'ESL-2' control panel.

Hardware

'ESL-2' Control Panel & 'ESL-2 IoT' with internet connection. 'ESL-2 IoT' must be firmware version 4.0.5 or above.

Smartphone

Apple iOS 14 & Above

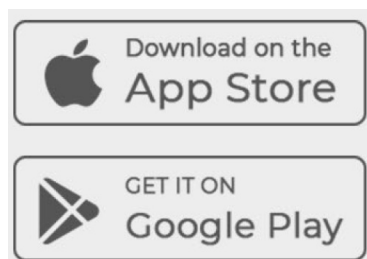

Android 10 & Above


Account

Users must have an active EliteCloud account. Visit www.elitecloud.co.nz




Status LEDS & Troubleshooting

LED 4 should be fast flashing once network is established & ready for use with app &/or monitoring communication.

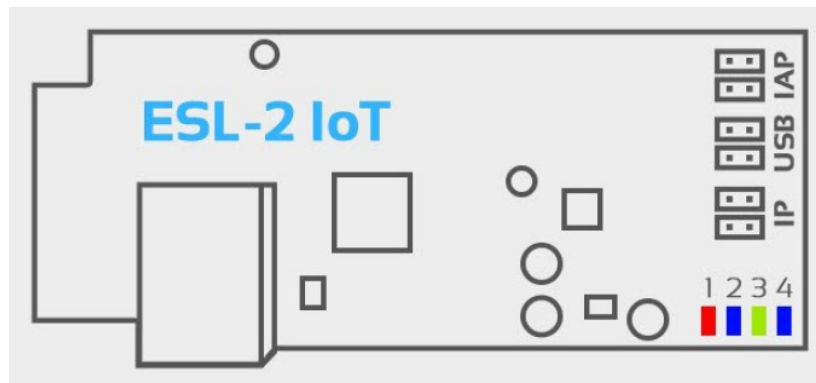

- LED 1 + LED 4 Solid = No network detected.
- LED 2 = Not utilized on this model.
- LED 3 = Reporting to monitoring or app.
- LED 4 Flashing = Network detected/ready.
- LED 1 + LED 4 Flashing then Displaying Solid
Red = Module is trying to connect to server.

Programming/Communication Path – IMPOR TANT: Only 1 path can be used at a time

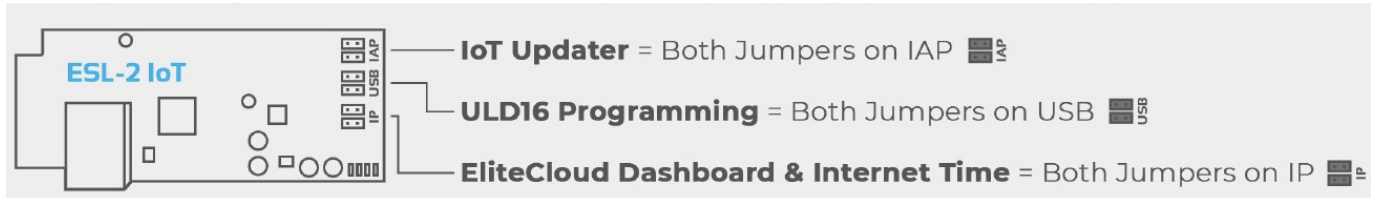



- Refer to 'IoT Updater', 'ULDI6 Programming' or 'EliteCloud Dashboard' manuals for more information.

App & Site Setup

* It is recommended to configure & test each site on your own smart device before handing ownership to the site owner. See steps below for 'Adding Users' & Transferring Ownership'.

Download the EliteCloud App

Search EliteCloud on your smart device store, OR scan the QR code below:

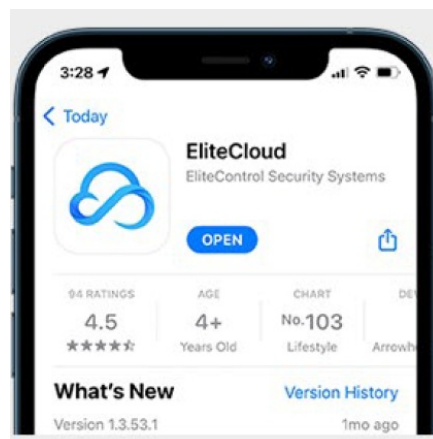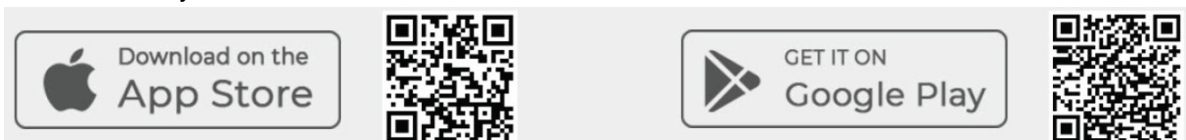

Sign Up, Sign In & Select a Plan

Open the EliteCloud app, press 'Sign Up' & follow the prompts. This process will ask you to register, verify your email, 'Sign In' & select a plan.

If you already have an EliteCloud account, simply open the app, 'Sign In' & move on to the next step.



Adding a Site – Each Site can only be added/owned by 1 User. If required, see below for 'Resetting Ownership'. After pressing 'Add Site' & accepting the T & C, a QR scanner will appear. Use this to scan the QR code found on your 'ESL-2 IoT' network module. Site ID(MAC & Serial) can also be manually added using the 'Enter manually' button.

Scan this QR code for a step by step video on how to add a site.———



Adding & Inviting Users – All users must have their own EliteCloud account. See step 2

Go to the 'Users' list found in the main app menu, then press the 'Invite User' icon. Next you can scan the new users 'Account QR Code' found in their 'User Settings' or manually enter their EliteCloud registered email address.

Scan this QR code for a step by step video on how to invite & manage users.——



Accepting Invitations & Transferring Ownership


New users must accept any site invitations from within the 'Envelope' icon found at the top left of the sites screen. Once accepted the 'Owner' of the site can transfer ownership from within the 'Users' list found in the main menu.

Scan this QR code for a step by step video on accepting site invitations———




Resetting Ownership – Requires internet

Shorting the 'Default' pins for more than 15 seconds will remove the module from the server & clear all users. Once LED's 1 - 4 are all solid the module is reset. Module must be V4.0.5 or above

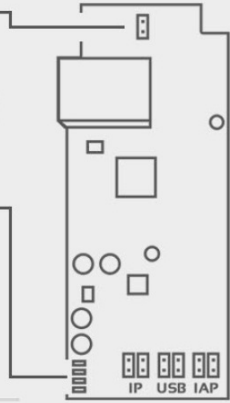

EliteCloud Tutorials

Scan the QR code below to view our EliteCloud & EliteControl tutorial videos.

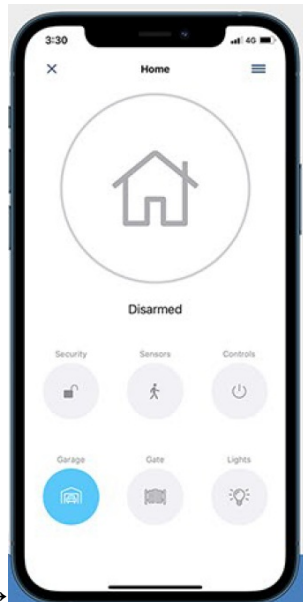


www.elitecloud.co.nz

Important

- * Due to the nature of technology development, EliteCloud may not be compatible with all devices
- * It is essential to make sure that all push notification types are being received on your smart device before the system is ready for use. **These include:** Armed, Stay Armed & 24Hr input alarms, Tamper activations & Arm/Disarm Alerts

Documents / Resources

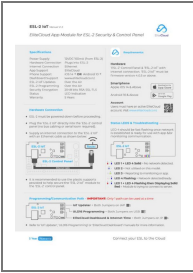	<p>EliteControl ESL-2 IoT EliteCloud App Module for ESL-2 System [pdf] User Manual ESL-2 IoT, ESL-2 IoT EliteCloud App Module for ESL-2 System, EliteCloud App Module for ESL-2 System, Module for ESL-2 System, ESL-2 System</p>
---	---