



ELKO PRI-41 Current Monitoring Relay Instructions

[Home](#) » [ELKO](#) » ELKO PRI-41 Current Monitoring Relay Instructions 

ELKO PRI-41 Current Monitoring Relay



Contents

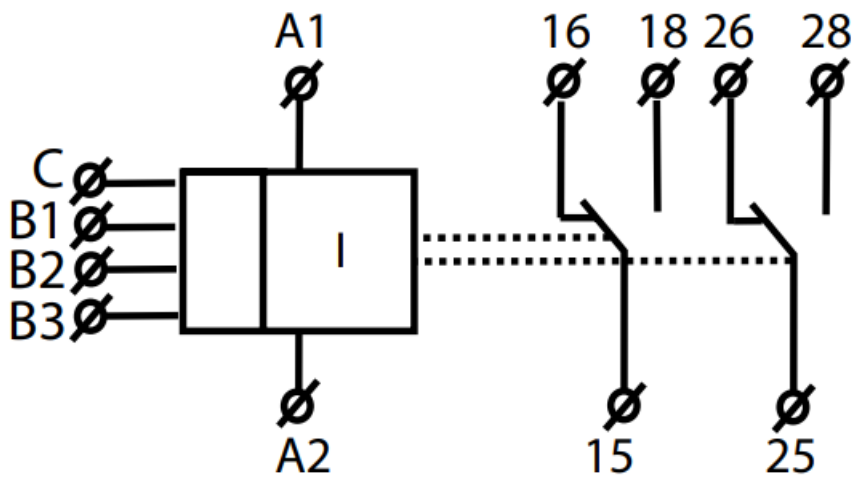
- [1 Characteristics](#)
- [2 Symbol](#)
- [3 Connection](#)
- [4 Description](#)
- [5 Technical parameters](#)
- [6 Function](#)
- [7 Warning](#)
- [8 Customer Support](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Characteristics

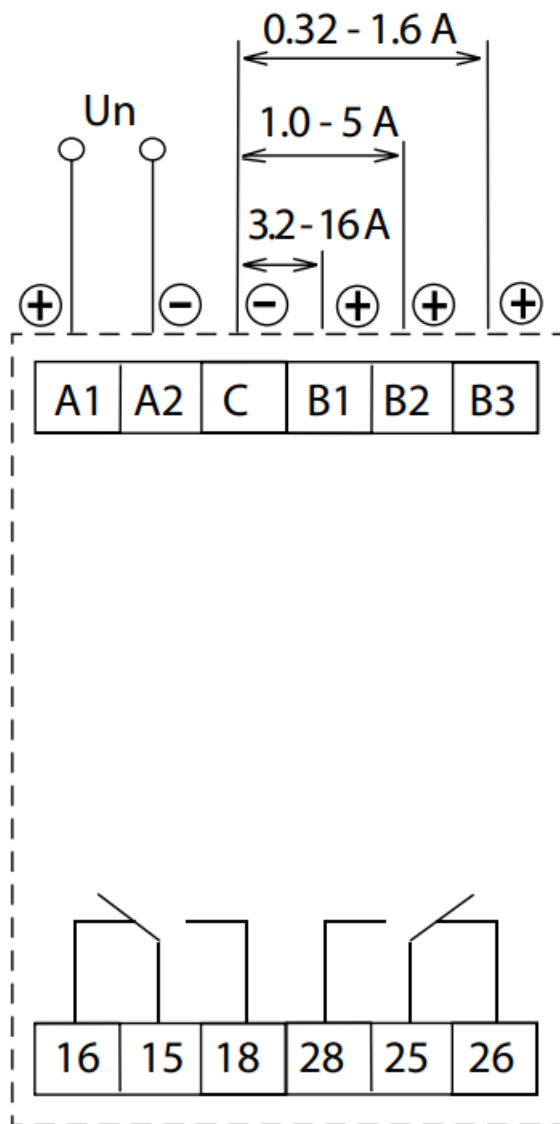
- Used to monitor overload/relief (machines, motors, etc.), check consumption, diagnostic on a remote device (burning, short circuit, increased current draw, etc.)
- Relay is used for monitoring AC or DC current in three ranges.
- Monitors level of current in two independent levels (I_{max} , I_{min}).
- setting the monitored upper level (I_{max}) in % of range.

- **setting the monitored lower level (I_{min}):**
in % of the set upper limit (PRI-41, function HYSTERESIS)
in % of range (PRI-42, function WINDOW)
- Selectable function of output contacts (independently/in parallel).
- Independent adjustable time delay of both levels
- (eliminating short-term drops and spikes).
- Galvanically separated power supply from monitoring inputs.
- Output contact for each monitored current level.

Symbol



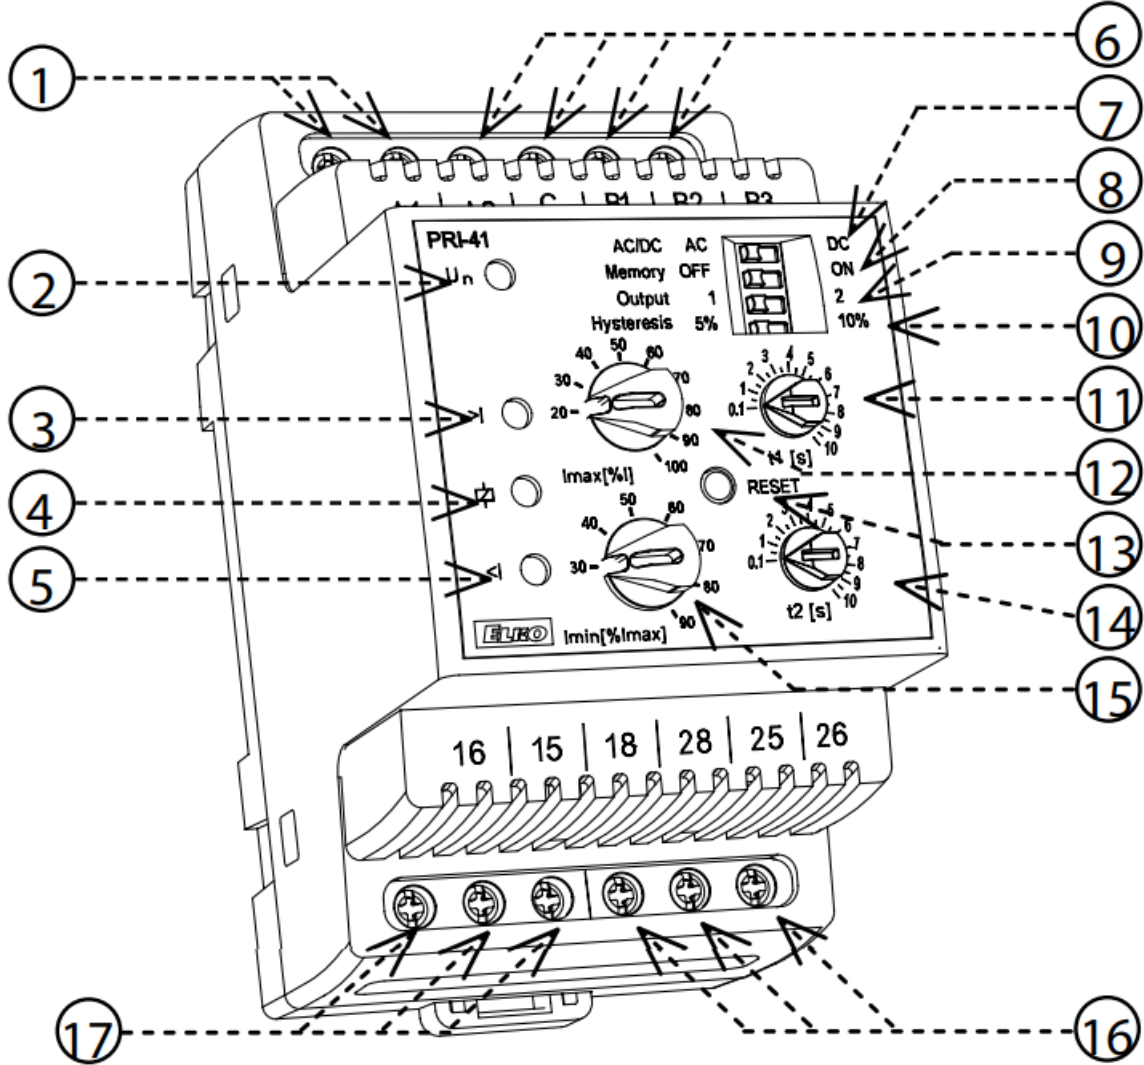
Connection

 

 
 
 



 
 

 
 
 
 
 




Description

1. Supply voltage terminals (A1-A2)
2. Supply voltage indication
3. Level indication U_{max}
4. Output indication
5. Level indication U_{min}
6. Current monitoring terminals (C-B1-B2-B3)
7. Type of monitored current
8. Memory function
9. Output function setting
10. Hysteresis setting
11. Time delay setting (U_{max})
12. Upper level setting (U_{max})
13. Memory reset
14. Time delay setting (U_{min})
15. Lower level setting (U_{min})

- 16. Output contact 2 (28-25-26)
- 17. Output contact 1 (16-15-18)



Type of load	 cos φ ≥ 0.95 AC1	 AC2	 AC3	 AC5a uncompensated	 AC5a compensated	 AC5b	 AC6a	 AC7b	 AC12
Contact material AgNi, 16A	250V / 16A	250V / 5A	250V / 3A	230V / 3A (690VA)	x	800W	x	250V / 3A	250V / 10A
Type of load	 AC13	 AC14	 AC15	 DC1	 DC3	 DC5	 DC12	 DC13	 DC14
Contact material AgNi, 16A	250V / 6A	250V / 6A	250V / 6A	24V / 16A	24V / 6A	24V / 4A	24V / 16A	24V / 2A	24V / 2A

Technical parameters

Supply circuit

Supply terminals:		A1-A2
Supply voltage:	UNI	AC/DC 24 – 240 V (AC 50-60 Hz)
Consumption (max.):		3 VA/1 W
Supply voltage:	400V	AC 400 V (50-60 Hz)
Consumption (max.):		5 VA/2.5 W
Supply voltage tolerance:		–15 %; +10 %

Measuring circuit

Monitored terminals:	C-B1	C-B2	C-B3
Monitored ranges*:	AC/DC 3.2 – 16 A (A C 50-60 Hz)	AC/DC 1 – 5 A (AC 5 0-60 Hz)	AC/DC 0.32 – 1.6 A (AC 50-60 Hz)
Input resistance:	2.3 mΩ	11 mΩ	23 mΩ
Max. permanent current:	16 A	8 A	3 A
Inrush overload (1 s):	20 A	16 A	6 A
Time delay I _{max} (t1):	adjustable, 0.1 – 10 s		
Time delay I _{min} (t2):	adjustable, 0.1 – 10 s		

Accuracy

Setting accuracy (mech.):	5 %
Repeat accuracy:	< 1 %
Temperature dependence:	< 0.1 %/°C (°F)
Limit values tolerance:	5 %
Hysteresis (fault to OK):	selectable, 5 %/10 % from the upper range value

Output

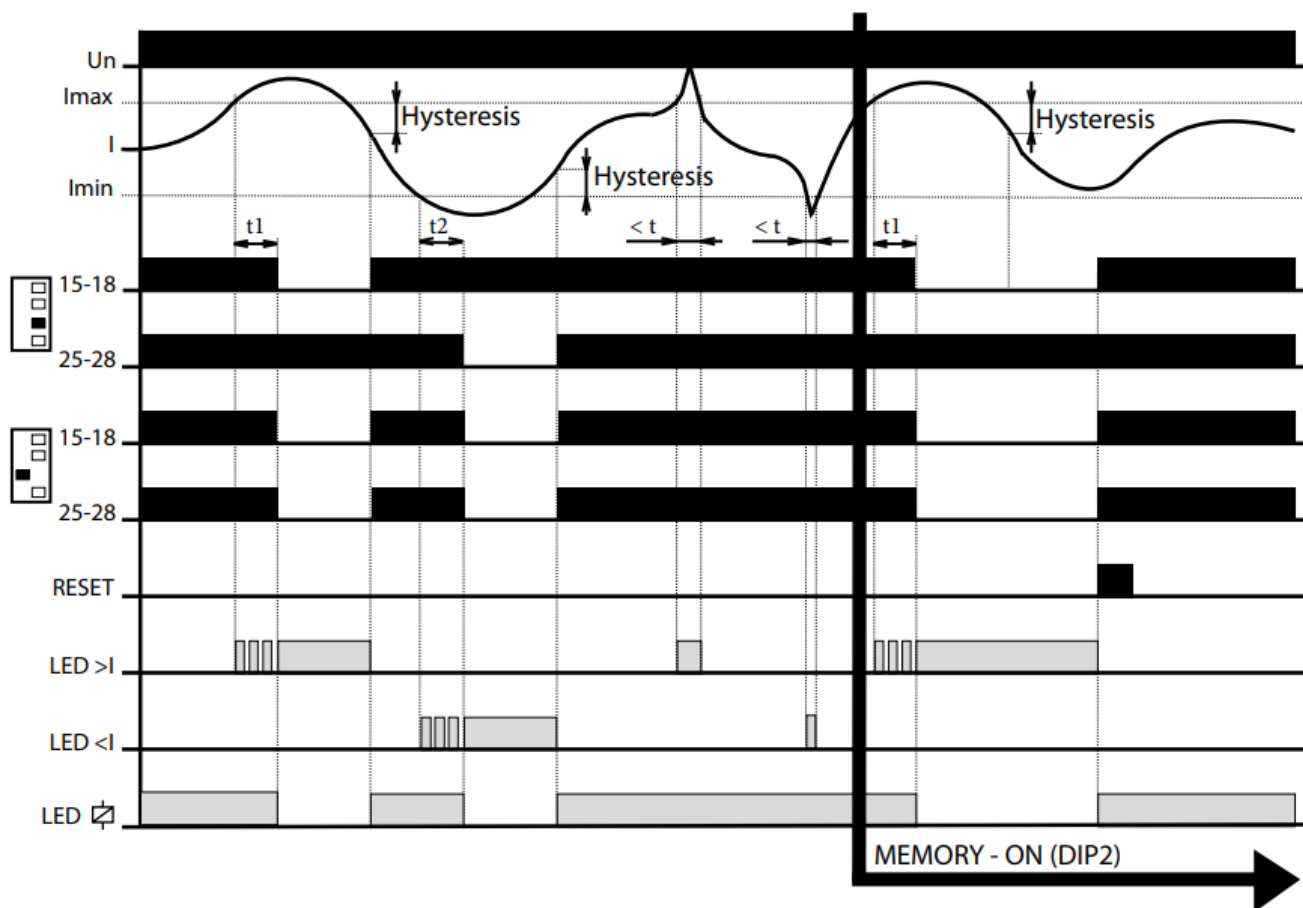
Contact type:	2× changeover/SPDT (AgNi)
Current rating:	16 A/AC1
Breaking capacity:	4000 VA/AC1, 384 W/DC1
Inrush current:	30 A/< 3 s
Switching voltage:	250 V AC/24 V DC
Power dissipation (max.):	2.4 W
Mechanical life:	10.000.000 ops.
Electrical life (AC1):	100.000 ops.

Other information

Operating temperature:	–20 .. 55 °C (–4 .. 131 °F)
Storage temperature:	–30 .. 70 °C (–22 .. 158 °F)
Dielectric strength: supply – output output 1 – output 2	AC 4 kV AC 4 kV
Operating position:	any
Mounting:	DIN rail EN 60715
Protection degree:	IP40 front panel / IP20 terminals
Overvoltage category:	III.
Pollution degree:	2
Cross-wire section – solid/ stranded with ferrule (mm ²):	max. 1 × 2.5, 2 × 1.5 / max. 1 × 2.5 (AWG 14)
Dimensions:	90 × 52 × 65 mm (3.5" × 2" × 2.6")
Weight:	UNI – 166 g (5.86 oz), 400V – 248 g (8.7 oz)
Standards:	EN 60255-1, EN 60255-26, EN 60255-27

* Only one input can be monitored at a time.

Function



- If the value of the monitored current is in the zone between the set upper and lower levels, the OK state occurs, both output contacts are closed and the yellow LED illuminates. If the value of the monitored current is outside the set limits ($I > I_{max}$ or $I < I_{min}$), a fault state occurs.
- When moving to a fault state ($I > I_{max}$), time delay t_1 is running and red LED $>I$ simultaneously flashes. After the time t_1 elapses, the red LED $>I$ illuminates and the relevant output contact opens.
- When moving to a fault state ($I < I_{min}$), time delay t_2 is running and red LED $<I$ simultaneously flashes. After the time t_2 elapses, the red LED $<I$ illuminates and the relevant output contact opens.
- When moving from a fault state to the OK state, the relevant red LED immediately goes out, and the corresponding output contact closes.

Warning

This device is constructed for connection in 1-phase network AC/DC 24 – 240 V, AC 400 V and must be installed according to norms valid in the state of an application. Installation, connection, setting and servicing must be carried out by qualified electrician staff only, which have perfectly understood the instructions and functions of the device. This device contains protection against overvoltage peaks and disturbing impulses in the power supply network. For the correct function of the protection of this device, there must be suitable protections of higher degrees (A,B,C) installed in front of them and according to the standards, interference of switching devices must be securely eliminated (contactors, motors, inductive loads, etc.). Before installation, make sure that the device is de-energized and the main switch is in the “OFF” position. Don't install the device to sources of excessive electromagnetic interference. Ensure correct installation by perfect air circulation so that during continuous operation and a higher ambient temperature, the device does not exceed the maximum allowed operating temperature. For installation and setting use a screwdriver with a width of approx 2 mm. Keep in mind that this is a fully electronic device and approach accordingly with the installation. Non-problematic function of the device is also dependent on the previous method of transportation, storage, and handling. In case of any signs of damage, deformation, malfunction, or missing parts, don't install this device and claim it at the dealer. The product must be treated as electronic waste at the end of its life.



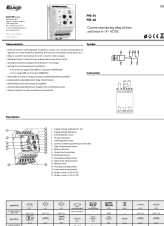
Customer Support

ELKO EP, s.r.o.
Palackého 493
769 01 Holešov, Všetuly
Czech Republic
Tel.: +420 573 514 211
e-mail: elko@elkoep.com
www.elkoep.com

Made in Czech Republic



Documents / Resources

	<p>ELKO PRI-41 Current Monitoring Relay [pdf] Instructions PRI-41 Current Monitoring Relay, PRI-41, Current Monitoring Relay, Monitoring Relay, Relay</p>
---	---

References

-  [ELKO EP - Global relay manufacturer • ELKO EP](#)