




elma instruments 5706445240074 Phase Sequences Tester User Manual

[Home](#) » [elma INSTRUMENTS](#) » elma instruments 5706445240074 Phase Sequences Tester User Manual 

Contents

- [1 elma instruments 5706445240074 Phase Sequences Tester](#)
- [2 Phase Sequences Tester](#)
- [3 CEE-Tester](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



elma instruments 5706445240074 Phase Sequences Tester




Phase Sequences Tester

Standard CEE plug with built-in phase / rotating field tester with LED indication of correct / incorrect installation and lack of phase / neutral / earth.

USAGE: Connect the tester to the outlet and read the result of the LED diodes. Must not be disassembled. The warranty is void and the security is no longer guaranteed. If there is visible damage to the tester it must not be used and should be discarded at once.



Art. No.
Rated voltage
Frequency:
Type:
Ampere
IP Class

CEE-Tester

Indication	Resultat
	
	Phases are in correct order. All OK.

- T:+45 7022 1000
- F:+45 7022 1001
- info@elma.dk
- www.elma.dk

Documents / Resources

 Manual • Fastligningsmeter • Fastligningsprovve • Phase Sequences Tester <small>ELMA 5706445240074 PRT 516 16A 5706445240081 PRT 532 32A 7392016015677 PRT 563 63A</small> 	elma instruments 5706445240074 Phase Sequences Tester [pdf] User Manual 5706445240074, PRT 516 16A, 5706445240081, PRT 532 32A, 7392016015677, PRT 563 63A , Phase Sequences Tester
---	--