



ELPRO Technologies 415U-Ex-Cx Wireless Mesh Modem and Gateway Installation Guide

[Home](#) » [ELPRO Technologies](#) » **ELPRO Technologies 415U-Ex-Cx Wireless Mesh Modem and Gateway Installation Guide** 

Contents

- [1 ELPRO Technologies 415U-Ex-Cx Wireless Mesh Modem and Gateway](#)
- [2 Models](#)
- [3 Antenna installation](#)
- [4 Power supply wiring](#)
- [5 Input and output connections](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



ELPRO Technologies 415U-Ex-Cx Wireless Mesh Modem and Gateway



Models


- 415U-E-C1 – 148 to 174MHz
- 415U-E-C3 – 360 to 400MHz
- 415U-E-C4 – 480 to 480MHz
- 415U-E-C5 – 470 to 520MHz
- 415U-E-C9 – 928 to 960MHz

Antenna installation

When selecting an antenna, consider radio proximity.

Use Figure 1 as a guide for installing an antenna and attaching it to the 415U-E-Cx.

Figure 1. Antenna installation

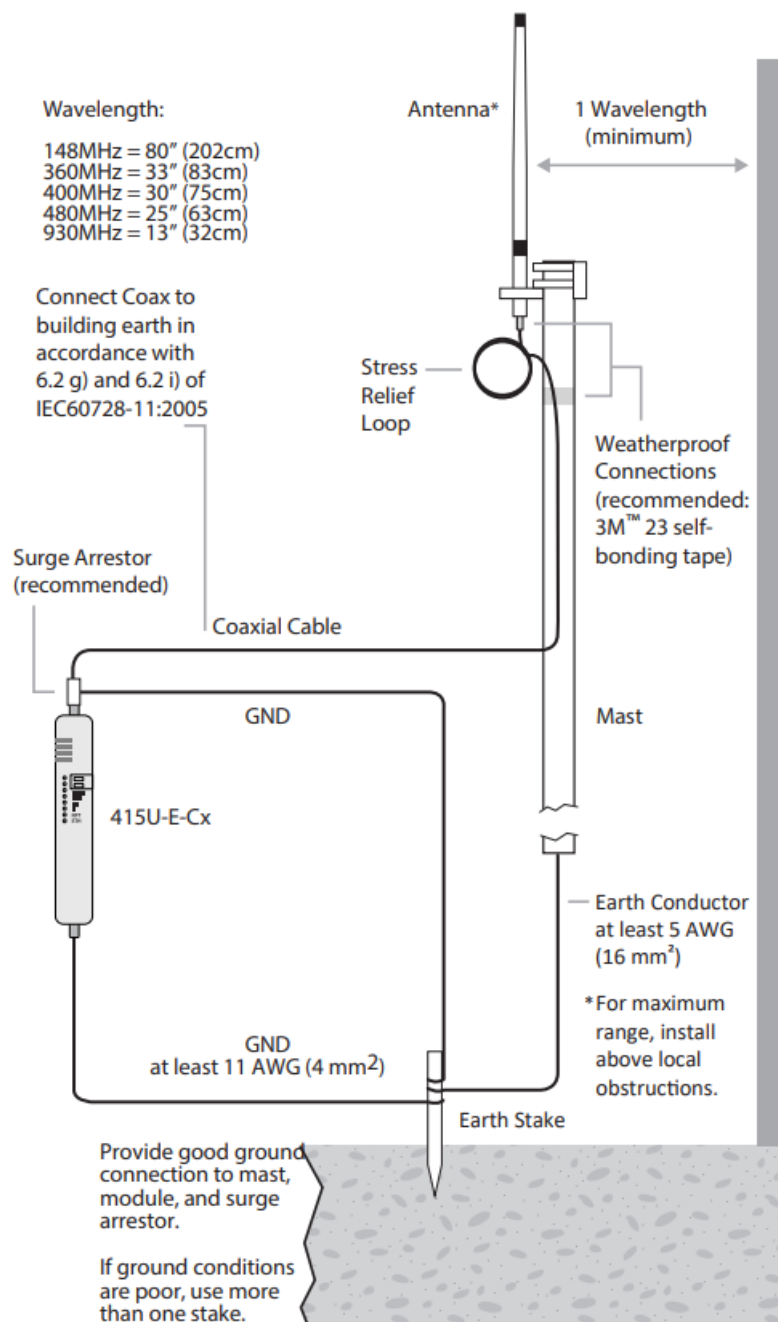


Connecting to the module for configuration

- Download and install configuration application "CConfig" from ELPRO website www.elpro.com.au
- Connect to PC using supplied USB cable
- Connect to the device at 192.168.111.1
- The PC will be automatically assigned an IP address via DHCP
- **Username:** user
- **Password:** user

NOTE

All connections must be SELV <50 Vac and <60 Vdc.
The following illustrations show the ports on the 415U-E-Cx.

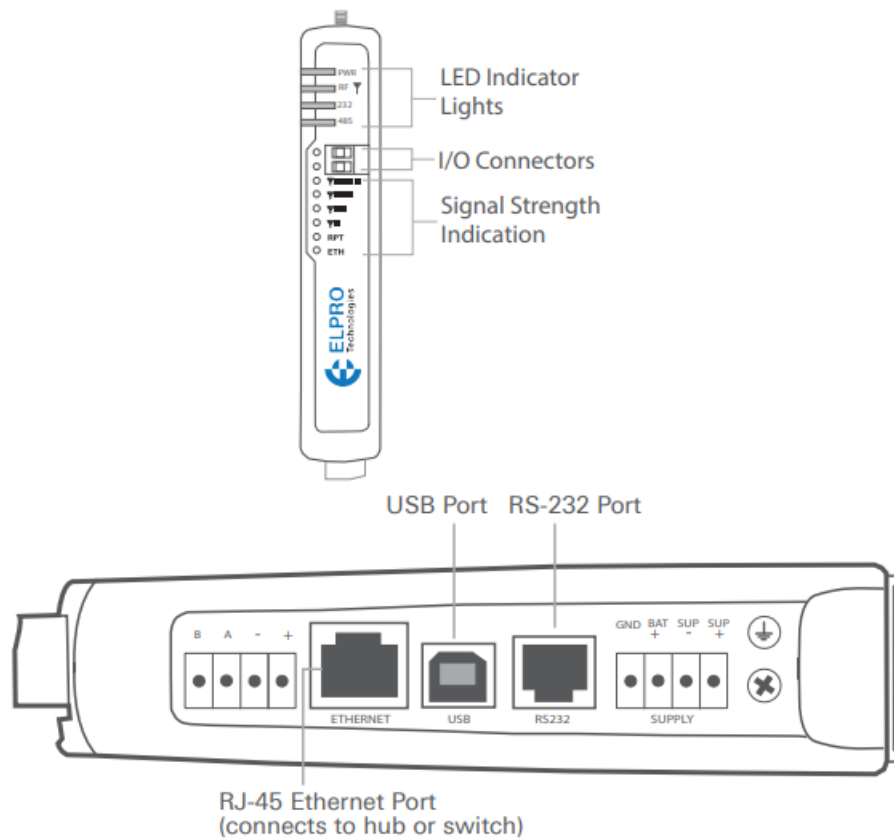


Power supply wiring

The ground (GND) and “SUP –” terminals are connected internally to the ground terminal and to the module enclosure.

Connect the screw terminal on the end plate to ground for surge protection.


Refer to user manual for RF duty cycle derating when powering the module from SUP+ and SUP- terminals.

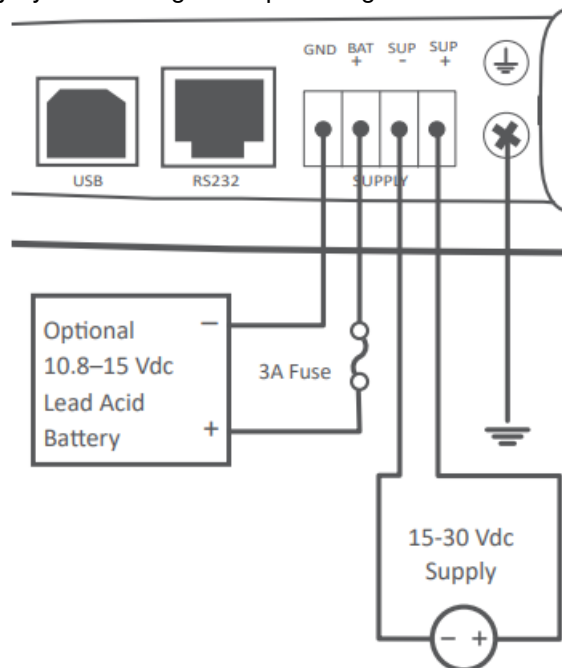

Expansion I/O power and RS-485 serial connection

An on-board RS-485 terminating resistor provides line termination for long runs.

Enable terminating resistors at far end of the RS-485 cable.

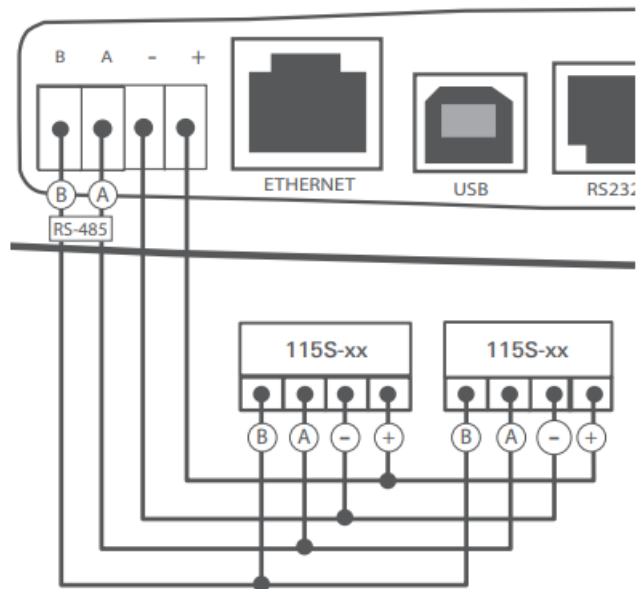


Configuration switches

Use the DIP switches in the side access panel to select default configuration settings.

DIP DESCRIPTION


1. Unused
2. Enables default configuration

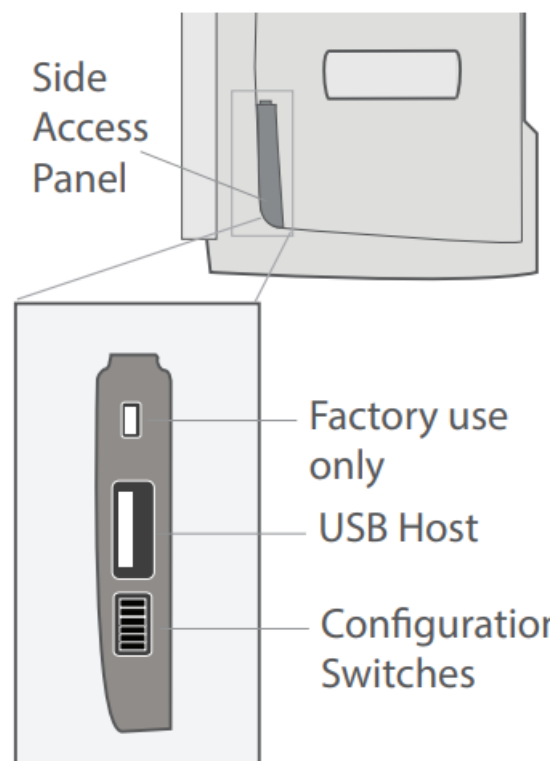


Input and output connections

The digital input/output channels can be wired as inputs or outputs.


High speed pulsed input

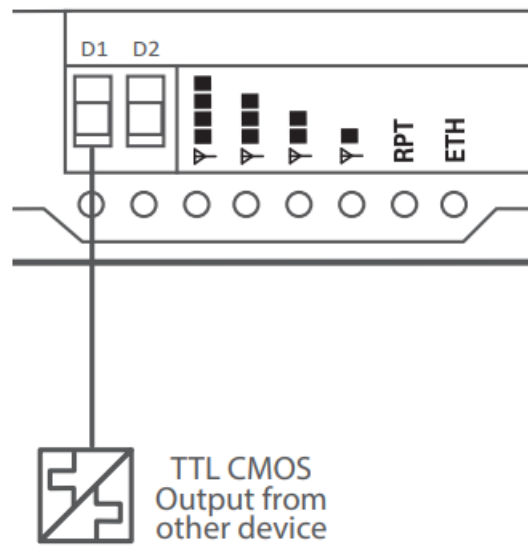

Digital input

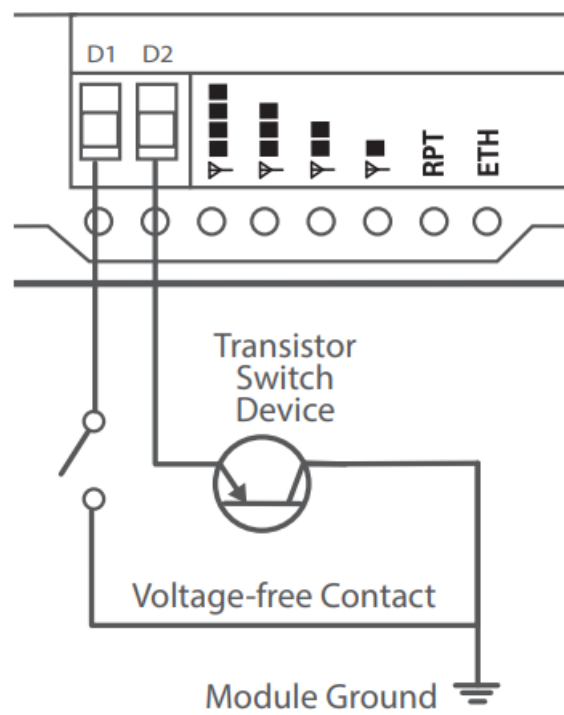

Digital output

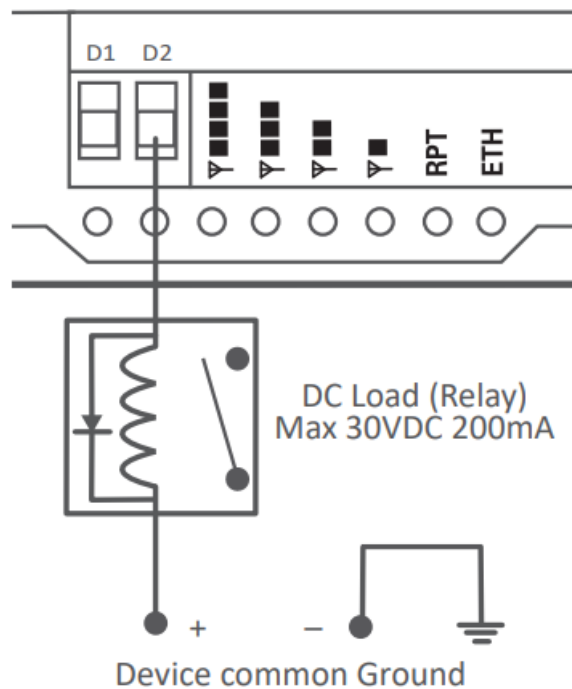

ELPRO Technologies

29 Lathe St
Virginia, QLD 4014
Australia

www.elprotech.com

Telephone:

Global:+61 7 3352 8600


ELPRO Technologies Inc

2028 East Ben White Blvd,
#240-5656 Austin, TX 78741-6931
USA

Telephone:

USA: +1 855 443 5776

Documents / Resources

	<p>ELPRO Technologies 415U-Ex-Cx Wireless Mesh Modem and Gateway [pdf] Installation Guide</p> <p>415U-Ex-Cx Wireless Mesh Modem and Gateway, 415U-Ex-Cx, Wireless Mesh Modem and Gateway, Gateway, Wireless Mesh Modem, Mesh Modem, Modem</p>
---	---