



Home » ELPRO » ELPRO 415U-E-CX Long Range Wireless Ethernet Modem Installation Guide T

### Contents [ hide ]

- 1 ELPRO 415U-E-CX Long Range Wireless Ethernet Modem
- **2 PRODUCT INFORMATION**
- 3 Connecting
- 4 Power Supply Wiring
- **5 INSTALL GUIDE**
- **6 MORE INFORMATION**
- 7 FAQs
- 8 Documents / Resources
  - 8.1 References



**ELPRO 415U-E-CX Long Range Wireless Ethernet Modem** 



### **PRODUCT INFORMATION**

### **WARNING – EXPLOSION HAZARD**

Do not disconnect the device while the circuit is live] unless the area is known to be non-hazardous.

### **NOTE**

All connections must be SELV <50 Vac and <60Vdc.

### **Models**

- 415U-E-C1 148 to 174MHz
- 415U-E-C3 360 to 400MHz
- 415U-E-C4 400 to 480MHz

- 415U-E-C5 470 to 520MHz
- 415U-E-C9 928 to 960MHz

#### **Antenna installation**

When selecting an antenna, consider radio proximity. Use Figure 1 as a guide for installing an antenna and attaching it to the 415U-E-Cx.

Wavelength: 1 Wavelength Antenna<sup>1</sup> (minimum) 360MHz = 33" (83cm) 400MHz = 30" (75cm) 480MHz = 25" (63cm) 930MHz = 13" (32cm) Connect Coax to building earth in accordance with Stress 6.2 g) and 6.2 i) of Relief IEC60728-11:2005 Loop Weatherproof Connections (recommended: 3M<sup>™</sup> 23 self-Surge Arrestor bonding tape) (recommended) Coaxial Cable GND Mast 415U-E Earth Conductor at least 5 AWG (16 mm<sup>2</sup>) \*For maximum range, install GND above local at least 11 AWG (4 mm<sup>2</sup>) obstructions. Earth Stake Provide good ground connection to mast. module, and surge arrestor. If ground conditions are poor, use more than one stake.

Figure 1. Antenna installation

# Connecting


## Connecting to the module for configuration

 Download and install the configuration utility software, available from the Elpro Technolgies website. <a href="https://www.elprotech.com">www.elprotech.com</a>

- Connect to PC using the supplied USB cable.
- Connect to the device by selecting USB connection and using the IP address 192.168.111.1 or 1.1.1.1 for older firmware (pre V2.28)
- The PC will automatically be assigned an IP address from the module via DHCP. A new network adaptor will be created using IP address 192.168.1.2 (or 1.1.1.2)


Username: user Password: user

The following illistrations show the port connections on the 415U-E-Cx.

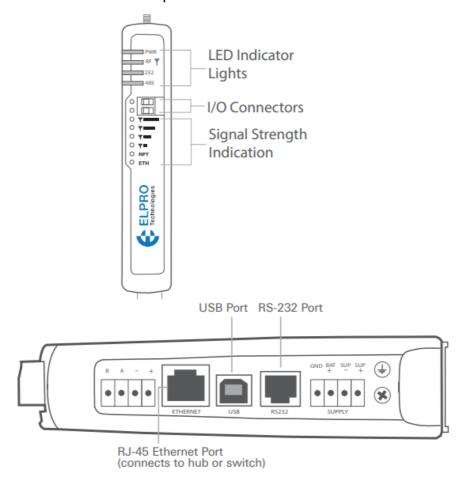


## **Power Supply Wiring**

The ground (GND) and "SUP –" terminals are connected internally to the ground (Earth) terminal. Connect the screw terminal on the end plate to ground (Earth) for surge protection.

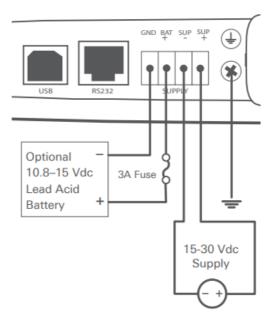

# **Expansion I/O Power and RS485 serial connection**


An on-board RS-485 terminating resistor provides line termination for long runs. Only enable the terminating resistor on the last device connected to the RS-485 cable.

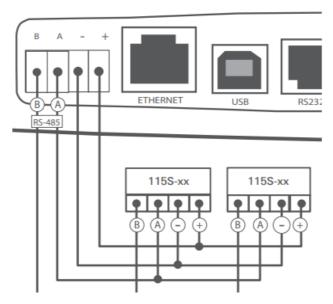

# **INSTALL GUIDE**

## **Configuration Switches**


Use the DIP switches in the side access panel to select analog input voltage or current, and to enable default configuration.

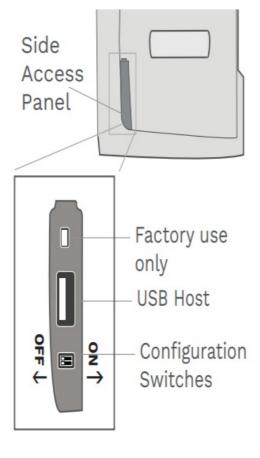


# **Input and Output connections**

The digital input/output channels can be wired as inputs or outputs.


# High speed pulsed input

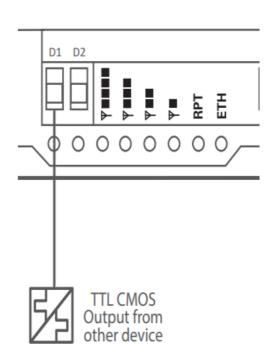

# **Digital Input**

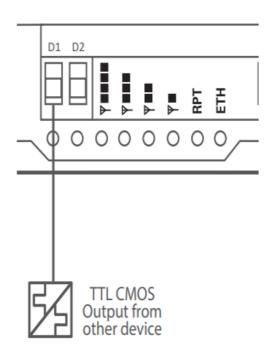

# **Digital Output**

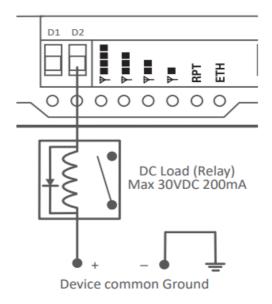

### **MORE INFORMATION**

### **HOW TO ORDER**

- Simply send us an email at
- sales@elprotech.com, contact your local
- distributor, or phone +61 7 3352 8600

### **CONTACT**

Australia

- ELPRO Technologies 29 Lathe Street
- Virginia QLD 4014
- o T +61 7 3352 8600
- E sales@elprotech.com
- W <u>elprotech.com</u>

#### • USA

- ELPRO Technologies Inc
- 2028 East Ben White Boulevard #240-5656 Austin, TX 78741-6931
- o T +1 855 443 5776
- E sales@elprotech.com
- W elprotech.com

### **FAQs**

- Q: Can I use a different antenna with the 415U-E-CX?
  - A: It is recommended to choose an antenna based on the specified frequencies and lengths mentioned in the manual for optimal performance and safety.
- Q: What should I do if I encounter interference after installation?
  - A: Check the connections, ensure proper grounding, and consider adjusting the antenna orientation to minimize interference.
- Q: Is it necessary to use a surge arrestor?
  - A: While it is recommended for added protection, using a surge arrestor can help safeguard the equipment from electrical surges.

# **Documents / Resources**



ELPRO 415U-E-CX Long Range Wireless Ethernet Modem [pdf] Installati on Guide

415U-E-CX Long Range Wireless Ethernet Modem, 415U-E-CX, Long Range Wireless Ethernet Modem, Wireless Ethernet Modem, Ethernet Modem m

### References

### User Manual

- **■** ELPRO
- ◆ 415U-E-Cx, 415U-E-CX Long Range Wireless Ethernet Modem, ELPRO, Ethernet Modem, Long Range Wireless Ethernet Modem, Wireless Ethernet Modem

# Leave a comment

Comment \*

Your email address will not be published. Required fields are marked \*

ame	
mail	
ebsite	

Save my name, email, and website in this browser for the next time I comment.

**Post Comment** 

### Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.