



emerio WM-115008 Belgian Waffle Maker Instruction Manual

[Home](#) » [emerio](#) » emerio WM-115008 Belgian Waffle Maker Instruction Manual 

emerio[®]

WM-115008



Belgian Waffle maker

Contents

- [1 SAFETY INSTRUCTIONS](#)
- [2 PARTS DESCRIPTION](#)
- [3 BEFORE FIRST USE](#)
- [4 OPERATING INSTRUCTIONS](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 TECHNICAL DATA](#)
- [7 GUARANTEE AND CUSTOMER SERVICE](#)
- [8 ENVIRONMENT FRIENDLY DISPOSAL](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

SAFETY INSTRUCTIONS


Before use make sure to read all of the below instructions in order to avoid injury or damage, and to get the best results from the appliance. Make sure to keep this manual in a safe place. If you give or transfer this appliance to someone else make sure to also include this manual.

In case of damage caused by user failing to follow the instructions in this manual the warranty will be void. The manufacturer/importer accepts no liability for damages caused by failure to follow the manual, a negligent use or use not in accordance with the requirements of this manual.

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Regarding the instructions for cleaning the surfaces which come in contact with food, please refer to the paragraph "CLEANING AND MAINTENANCE" of the manual.
7. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
8. Before inserting the plug into the mains socket, please check that the voltage and frequency comply with the specifications on the rating label.
9. Disconnect the mains plug from the socket when the appliance is not in use and before cleaning.
10. Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
11. Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
12. To remove the plug from the plug socket, pull the plug. Do not pull the power cord.
13. Do not touch the appliance if it falls into water. Remove the plug from its socket and send it to an authorized service center for repair.
14. Do not plug or unplug the appliance from the electrical outlet with a wet hand.
15. Never attempt to open the housing of the appliance, or to repair the appliance yourself. This could cause electric shock.
16. Never leave the appliance unattended during use.
17. This appliance is not designed for commercial use.

18. Do not use the appliance for other than intended use.
19. Do not wind the cord around the appliance and do not bend it.
20. Place the appliance on a stable, level surface from which it cannot fall off.
21. If you use products with non-stick surfaces, please make sure no birds are in the same room and that the room can be completely closed off and well-ventilated.

PARTS DESCRIPTION

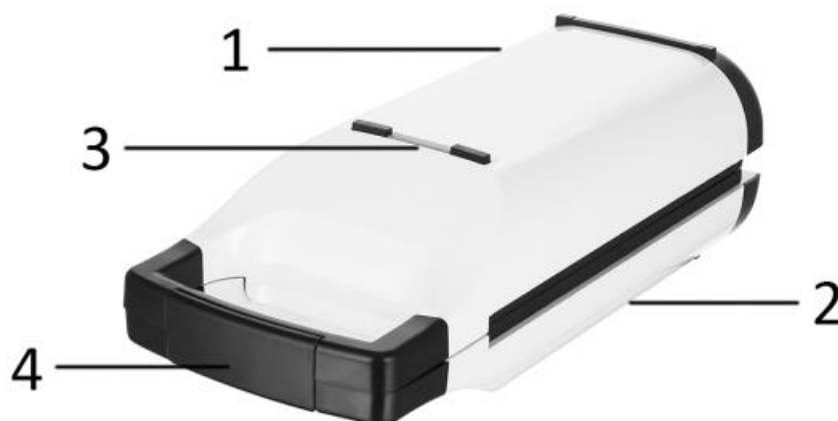

1. Upper housing 2. Bottom housing	3. Indicator lights 4. Handle latch
---------------------------------------	--

BEFORE FIRST USE

1. Remove all packaging material.
2. Clean the heating surfaces with a soft damp cloth then dry them.
3. Uncoil the mains cable completely.
4. When first use, the device may give off a slight odor. This is normal and will not last for long.

OPERATING INSTRUCTIONS

1. Connect the device to an appropriate socket. The red light illuminates.
2. As soon as the required temperature is reached, the green light illuminates and then you can begin waffle making.
3. Open the waffle machine at its handle.
4. Add some butter onto the grill plates if you want.
5. Pour the prepared dough onto the lower heating surface and distribute it evenly. Please ensure that the dough does not flow over the edge of the heating surface.
6. Hold the upper heating surface at the handle and close the waffle machine.
7. Bake the waffle for about 3 to 4 minutes depending upon the degree of browning required.
8. Open the waffle machine as described above and remove the waffle with a plastic spatula. Do not use any metal objects (e.g. knife, fork etc.) as they will scratch the coating of the heating surface.
9. If you wish to bake more waffles, pour in more dough immediately.
10. When you have finished baking, remove the mains plug.

CLEANING AND MAINTENANCE

1. First of all remove the mains plug!
2. Do not commence cleaning until the device has cooled down completely.
3. Clean the outside surface and the heating surfaces with a brush or with a soft, damp cloth.
4. Never use abrasive cleaning agents or sharp objects (e.g. scrubbing brush, knife) for cleaning.
5. Caution: Do not immerse the device in water or other liquids. There is a danger to life from electric shock!

TECHNICAL DATA

Supply voltage: 220-240V ~ 50/60Hz

Power: 800W

GUARANTEE AND CUSTOMER SERVICE

Before delivery our devices are subjected to rigorous quality control. If, despite all care, damage has occurred during production or transportation, please return the device to your dealer. In addition to statutory legal rights, the purchaser has an option to claim under the terms of the following guarantee:

For the purchased device we provide 2 years guarantee, commencing from the day of sale. If you have a defective product, you can directly go back to the point of purchase.

Defects which arise due to improper handling of the device and malfunctions due to interventions and repairs by third parties or the fitting of non-original parts are not covered by this guarantee. Always keep your receipt, without the receipt you can't claim any form of warranty. Damage caused by not following the instruction manual, will lead to a void of warranty, if this results in consequential damages then we will not be liable. Neither can we hold responsible for material damage or personal injury caused by improper use if the instruction manual is not properly executed. Damage to accessories does not mean free replacement of the whole appliance. In such case please contact our service department. Broken glass or breakage of plastic parts is always subject to a charge. Defects to consumables or parts subjected to wearing, as well as cleaning, maintenance or the replacement of said parts are not covered by the warranty and are to be paid.

ENVIRONMENT FRIENDLY DISPOSAL



Recycling – European Directive 2012/19/EU

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

They can take this product for environmental safe recycling.

Documents / Resources

 <p>Belgian Waffle maker (EN) Waffelapparaat voor Belgische Waffelen (NL) Belgijsk waffeljern (SE) Waffeljezer voor Belgische Waffelen (PL) Vahvõrkseade belgiapätsade valmistamiseks (FI) Belgijsk waffeljern (DK) Waffeljern (NO)</p> <p>CE</p>	<p>emerio WM-115008 Belgian Waffle Maker [pdf] Instruction Manual WM-115008 Belgian Waffle Maker, WM-115008, Belgian Waffle Maker</p>
--	---

