



# EMERSON CKS1507 SmartSet Clock Radio with Auto Time Setting System Owner's Manual

[Home](#) » [Emerson](#) » EMERSON CKS1507 SmartSet Clock Radio with Auto Time Setting System Owner's Manual



## Contents

- [1 CKS1507 SmartSet Clock Radio with Auto Time Setting System](#)
- [2 Important Safety Instructions](#)
- [3 Preparation For Use](#)
- [4 Important Notes](#)
- [5 Package Contents](#)
- [6 Setting the Time Zone](#)
- [7 Setting the Alarm](#)
- [8 Listening to FM Radio](#)
- [9 Pairing Bluetooth Speaker](#)
- [10 Sleeping to Music Timer](#)
- [11 3- Level Dimmer Control](#)
- [12 Night Lighting](#)
- [13 Enjoying Audio Source via AUX IN Jack](#)
- [14 USB for Charging](#)
- [15 Changing the Lithium Battery](#)
- [16 Care and Maintenance](#)
- [17 LIMITED WARRANTY](#)
- [18 Documents / Resources](#)
- [19 Related Posts](#)

## CKS1507 SmartSet Clock Radio with Auto Time Setting System



SmartSet Clock Radio with Auto Time Setting System  
Owner's Manual

**1.4" Blue Jumbo Display, Dual Alarms, FM Radio, USB Charge Out, Night Light, and Bluetooth Speaker**  
(SmartSet Patent No. 6,567,344)

**CKS1507**

Alarm Clock Radio with Bluetooth, USB

Visit our website at [www.emersonradio.com](http://www.emersonradio.com)

**WARNING**

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



A lightning flash with an arrowhead, a symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to person.

**CAUTION**

RISK OF ELECTRIC SHOCK DOES NOT OPEN  
**WARNING:** THE OF ELECTRIC SHOCK NOT REMOV  
OVER BACK), NO USER PARTS INSIDE SERVICING  
QUALIFIED SERVICE  
personal

1. WARNING: SHOCK HAZARD – DO NOT OPEN.
2. Caution Marking and rating plate was located at rear enclosure of the apparatus.
3. Attention should be drawn to the environmental aspects of battery disposal;
4. Minimum distances 10cm around the apparatus for sufficient ventilation;
5. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
6. No naked flame sources, such as lighted candles, should be placed on the apparatus; it convenient de ne pas placer
7. The use of apparatus in moderate climates
8. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
9. **WARNING** Do not ingest the battery, Chemical Burn Hazard 8,- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
10. When a plug on the unit is used as a disconnect device, this unit must remain readily accessible.
11. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. les batteries (bloc de batteries ou batteries installers)
12. ATTENTION Danger of explosion if the battery is not replaced correctly. Replace only with the same type or equivalent type
13. The appliance must not be exposed to water dripping or splashing and no objects filled with liquids such as vases should be placed on the appliance.

**IC Warning:**

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions:(1)this device may not cause interference,and (2)this device must accept any interference, including interference that may cause undesired operation of the device.

**RF warning statement:** The device has been evaluated to meet the general RF exposure requirements. To maintain compliance with RSS-102 — Radio Frequency (RF) Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

**FCC Note:****FCC Part 15.19** Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:(1)THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND(2)THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**FCC Part 15.21** Warning Statement NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. **FCC Part 15.105**

**Warning Statement**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This requirement generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications. However, there is no guarantee that interference to radio communication. If this requirement does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- consult the dealer or an experienced radio/TV technician for help.

**RF warning statement**

The device has been evaluated to meet general RF exposure requirements. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

**Important Safety Instructions**

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus(including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician to replace the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
12.  The AC adapter must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
13. The AC adapter is used as a disconnect device and it must remain readily accessible during intended use. In order to disconnect the apparatus from the AC power completely, the AC adapter must be removed from the AC outlet completely.
14. The battery must not be exposed to excessive heat such as sunshine, fire, etc.

**CAUTION:** Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

## Preparation For Use

### Unpacking And Set Up

- Remove the radio from the carton and remove all packing material from the radio. Save the packing material, if possible, in case the radio ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your radio to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
- Place your radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length. The FM antenna is built into this cord. It must be fully extended to provide the best FM reception.

### Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil-based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber feet before you place the product on fine wooden furniture.

### Power Source



This radio is designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty. This radio should be connected to an AC outlet that is always live. Do not connect it to an outlet that is controlled by a wall switch.

When the power to the radio is interrupted, the built-in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keeps the radio connected to a 'live' AC outlet at all times.

Important Notes

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration, and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

 
Package Contents

		
CKS1507 Clock Radio x 1		
		Owner's Manual

Location of Controls and Indicators  
FRONT PANEL



TOP PANEL

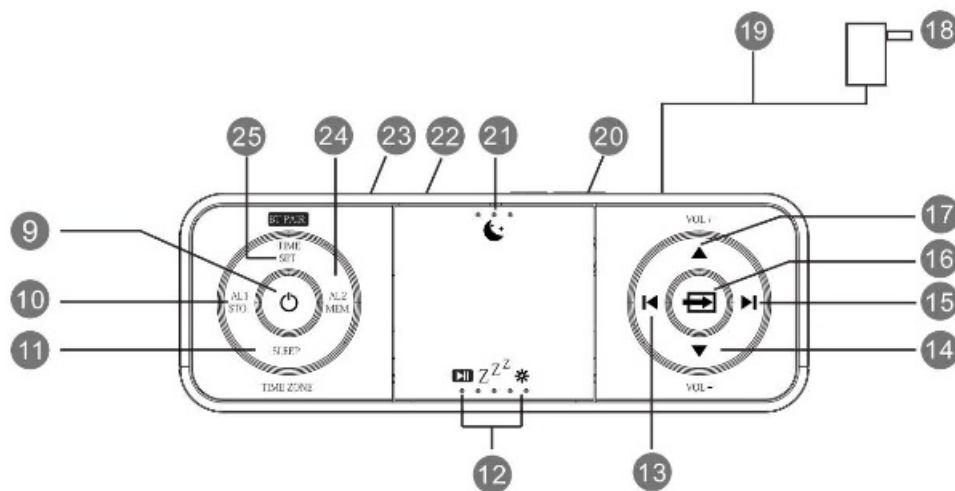

1. ALARM 1 Radio/Buzzer Indicators
2. AM Indicator ( 'On'=AM, 'Off'=PM)
3. AUX Indicator
4. DAY of WEEK Indicators
5. LOW BATTERY Indicator
6. MHZ (FM Radio ) Indicator
7. BT (Bluetooth) Indicator
8. ALARM 2 Radio/Buzzer Indicators
9. POWER ( 'On'/Standby) Button
10. ALARM 1/STORE(FM station ) Button
11. SLEEP/TIME ZONE Button
12. PAUSE/SNOOZE/DIMMER Button
13. SET/TUNE DOWN Buttons
14. VOLUME-DOWN Button
15. SET/TUNE UP Button

16. SOURCE (FM, Bluetooth, AUX) Button
17. VOLUME+ UP Button
18. AC Adapter
19. FM Antenna(cable)
20. BACKUP BATTERY Compartment (located at the back of unit)
21. Night Light On/Off Button
22. USB Charge Out
23. AUX IN Jack
24. ALARM 2/MEMORY(FM station)
25. TIME SET/FM Frequency Display

## Setting the Time Zone

 
### Initial Default Setting at Clock Mode

The first time you connect your new SmartSetR clock radio to the AC outlet the internal computer will automatically set the time correctly for the Eastern Time Zone, which is the initial default setting. The display will scan for a few seconds and then show the correct Day and Time in the Eastern zone. If you live in the Eastern Time zone, there's nothing else to do. Your clock is set correctly and running.

If you do not live in the Eastern Time zone you must change the default zone display to your own zone. You only do this one time and the SmartSetK will remember the new default zone setting and will always return to that setting after power interruption.

There are 7 time zones programmed into your SmartSet clock radio as follows:

- ZONE 1 -Atlantic Time
- ZONE 2 -Eastern Time (Default Setting)
- ZONE 3 -Central Time
- ZONE 4 -Mountain Time
- ZONE 5 -Pacific Time
- ZONE 6 -Yukon Time
- ZONE 7 -Hawaiian Time

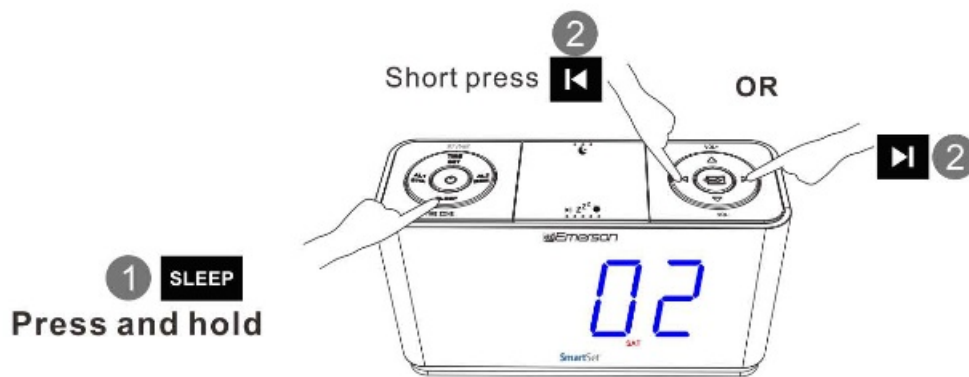


**Note:** Time Zone and Time Setting can only be adjusted in standby mode, where the function of Radio, Bluetooth, and AUX are disabled(Indicators of “MH “, “81-and “AUX”are OFF).

### Setting the Time

 Year, Date, and Time Display

To display Year, Date, and Time sequentially, short press TIME SET once for each.

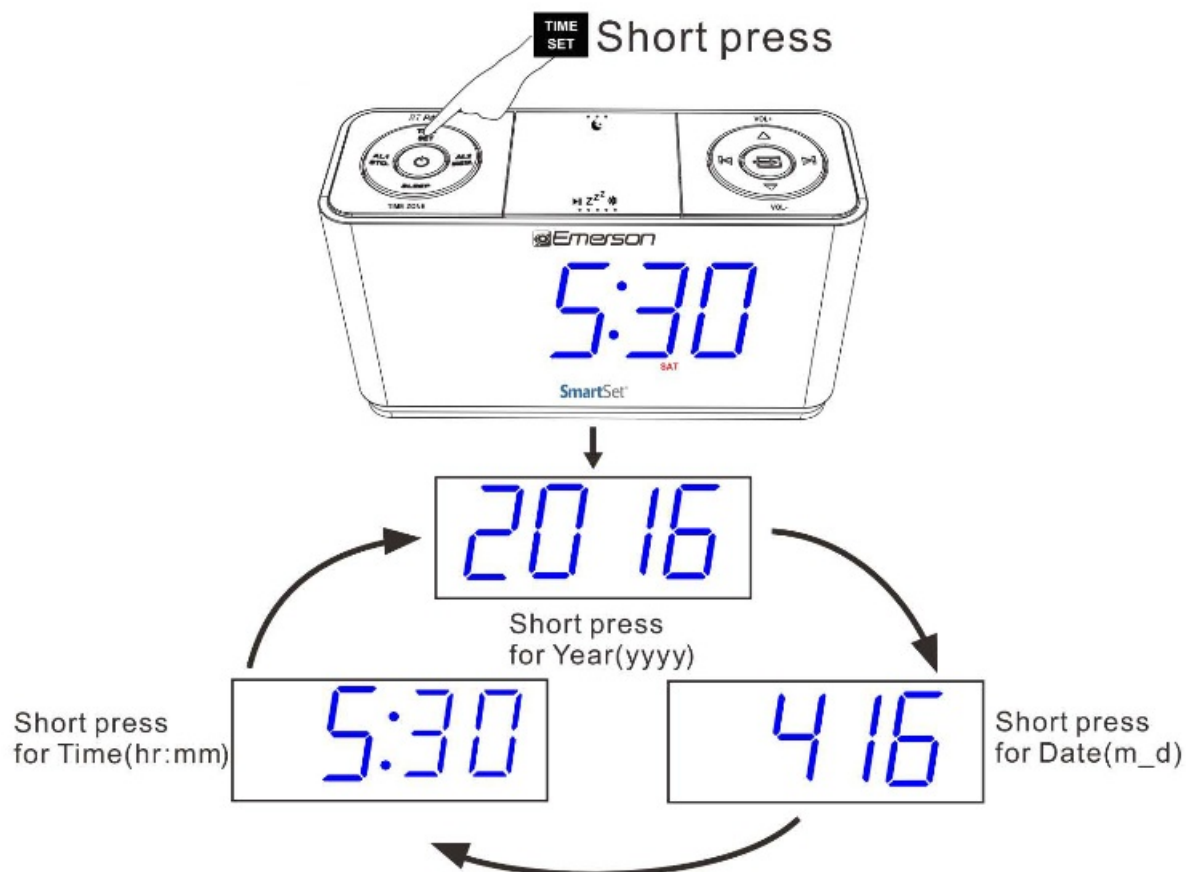

### Manual Time Adjustments



• Year → • Date → • Time

1. Press and Hold "TIME SET" until the Year Display blinks. Then release the button.
2. Press "◀" or "▶" to adjust Year
3. Press "TIME SET" and the Month Display will blink
4. Press "◀" or "▶" to adjust the Month
5. Press "TIME SET" and the Date Display will blink
6. Press "14" or "H" to adjust the Date
7. Press "◀" or "▶" and the Hour Display will blink
8. Press "◀" or "▶" to adjust the Hour
9. Press "◀" or "▶" and the Minutes Display will blink
10. Press "◀" or "▶" to adjust Minutes
11. Press "◀" or "▶" to finish time adjustments session

**Note:** To skip manual adjustments, keep it idle for 5 seconds to resume clock display mode.

### Daylight Saving and Leap Year Adjustments

All Daylight Saving and Leap Year adjustment is made automatically by the SmartSetR internal computer as following:

#### Start of Daylight Saving time:

At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM

#### End of Daylight Saving time:

At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM

#### Leap Year:

At 12:00 Midnight on February 28th, the calendar display will change to "2 29".

 
### Setting the Alarm

The alarm can only be set in standby mode where the function of Radio, Bluetooth and AUX are disabled (i.e. indicators of "MHz", "BT", and "AUX" are OFF)





## Adjusting the Wake-up times

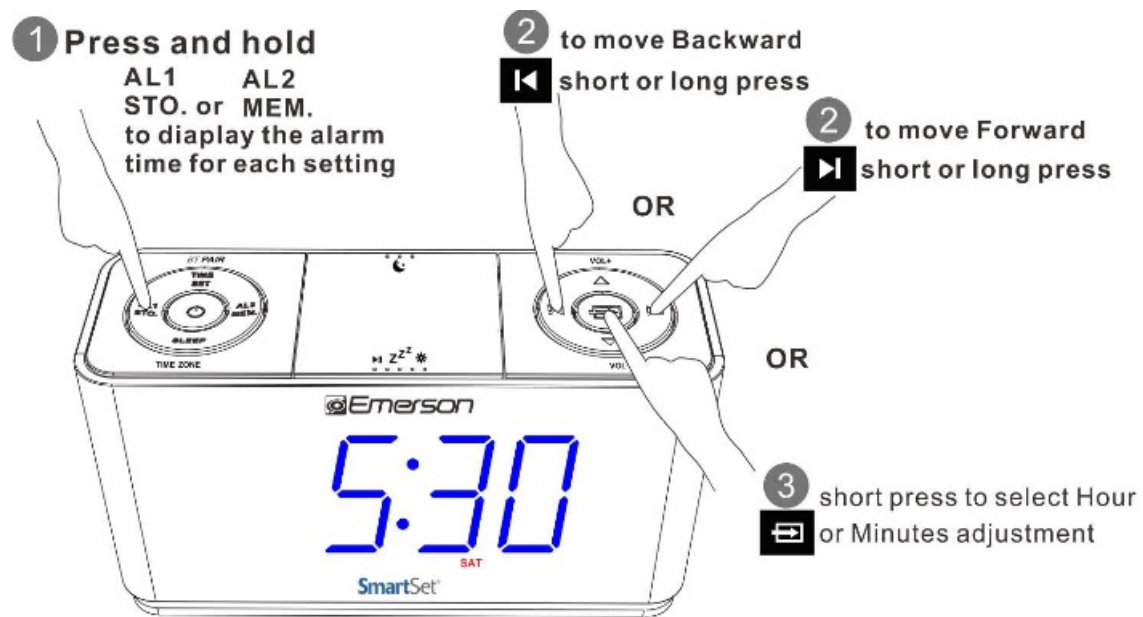



## Adjusting Alarm Week Mode


Press and Hold "AU" or "AL2", then press ▲ or ▼ "to adjust: Weekdays (Monday to Friday), Weekends (Saturday and Sunday) or every day (Monday to Sunday)



Short press AL1 or AL2 to turn ON the Alarm Mode:

When Buzzer  lights are on, the wake-up Buzzer alarm will be ON.

When the  Music lights on, the wake-up Radio alarm will be ON.

To completely turn off the alarm, short press AL1 or AL2 until the Buzzer  or Radio /7 light is OFF.

## Wake To Radio and Alarm Volume Setting



- Press the POWER button to turn the unit ON.
- Press the SOURCE button to select FM Radio mode.
- Tune to or recall from Memory the station that you wish to hear when the alarm comes ON.
- Press Vol+ or Vol- to set the maximum radio volume at which the alarm will reach gradually at wake-up time.
- The default alarm volume is U08 for radio volume set up between U00-U08(before the unit turned OFF to standby mode). For a louder alarm, set up radio volume above U08 before the unit is turned OFF.

 
## Snooze Alarm



When the Alarm comes ON, press the SNOOZE button  $z=^*$  to pause it for 9 minutes. The snooze Alarm \ will not repeat after one hour. To turn off Snooze Alarm mode, press the POWER button once.


## Listening to FM Radio

Press the Power button  to turn ON the unit and press the SOURCE button  to change to Radio Mode ("MHz" On) Power on

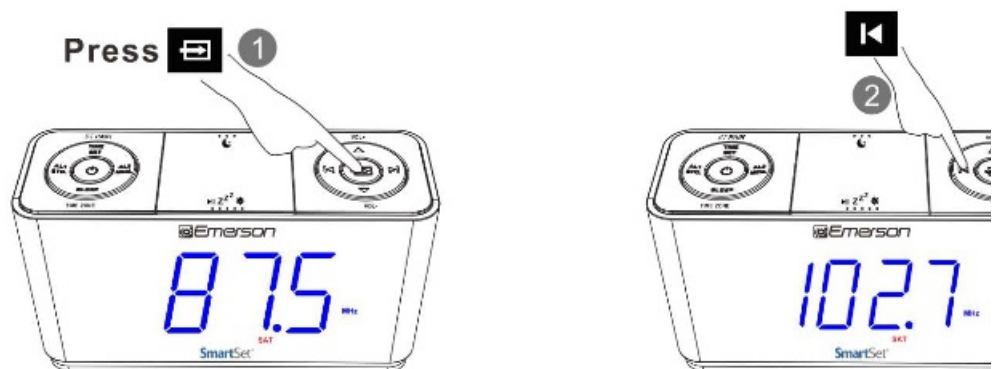

A: Switch to Radio Mode (Press the SOURCE button)

 B: Tuning to FM Station (Either press Tune Up or T

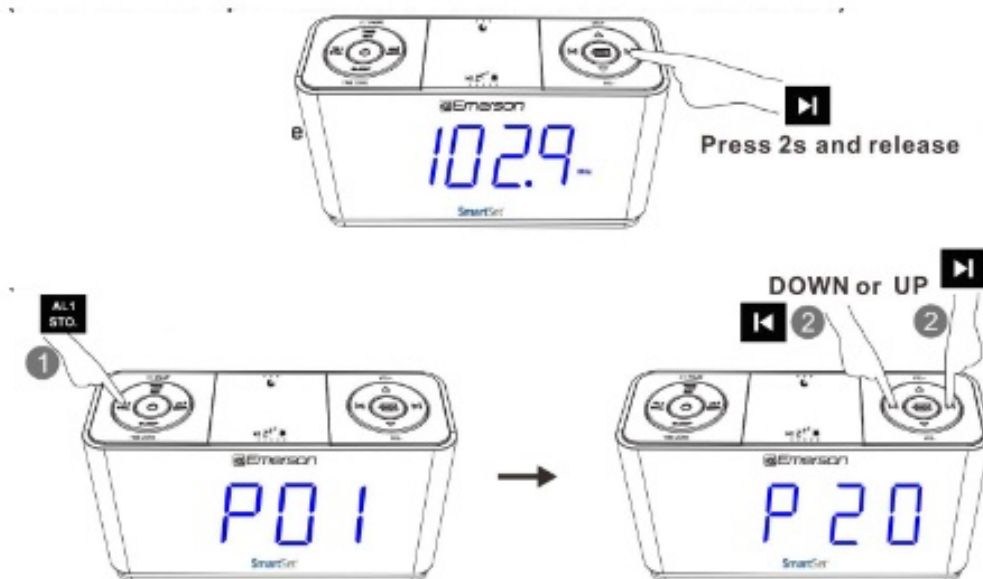


C: Auto Searching/Scanning FM Stations (Press the Tune-Up or Turn Down button for 2 seconds and release)  
Searching will stop at a station with an acceptable reception

D: Storing Favorable Station to Memory (20 stations can be stored)

- At Radio Mode, Press Tune Down ◀ or Tune Up ▶ button to search your desired station.
- Press the AL1/STO. button, Program Number “P01” will be blinking on the display, press Tune Down ◀ or Tune Up ▶ to change the program number from “P01” to “P20”, once you selected the desired program number, press the AL 1/STO. again and the favorable station will be stored to the selected program number.


#### E: Recall Favorable Station to Memory

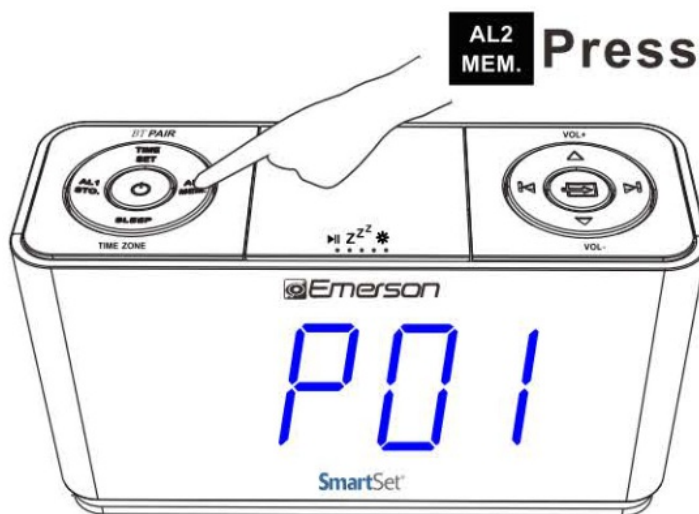 

- Press the AL2/MEM button, Program number will be shown on the display, pressure Down ◀ or Tune Up ▶ to select your stored program number and listen to your favorable station. Note: Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the FM antenna (cable)


#### Pairing Bluetooth Speaker

 - Press the POWER button to turn the unit ON
- Press the SOURCE button to select Bluetooth (bt) mode ( “BT” flashes for pairing)
- Enable your Bluetooth device and select CKS1507 from its Available/Paired device list. After pairing successfully, the unit will prompt and “BT” will become solid
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired,you can play your music through this Bass Boosted Bluetooth Speaker.

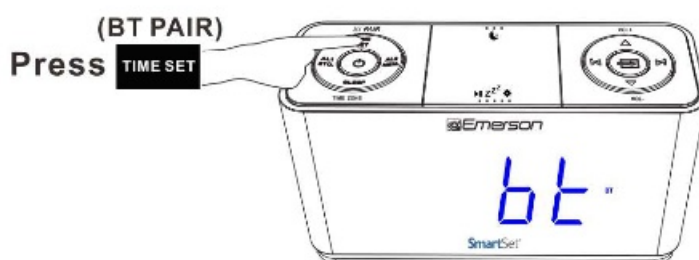

#### Sleeping to Music Timer

 
Press the Power button C) to turn ON the unit ,and press SOURCE button to select either FM Radio, Bluetooth or AUX mode to play radio or music Sleep mode setting

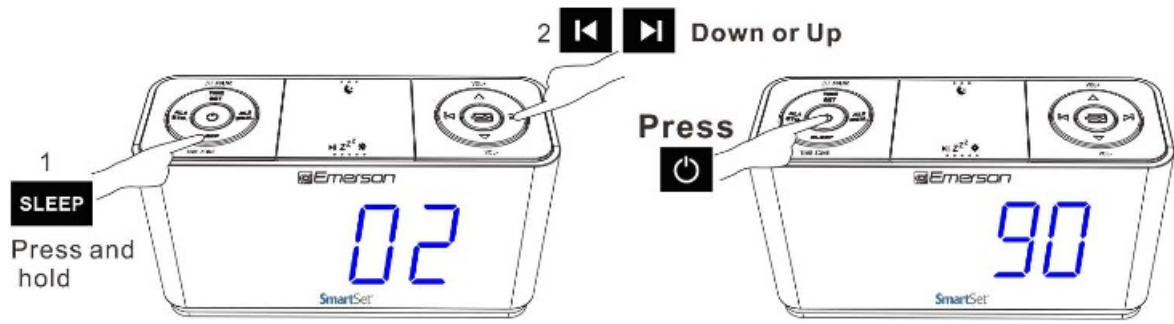

- Press and hold the SLEEP button. The display will show the sleep timer.
- Press Up or Down button to choose your desired sleep timer (02-90 minutes).
- Release all buttons, the sleep timer will start counting down and turn off the unit when the desired sleep timer elapsed.
- To display the sleep timer during count down process, press the SLEEP button.
- To cancel the sleep timer during count down process, press the POWER button to shut off the unit.


### 3- Level Dimmer Control

 The brightness of the clock display can be set at High/Medium/Low level in standby. Radio and AUX modes with a press of the Hizilk button

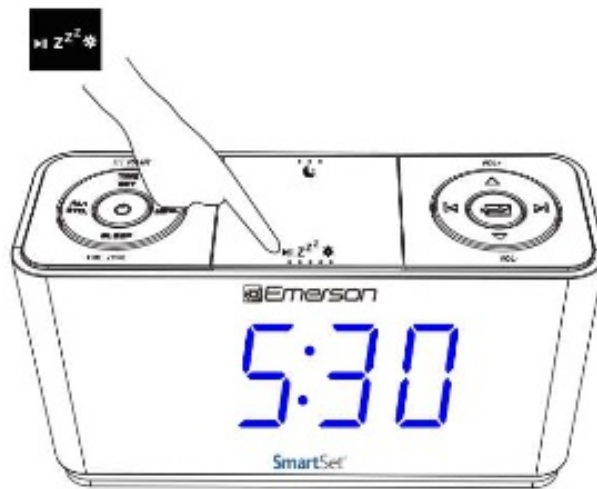


### Night Lighting

 Press the NIGHT LIGHT button to turn the blue nightlight ON or OFF when needed

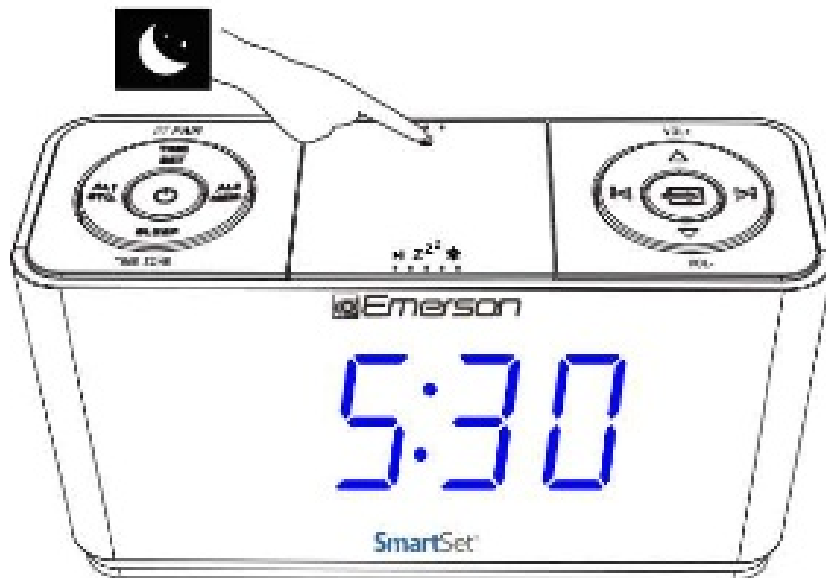

### Enjoying Audio Source via AUX IN Jack

 
Press the POWER button to turn the unit ON Press the SOURCE button until “AUX” appears on display, connect your audio or mobile device and play music through the unit with the 3.5mm earphone jack.

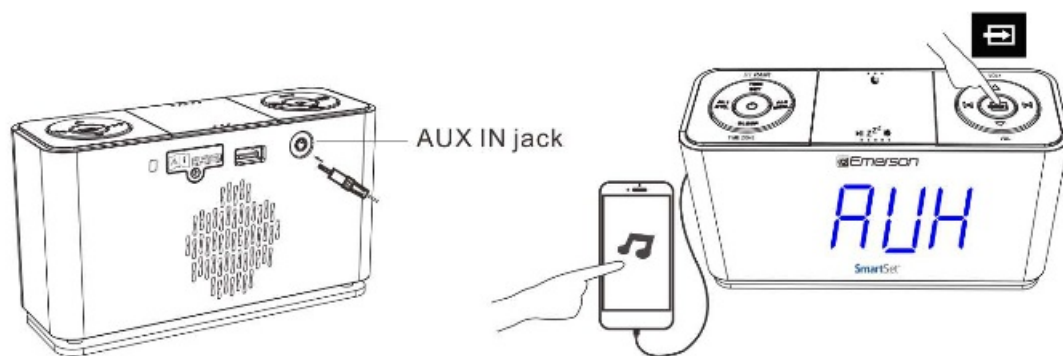


### USB for Charging



Output 5V up to 1.5A for charging mobile phone or portable digital audio player.

 **Note:** Charging current drawn from the unit may vary due to different USB charging cable conditions or battery charging characteristics

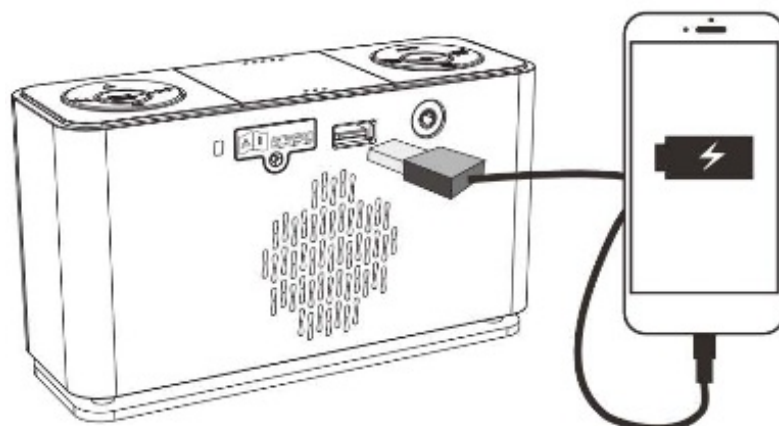

## Changing the Lithium Battery

  - When the  LOW BATT indicator 'Flashes'. you should change the battery that is used for the backup clock and alarm setting as
- it will be 'Off ' when you have changed the battery in the correct instructions.

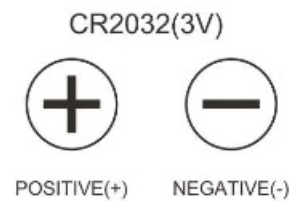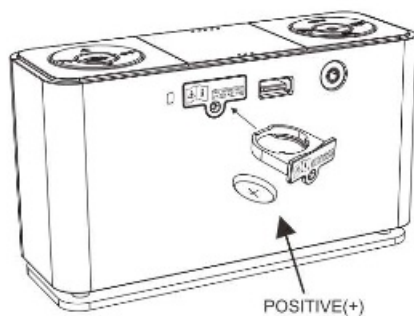

The battery backup is intended for short power outages only. The unit's primary functions cannot run on the battery backup alone. This unit uses a button cell battery that will last up to 1 year and maintains the time.



### WARNING

**DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DO NOT INGEST BATTERY CHEMICAL BURN HAZARD**

It is product contains a coickbutto celthalleattbesstioluttoseMatlffiyis swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children the battery compartment does not close securely, stop using the product away from children. If you think batteries might have been swallowed or placed inside any part of the loot seek immediate medical attention.

The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.



■ This marking indicates that this product should not be disposed of with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this unit responsibly so as to promote the re-use of material resou-rces. To return your used device. please use return and collection systems or contact the retailer where the product was purchased as they know how to safely recycle this product.

## Care and Maintenance

### Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

### Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

## LIMITED WARRANTY

Emerson Radio Corp. warrants this product to be free from manufacturing defects in the original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from the date of original purchase in, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:

\* Repair service for ninety (90) days from the date of original purchase at no charge for labor and parts. To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020. Have your Model number, Serial Number, and dated Proof of Purchase with you when you call. In the event the product must be returned to Emerson:

\* Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive the same unit back.

\* Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.

\* Enclose a note with your name, address, phone number, Return Authorization number, and a brief reason for returning the unit.

\* Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase).

\* Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).

**NOTE** This warranty does not cover

(a) Damage to equipment not properly connected to the product.

(b) Cost incurred in the shipping of the product to and from Emerson's Return Facility.

(c) Damage or improper operation of the unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions (including cleaning instructions) provided with the product.

(d) Ordinary adjustments to the product can be performed by the customer as outlined in the owner's manual.

(e) Signal reception problems are caused by external antenna or cable systems.

(f) Products not purchased in the United States.

(g) Damage to the product if used outside the United States.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

### 10-90-1402A

The serial number can be found on the back cabinet We suggest that you record the serial number of your unit in the space below for future reference **Model Number: CKS1507**

**Serial Number:**





### SERVICE

ADDITIONAL SET-UP OR OPERATING ASSISTANCE

PLEASE CALL:

1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE E-MAIL TO:

[internet@emersonradio.com](mailto:internet@emersonradio.com)

OR WRITE TO:

Emerson Radio Corp.

Consumer Affairs Dept.

3 University Plaza,

Suite 405

Hackensack, NJ 07601

Emerson Part No. CKS1507-20170323-03

Printed in China

## Documents / Resources



[EMERSON CKS1507 SmartSet Clock Radio with Auto Time Setting System](#) [pdf] Owner's Manual

CKS1507, SmartSet Clock Radio with Auto Time Setting System, CKS1507 SmartSet Clock Radio with Auto Time Setting System