

 **Emerson**
EDS-1000
Bluetooth Party
Speaker With
Digital Drum
Function



Emerson EDS-1000 Bluetooth Party Speaker With Digital Drum Function User Manual

[Home](#) » [Emerson](#) » Emerson EDS-1000 Bluetooth Party Speaker With Digital Drum Function User Manual 

Contents

- [1 Emerson EDS-1000 Bluetooth Party Speaker With Digital Drum Function](#)
- [2 Specifications](#)
- [3 In the box](#)
- [4 Features](#)
- [5 INSTRUCTION FOR USE](#)
- [6 Troubleshooting](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Emerson EDS-1000 Bluetooth Party Speaker With Digital Drum Function



IMPORTANT SAFETY INSTRUCTIONS:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADE CANNOT BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OF SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not expose this appliance to rain or moisture.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install according to the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the tripod sold with the apparatus.
13. Unplug this apparatus during lightning storms or when unused for long periods.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled, objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Specifications

- Driver 2*3"Woofer
- Function USB/BT/ Drum kit/AUX/MIC
- Power RMS 13W*2
- Speaker Frequency Response 80Hz-10KHz
- N.W. 7.54 lb
- DC Supply DC 5V/2A
- DIMENSION 33.5*22.5*13.5cm 13.19 × 8.86 × 5.31"

Warning: If the unit has no power, charge the battery for at least 30 minutes before use.

Getting started

- Remove the unit from the box
- Remove any packaging from the product
- Place the packaging inside the box and store it for safekeeping

In the box

 
- EDS-1000
- Power adapter
- Instruction manual
- Warranty Card
- Drum sticks

Features

 
- 7 drum pads
- Bluetooth wireless connection functionality
- Multi-color LED lights
- With USB support
- 3.5 mm AUX input
- Microphone input
- 7.4V/2600mAh Lithium rechargeable battery
- Output power:26W(2*13W)RMS





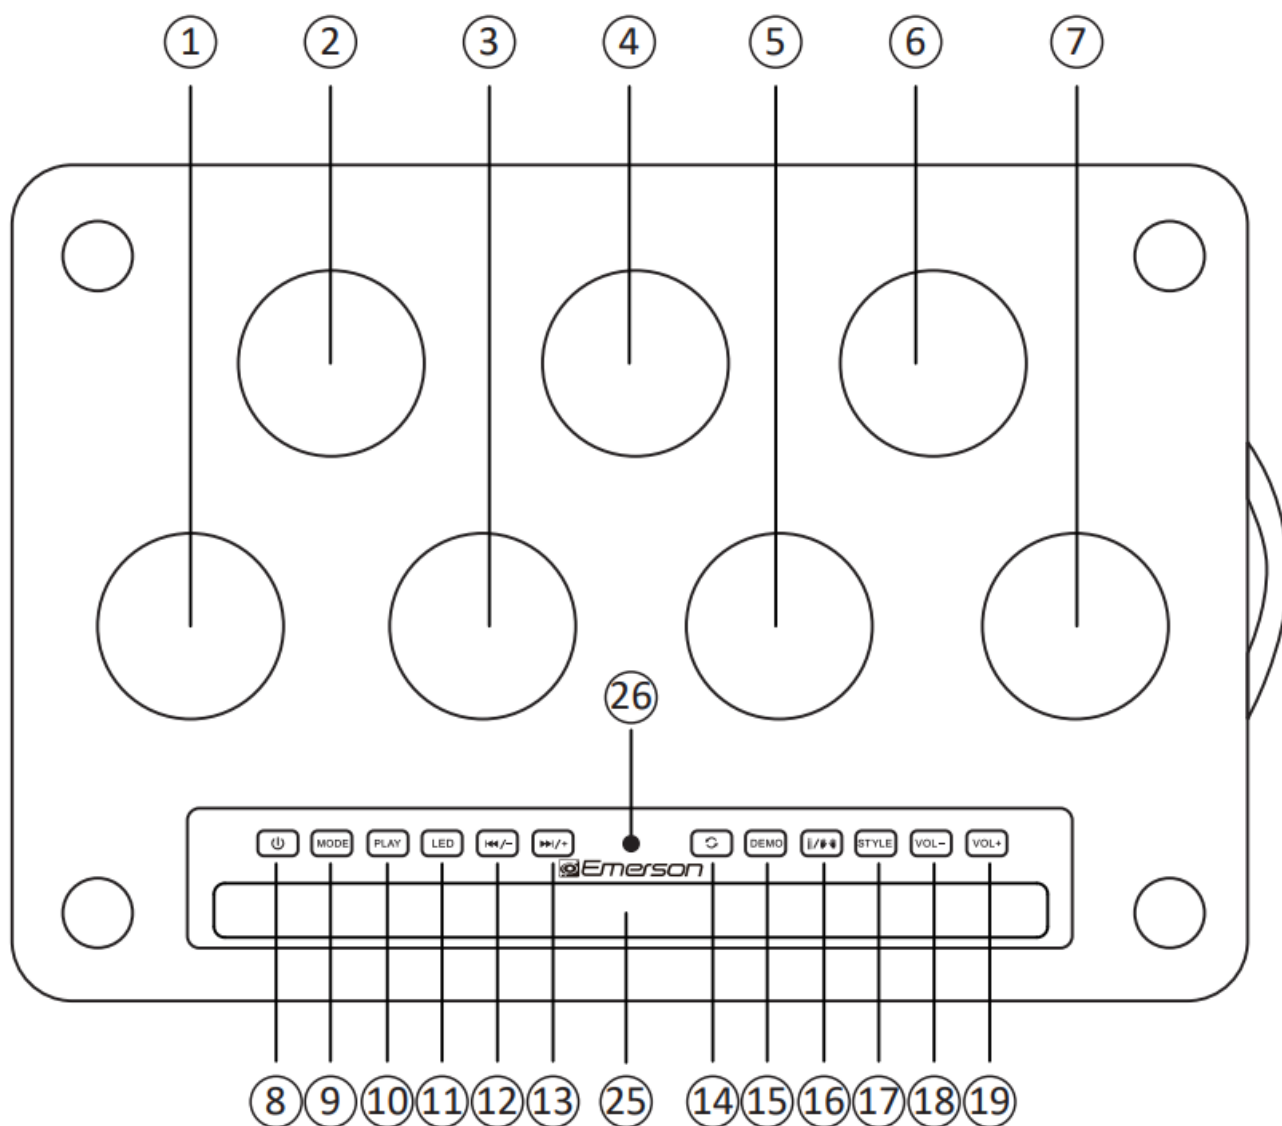



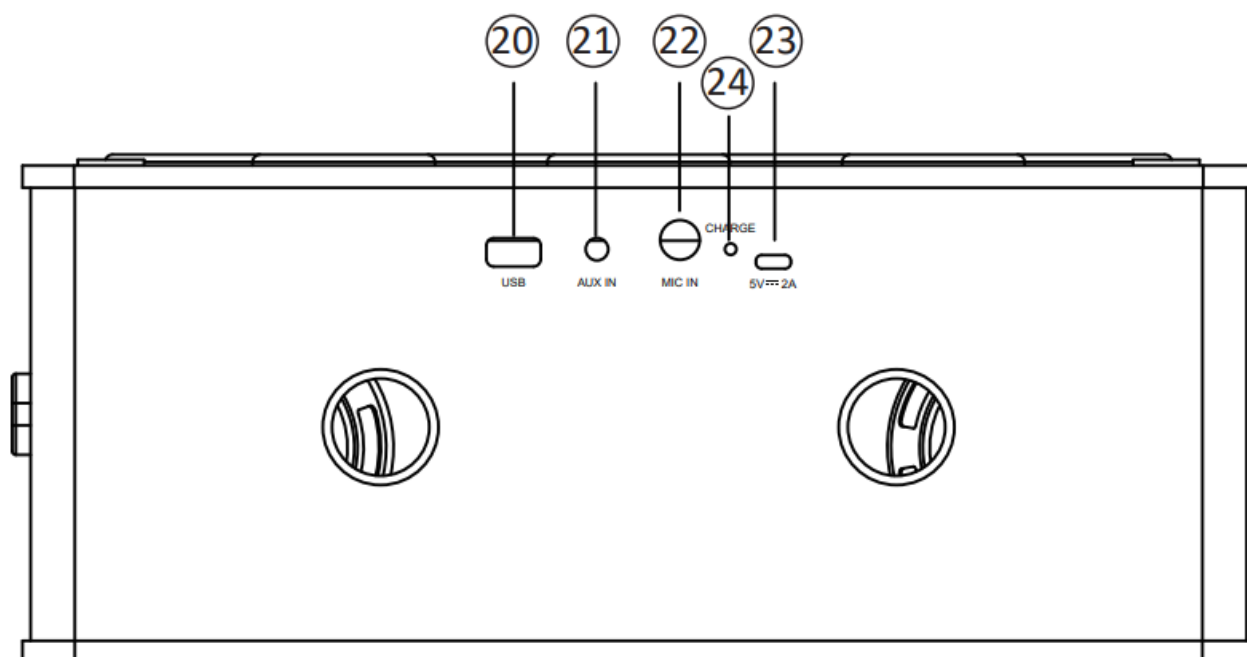


Product Diagram

TOP:



Rear:



1	Drum pad	Drum pad (Closed Hi-hat)
2	Drum pad	Drum pad (Ride)
3	Drum pad	Drum pad (TOM2)
4	Drum pad	Drum pad (TOM1)
5	Drum pad	Drum pad (Crash cymbal)
6	Drum pad	Drum pad (Snare drum)
7	Drum pad	Drum pad (Bass drum)
8		Long Press Power ON/OFF
9	MODE	Select mode playback (AUX/Bluetooth/USB)
10	PLAY	Start/pause playback
11	LED	Multi-LED lights mode on / off
12		Short press to reduce volume of the music(the LED lights display area ②5 will be red color, the red LED light will by synchronized by the music volume) Long press for previous track
13		Short press to increase volume of the music (the LED lights display area②5will be red color, the red LED light will by synchronized by the music volume) Long press for next track
14		MIC Volume /ECHO mode switch Press the  button, it will be on MIC volume control mode, LED lights display area②5will be green color, it can adjust the MIC volume to by press   button Press the  button again, it will be on ECHO control mode, LED lights display area will be blue color, it can adjust the ECHO to by press   button (Remarks: When need to switch to MIC Volume/ECHO control mode, need to be operated within 3.5 seconds, atier 3.5 seconds when it's no operation, it will switch to defaulted VOLUME-/+ of the music.)
15	Demo	Play pre-installed demo songs(Totally 4 pre-installed demo songs, it will stop play demo songs when press 5th times on the Demo button.)
16		Defaulted drum sticks interactive function mode, press this button again for switching to Hand playing drum mode
17	SYTLE	Modify drum effect pitch


18	Vol -	Decrease volume of the drum
19	Vol +	Increase volume of the drum
20	USB port	USB port
21	Aux input	Aux input (3.5mm)
22	MIC	Microphone input
23	TYPE-C charging	Power adapter
24	Charging indicator	When charging, the red light on Fully charging, the light will turn off
25	LED lights display area	Multi-colors LED lights display area
26	Function status indicator	Function status indicator: USB: red light, Bluetooth: Blue light, Aux: Pink light

 
INSTRUCTION FOR USE

Connecting the power

Plug the power adapter into the power socket of the unit. Please fully charge the battery before first time used the unit.

Turning on/off the speaker

Long-press the  button to turn on/off the unit

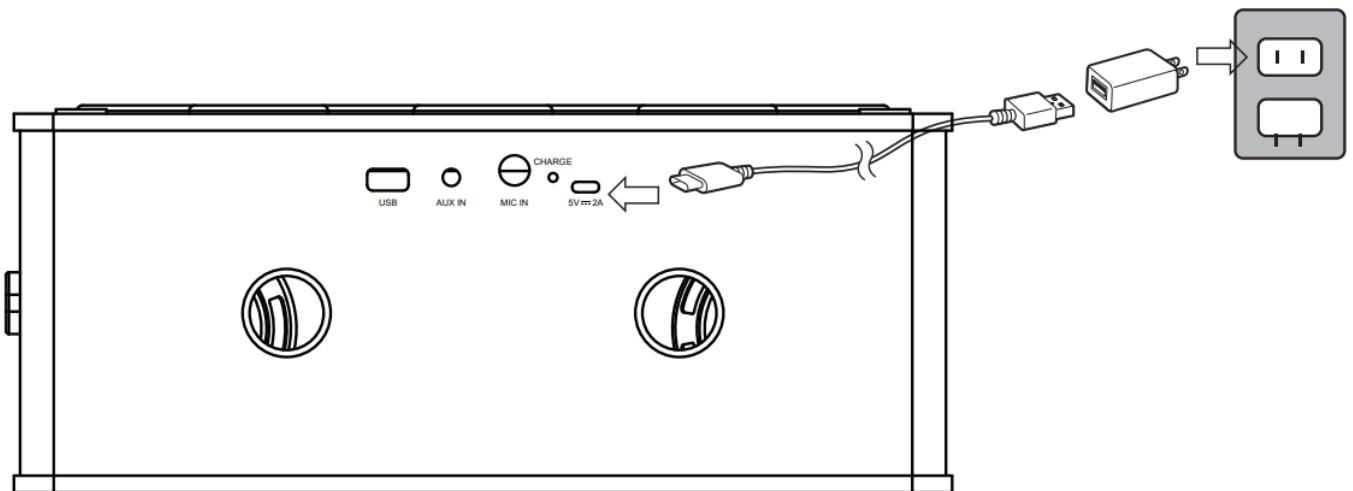

Demo songs play/stop

Play pre-installed demo songs(Totally 4 pre-installed demo songs, it will stop play demo songs when press 5th times on the Demo button.)

Speaker Lights

You can turn on/off the Multi-color LED lights by pressing the LED button. Thereares 5 types of modes for selection:

1. Multi-color LED lights
2. Single blue light
3. Single green light
4. Single red light
5. Turn off the LED lights. When there is an LED light, it will be synchronized with music.

Connect the Bluetooth audio output device.

To connect a Bluetooth audio output device (e.g. smartphone or tablet PC), proceed as follows:

 
Switch the speaker on.

Press the MODE button on the unit to switch to BLUETOOTH function, you will hear the Bluetooth prompt sound bluetooth and the function status indicator will turn blue. Turn on the Bluetooth function on the device, scan the unit "Emerson EDS-1000" and connect. When it is connected successfully, the blue indicator will become solid. Press Play to start playback. Press the VOL-/ + button on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level. Press and hold the PLAY button to disconnect Bluetooth

Note: The Bluetooth works best within 10 meters in open air.


Connecting an external playback device VIA AUX IN

Connect your audio device to the AUX IN terminal on the rear panel of the unit with an AUX IN cable (audio cable is not included). Press the MODE button on the unit to switch to AUX IN function, you will hear the prompt sound AUX IN and function status indicator will turn pink. Press the VOL-/ + button on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level. Control the playback with your audio device.

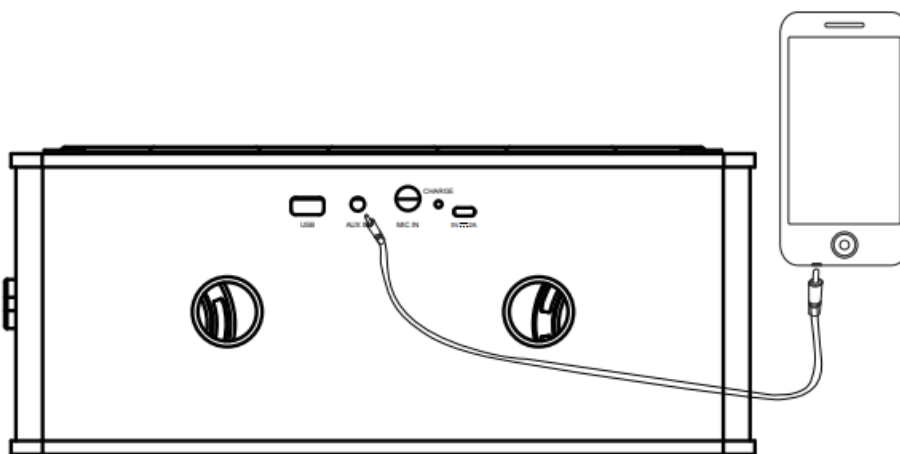

Inserting USB memory sticks

 
- Plug the USB memory stick to the USB terminal on the rear of the unit, function status indicator will turn red. The unit will switch to USB mode automatically or you can press MODE button to switch to USB mode. To pause playback, press the (PLAY) button on the unit. To resume playback, press the (PLAY) button again. To select a desired track, long press ◀◀/- or ▶▶/+ button.
- The supported file format is MP3.

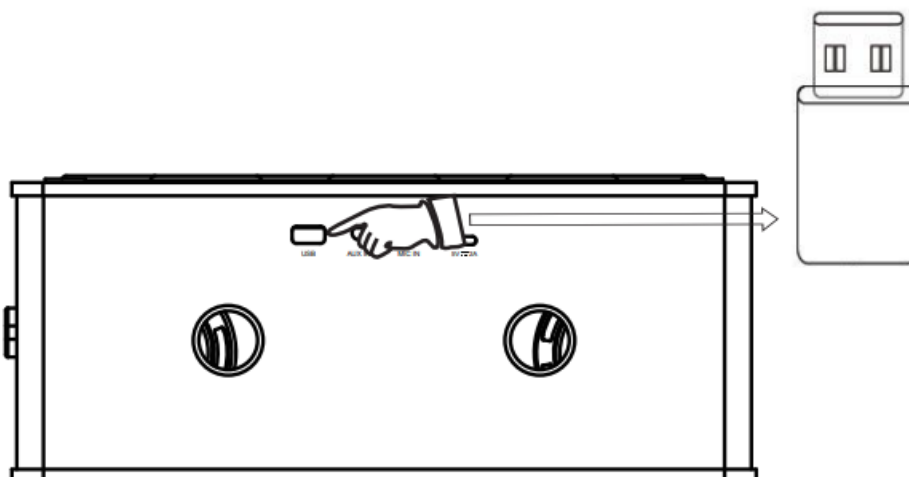

Connecting a microphone

Insert the cord of the microphone (not supplied) into the MIC plug on the back of the unit. Press the button to

 switch to MIC mode. Details please refer to button **14** for Microphone use instruction

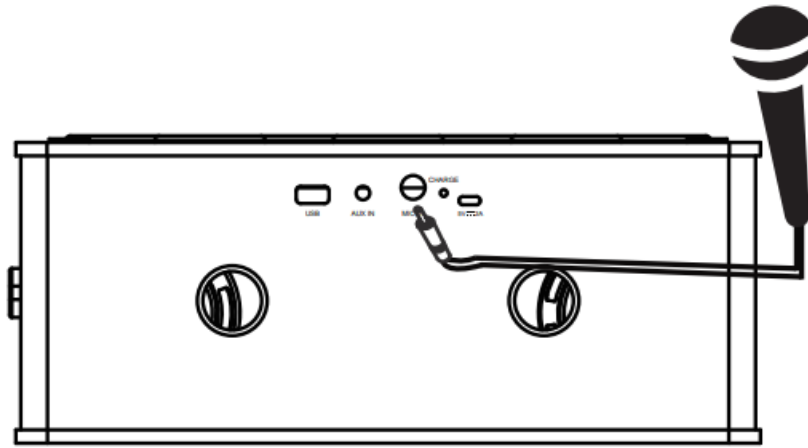

DO'S and Don'ts

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Don't use abrasive cleaning solvents to clean the speaker. ·Do not expose the speaker to extremely high or low temperature,s as this will shorten thThe e life of electronic devices distorts certain plastic parts.
- Don't attempt to disassemble the speaker as it may get damaged if you are not a professional.
- Do not expose the speaker to heat or fire. Avoid storage in direct sunlight.
- Do not subject the speaker to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the speaker if it has been damaged in any way.

Troubleshooting

No Power

- The unit does not have enough battery power.
- The battery is completely depleted. Recharge the battery.

No Sound

- Make sure the input LEVEL control is turned up.
- Make sure signal source is working and the connecting cables are in good shape and securely connected at both ends. MaKe sure the output volume control on the mixing console is turned up.
- Make sure the preamp or mixer does not have a Mute button engaged.

Noise is heard during playback

Move the speaker away from any computers or mobile phones.

Bluetooth: No sound is heard.

The unit is too far from the Bluetooth audio source device. The unit is not paired with the Bluetooth audio source device. The unit is not pressed PLAY bution for playback.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.emersonaudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support

2320 East 49th Street Vernon, CA 90058

Tel: (866)411-6292

Email:support@emersonaudio.com

Made in China

FAQs

Q: Can I use the speaker outdoors?

A: It is not recommended to expose the speaker to rain or moisture. Indoor use is advised for longevity.


Q: How do I charge the speaker?

A: Connect the power adapter to the speaker's USB CHARGE port with the provided cable. Ensure a 5V 2A power source for efficient charging.

Q: What should I do if the LED display is not working?

A: Check the power connection and ensure the speaker is turned on. If issues persist, contact customer support for assistance.

Documents / Resources

	<p>Emerson EDS-1000 Bluetooth Party Speaker With Digital Drum Function [pdf] User Manual EDS-1000, RSB-EDS-1000, RSBEDS1000, EDS-1000 Bluetooth Party Speaker With Digital Drum Function, EDS-1000, Bluetooth Party Speaker With Digital Drum Function, Party Speaker With Digital Drum Function, Digital Drum Function, Drum Function, Function</p>
---	--

References

-  [Emerson Audio – EMERSONAUDIO](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.