



EMERSON EM-60 Large Display Caller ID Owner's Manual

[Home](#) » [Emerson](#) » EMERSON EM-60 Large Display Caller ID Owner's Manual 

EMERSON EM-60 Large Display Caller ID Owner's Manual



Contents

- 1 Important safety instructions
- 2 SAVE THESE INSTRUCTIONS
- 3 Telephone Jack requirements
- 4 Important installation information
- 5 In the box
- 6 Location of controls
- 7 Installing the batteries
- 8 Connecting
- 9 Setting up the Caller ID menu
- 10 SET LANGUAGE
- 11 LOCAL AREA CODE
- 12 DATE AND TIME
- 13 LCD CONTRAST
- 14 SET VOICE
- 15 SET BACKLIGHT
- 16 EXIT SETUP
- 17 Caller ID
- 18 Caller ID display messages
- 19 Troubleshooting tips
- 20 Product maintenance
- 21 FCC and telephone company information
- 22 Warranty information
- 23 Documents / Resources
- 24 Related Posts

Important safety instructions

NOTE: Some of the precautions below may not apply to your product, e.g.: Battery and power cord precautions.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
3. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
4. Do not place this product on an unstable surface.
5. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
6. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock.
7. Never spill liquid of any kind on the product.
8. Use only the power cord and batteries indicated in this manual.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.

10. Plug the adaptor to the socket – outlet that is closest to the equipment and which is easily accessible.
11. Do not allow anything to rest on the power cord. Do not install this product where the cord may have anyone walking on it.
12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
14. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled onto the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - E. If the product has been dropped and damaged.
 - F. If the product exhibits a distinct change in performance.
16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
17. Do not use the telephone to report a gas leak in the vicinity of the leak.
18. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

For products that require batteries

 
Important battery precautions

- Use only the type of battery specified in this user manual
- Batteries may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged.
- Do not dispose of the battery(ies) in a fire. They may explode. Check with local codes for disposal instructions.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing different types of batteries or inserting them incorrectly, may cause them to leak.
- Discard any leaky or deformed battery immediately. Leakage from battery acid can cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

SAVE THESE INSTRUCTIONS

Telephone Jack requirements

Modular Telephone Line Jack

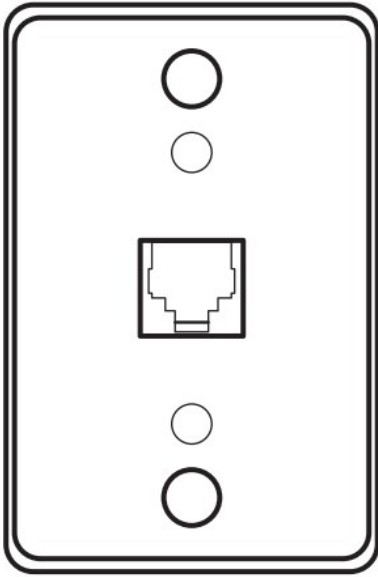

To use this product, you must have an RJ11C modular telephone jack. If you do not have a modular jack, please call your local telephone company to find out how to get one installed.

 
Important installation information

- Never install telephone wiring during a lightning storm.
- Never touch uninsulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Temporarily disconnect any equipment connected to the phone, such as faxes, other phones, or modems.


⚠ CAUTION: Disconnect the phone cord from the wall outlet before installing or replacing the batteries. (Only for products which require batteries)

In the box


- CALLER ID

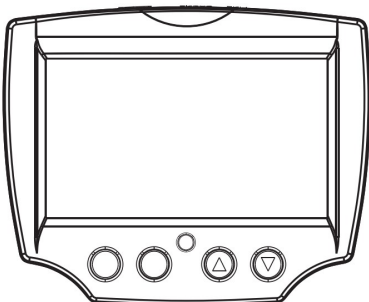


- CALLER ID BASE

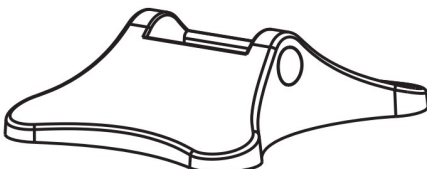 


- OWNER'S MANUAL

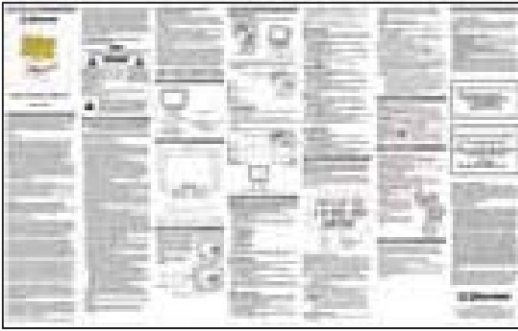 

- STRAIGHT TELEPHONE LINE CORD

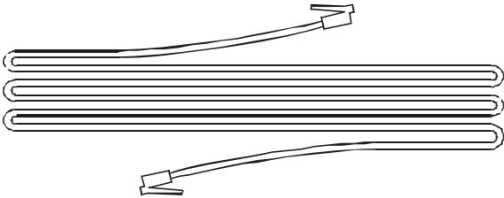 

Location of controls

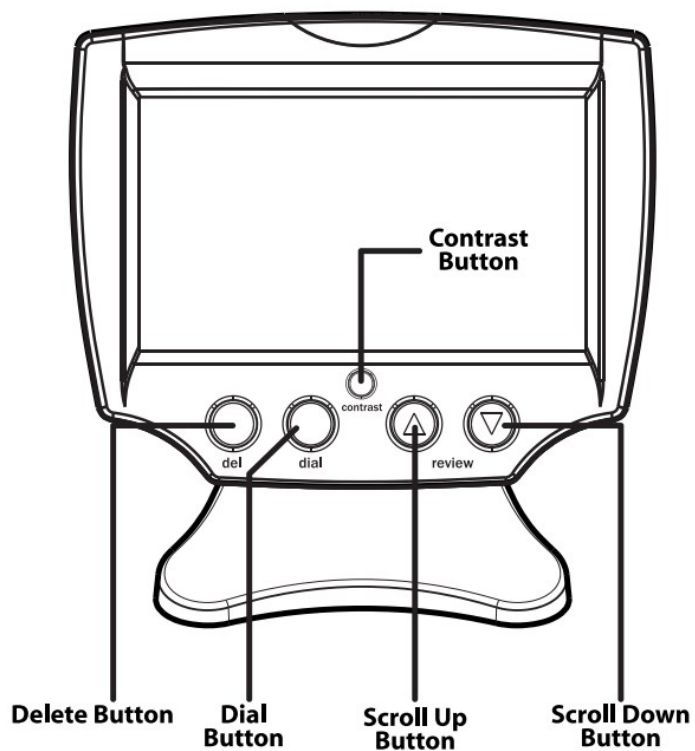 

Installing the batteries

 
 
This Caller ID requires 4 AA-size alkaline batteries (not included) \to operate the Caller ID and memory functions.

1. Make sure that the Caller ID Box is disconnected from the wall jack.
2. Remove the battery compartment cover located at the back side of the unit.
3. Install 4 AA- size alkaline batteries (not included) as shown in the diagram.

- “AA”size battery




- Back side of the Caller ID

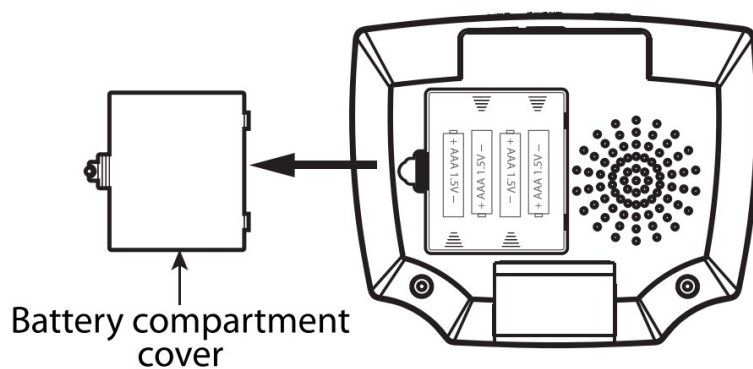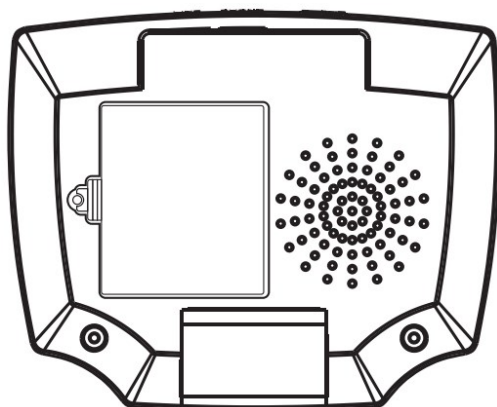


Connecting

DESK MOUNTING

 1. Connect the Caller ID with the base as shown in the diagram below.

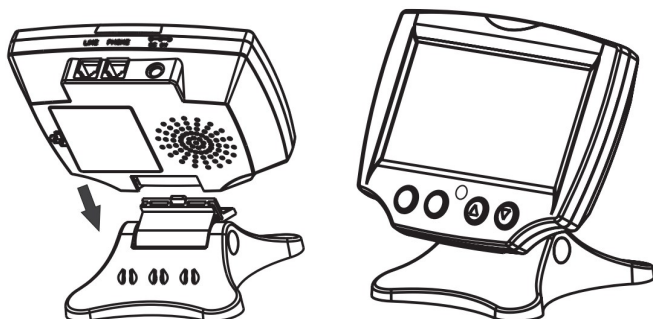

 2. Plug one end of the straight line cord into the jack at the top of the Caller ID marked "LINE", and the other end into a modular wall telephone jack.
3. Connect your telephone to the jack marked "PHONE".

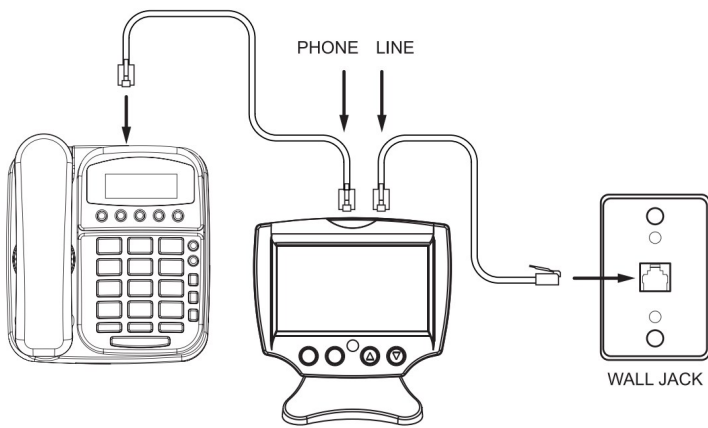


WALL MOUNTING

To mount your Caller ID box on a wall plate (not included), follow the instructions below:

1. Plug the straight line cord into a modular wall phone jack.
2. Align the holes on the base with the mounting studs on the wall plate.
3. Pull the base down onto the studs until the Caller ID box is secure.

 Straight telephone cord

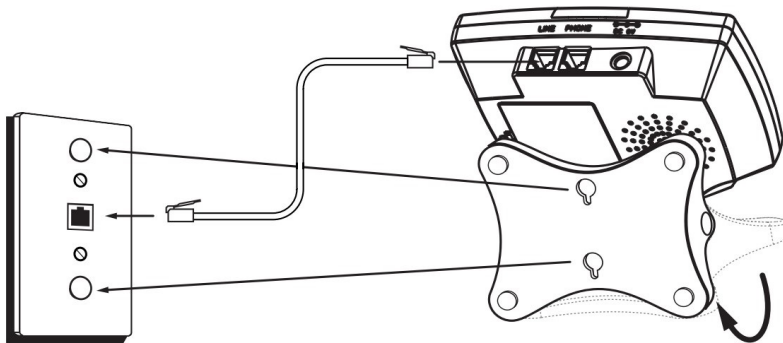

- Modular wall phone jack
- Turn the wall mount adaptor 90° after it is assembled

Setting up the Caller ID menu

IMPORTANT: Do not connect the Caller ID into the wall jack while setting up the Caller ID menu, because an incoming call may invalidate the information not yet saved.

1. Press and hold the [DIAL] button until the display shows "OPTIONS MENU A V".
2. Use the [A] or [V] buttons to scroll through the options below, and press the [DIAL] button to select the desired option you wish to set.
 - SET LANGUAGE
 - LOCAL AREA CODE
 - SET TIME/DATE
 - LCD CONTRAST
 - SET VOICE
 - SET BACKLIGHT

- EXIT OPTIONS

SET LANGUAGE

This setting allows you to choose the language (English, Spanish, or French) for the display information.

1. Press and hold the [DIAL] button until the display shows "OPTIONS MENU A V". ▲ ▼
2. Use the [▲] or [▼] buttons and select "SET LANGUAGE" and press the [DIAL] button to enter.
3. Use the [▲] or [▼] buttons to select the desired language, and press the [DIAL] button to confirm, and return to the main menu.

LOCAL AREA CODE

The Caller ID uses the programmed local area code to determine the number format to display when receiving Caller ID information. It is also used for the dial back feature.

1. Press and hold the [DIAL] button until the display shows "OPTIONS MENU ▲ ▼"
2. Use the [▲] or [▼] buttons and select "LOCAL AREA CODE" and press the [DIAL] button to enter. Use the [▲] or [▼] buttons to select the first digit of the local area code and press the [DIAL] button to confirm and skip to the next digit.
3. Use the same method to set the rest of the digits.

DATE AND TIME

The date and time is programmed automatically when the first Caller ID record is received. It is also possible to set the date and time manually if desired.

1. Press and hold the [DIAL] button until the display shows "OPTIONS MENU ▲ ▼"
2. Use the [▲] or [▼] buttons and select "SET TIME/DATE" and press the [DIAL] button to enter.
3. Use the [▲] or [▼] buttons to set the hour, minute, AM/PM, month, and day, and press the [DIAL] button to confirm your selections.

LCD CONTRAST

To adjust the LCD contrast, press the LCD [CONTRAST] button. (Default contrast setting is 3.)

OR

1. Press and hold the [DIAL] button until the display shows "OPTIONS MENU ▲ ▼"
2. Use the [▲] or [▼] buttons, and select "LCD CONTRAST" and press the [DIAL] button to enter.
3. Use the [▲] or [▼] buttons to set the desired contrast 1 – 5.
4. Press the [DIAL] button to confirm your selection.

SET VOICE

This Caller ID will “VOICE ANNOUNCE” incoming calls as well as displaying the information. It is possible to turn off the “VOICE

ANNOUNCE” feature, or select how many times 0 – 5 the caller information will be announced.

NOTE: The “VOICE ANNOUNCE” feature is factory preset at 1, so an incoming call will be announced once.

1. Press and hold the [DIAL] button until the display shows “OPTIONS MENU ▲ ▼
2. Use the [▲] or [▼] buttons, and select “SET VOICE” and press the [DIAL] button to enter.
3. Use the [▲] or [▼] buttons, and select a setting from 0 – 5. To disable the “VOICE ANNOUNCE” feature choose 0. Select 1 -5 to determine how many times the incoming call will be voice announced.
4. Press the [DIAL] button to confirm your selection.

NOTE: To disable the “VOICE ANNOUNCE” feature select 0.

SET BACKLIGHT

Set the backlight “ON” or “OFF”.

1. Press and hold the [DIAL] button until the display shows “OPTIONS MENU ▲ ▼
2. Use the [▲] or [▼] buttons and select “SET BACKLIGHT” and press the [DIAL] button to enter.
3. Use the [▲] or [▼] buttons to set the backlight “ON” or “OFF”.
4. Press the [DIAL] button to confirm your selection.


EXIT SETUP

- Use the [A] or [¥] buttons and select “EXIT SETUP”, and press the [DIAL] button to exit.

IMPORTANT: In order to use this unit’s Caller ID features, you must subscribe to Caller ID Service from your local telephone company.

This Caller ID automatically displays an incoming caller’s name and telephone number, as well as the date and time of the call. It can record and store the information of up to 60 calls into the Caller ID memory.

 Caller ID

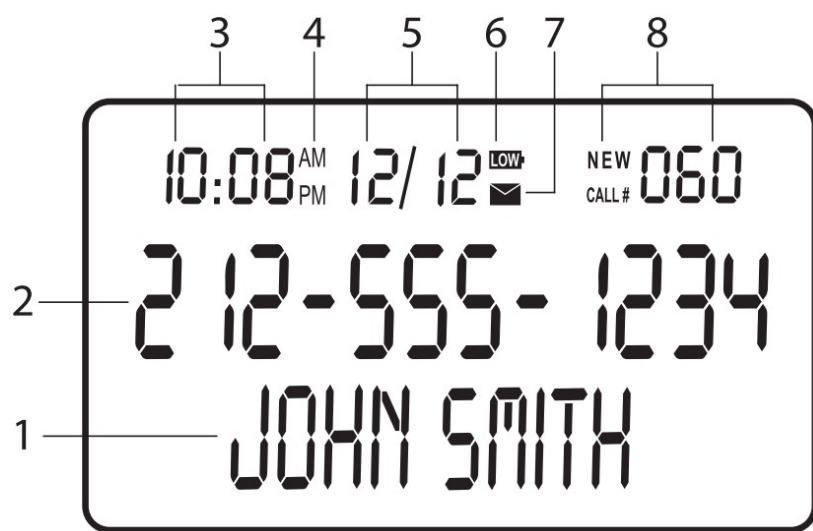

1. Name
2. Number
3. Time
4. AM/PM
5. Date
6. Low Battery Indicator
7. New Messages
8. New Calls

Receiving Caller ID information

When you receive a call, the caller's information is displayed, and

VOICE ANNOUNCED, allowing you to decide whether or not to answer the call. If you are away from home or unable to answer the phone, the information for up to 60 of the most recent calls will be stored into the Caller ID memory. When receiving the 61st call, the oldest Caller ID record will be deleted.

NOTE: To disable the "VOICE ANNOUNCE" feature, please refer to "Setting up the Caller ID menu" and the "SET VOICE" option.

Reviewing Caller ID information

To review the information of your received calls which are stored in the Caller ID memory, use the [▲] or [▼] buttons.

1. Press the [▼] button to view from the newest received call.
2. Press the [▲] button to view from the oldest received call.



NOTE: When the batteries are weak, the low battery indicator is displayed. Change the batteries as soon as possible; otherwise the Caller ID memory list may be erased.

Deleting Caller ID information

1. Use the [▲] or [▼] buttons to select the caller information you wish to delete.



2. Press the **[DEL]** button, the display will show “**DELETE CALL?**”, press the **[DEL]** button once more, the display changes to show the next or previous call, and the data is deleted.

To delete ALL Caller ID information

1. Press the [] or [] buttons to enter the Caller ID memory list.
2. Press and hold the **[DEL]** button until the display shows “**DEL ALL CALLS?**”.
3. Press the **[DEL]** button once more, the display changes to “**NO CALLS**” and all the Caller ID memories (including the new call memories) are deleted.

Dialing back a number from Caller ID memory

When reviewing Caller ID information, you may dial back the phone number displayed by pressing the **[DIAL]** button.

1. Use the [] or [] buttons and select the number you would like dialed from the Caller ID memory.
2. Press the **[DIAL]** button, the display shows “**PICK UP OR ADJ**”.
3. Pick up the telephone handset and the displayed number will be dialed automatically, or press the **[DIAL]** button to scroll through the dialing options (7, 10, or 11 digits), and then pick up the handset.

NOTE: Depending on how the incoming caller's phone number is formatted when it's received, and whether or not you previously pre-programmed your local area code into the setup menu, you may need to adjust the format of the incoming caller's stored phone number before making the call. Press the **[DIAL]** button to scroll through different dialing options (7, 10, or 11 digits), before picking up the handset.

Caller ID display messages


NEW CALL – Indicates call or calls that have not been reviewed.

NO CALLS – The Caller ID memory is empty.

UNAVAILABLE – The incoming call does not have Caller ID service. If “**UNKNOWN CALLER**” appears along with a calling number, the name information for that number is not available.

LOW BATTERY – The battery power is low, and the batteries need to be replaced as soon as possible. Please remember to use alkaline batteries, and do not mix old and new batteries.

BLOCKED CALL – The incoming call is registered as a private number, and Caller ID information is withheld.

 **NEW MESSAGES** – If you subscribe to the Message Waiting Service from your telephone company, this icon flashes when you receive a new message.

Troubleshooting tips

The Caller ID display does not show the caller's information

- The Caller ID unit will not function until you have subscribed to Caller ID service from your telephone company. Call your local telephone company to have Caller ID service installed on your phone line.
- If it is a private call or a blocked call, the caller's name and/or phone number will not appear in the display. (You

will see the time & date of the call, and the message “UNAVAILABLE” or “PRIVATE CALL””).

- Check all phone and wall jack connections, and make sure they are properly connected.

Caller's information is not registered to the Caller ID memory

- The caller may have an unlisted or blocked number to prevent Caller ID identification, it may have been an overseas call, or possibly there was noise on the line during that call.

The Caller ID display does not work

- Are all cords connected properly? Are all 4 “AAA” batteries installed? Make sure they are installed according to the polarity shown.

 
The language of the display is wrong

- Change the language, see “Setting up the Caller ID menu” and “**SET LANGUAGE**”.

The Caller ID display gets dim or is blank

- Reset the contrast level of the LCD display.
- Change the batteries.

The “VOICE ANNOUNCE” feature does not work / incoming calls are not voice announced

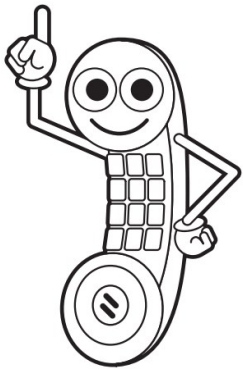

- Check the “SET VOICE” setting in the “Options Menu” select 1-5 to determine how many times an incoming call will be “VOICE ANNOUNCED”.

Product maintenance

Follow the guidelines below to properly maintain this product:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example: motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the unit and/or other rough treatment.
- Clean with a soft cloth.

- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

FCC and telephone company information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

This telephone system meets FCC Standards for Hearing Aid Compatibility.

Warning

TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within OF an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK TH OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) -instructions in the literature accompanying the product

Warranty information

1 Year Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:



Southern Telecom Inc.

ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:



1-877-768-8483 (Toll Free)

Monday – Thursday: 9AM – 5PM (EST)

Friday: 9AM – 3PM (EST)

or



via e-mail at: cs@southerntelecom.com

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SOUTHERN TELECOM INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

www.emersonphones.com

Manufactured by Southern Telecom Inc. Brooklyn NY. 11232

© 2009 Southern Telecom Inc. All rights reserved.

Emerson and the G-Clef logo are registered trademarks of Emerson Radio Corp. Parsippany, New Jersey USA.



Documents / Resources



[EMERSON EM-60 Large Display Caller ID](#) [pdf] Owner's Manual

EM-60 Large Display Caller ID, EM-60, Large Display Caller ID, Display Caller ID, Caller ID

[Manuals+](#)