

Emerson EPB-3003 Portable CD/Cassette Player featured



Emerson EPB-3003 Portable CD/Cassette Player User Manual

[Home](#) » [Emerson](#) » Emerson EPB-3003 Portable CD/Cassette Player User Manual 

Contents

- [1 Emerson EPB-3003 Portable CD/Cassette Player](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 DEVICE SPECIFICATIONS](#)
- [4 DEVICE FEATURES](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Emerson EPB-3003 Portable CD/Cassette Player



SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is

operated.

2. Keep these instructions. The safety and operating instructions should be retained for future reference.
3. Heed all warnings. All warnings on the appliance and in the operating instructions should be adhered to.
4. Do not use this apparatus near water. The device should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings.
7. Do not operate or place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug the apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as a damaged power supply cord or plug.
12. **WARNING:** To reduce the risk of fire or electric shock, do not expose this device to any moisture, including rain or high humidity. Do not place any vases, or any liquid containers on the speaker.
13. Only use the device in moderate climates.
14. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
15. Do not place open flame sources, such as lighted candles, on the apparatus.
16. **CAUTION:** These servicing instructions are for use by qualified service personnel only.
17. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
18. **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE DEVICE HOUSING. DO NOT OPEN THE UNIT. SERVICING SHALL ONLY BE DONE BY QUALIFIED SERVICE PERSONNEL.
19. **DANGER:** This Compact Disc player is classified as a Class 1 LASER PRODUCT. The CLASS 1 LASER PRODUCT label is located on the rear exterior.
20. **NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications.
21. Store your CD or other devices in a cool area to avoid damage from heat.

Battery Warnings:

- Remove batteries if exhausted or if they will not be used for a long period.
- The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.
- Do not mix battery types, e.g. Alkaline with zinc carbonate.

When inserting new batteries, replace all batteries at the same time.


PACKAGE CONTENTS

- Portable CD/Cassette Player..... 1 piece
- Power Adapter 1 Piece
- User Manual 1 Piece

DEVICE SPECIFICATIONS

- Power Source DC IN 9V 1.2A DC 9V 1.5V UM-2/C x 6 Pieces
- Power Consumption 10 Watts
- Audio Output of the Soundbar 1.5W x 2 Total 3W RMS
- Auxiliary Input Port 3.5 mm
- Headphone Input Port 3.5 mm
- Frequency Range
 - FM: 87.5 – 108 MHz
 - AM: 520 – 1710 kHz
- Unit Dimensions (Approximate)
 - Length: 9"
 - Height: 4.5"
 - Width: 8.5"
- Operating Temperature 41° – 95° F

DEVICE FEATURES

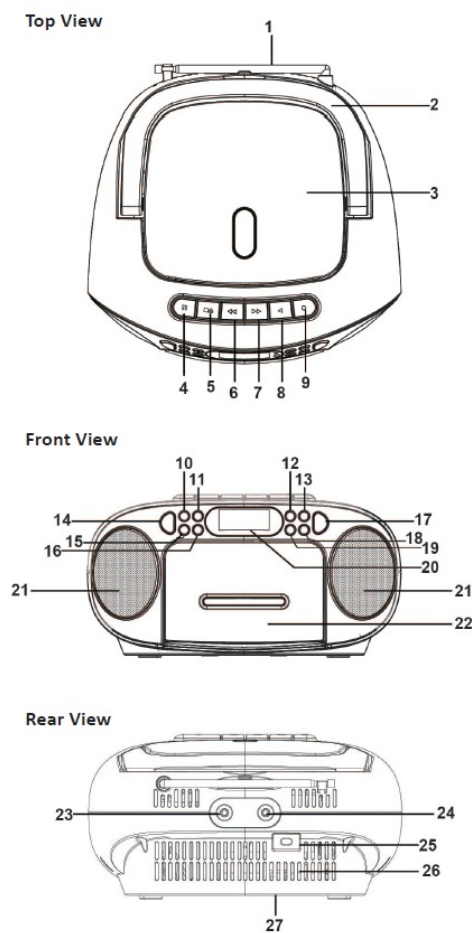

1. FM ANTENNA
2. HANDLE
3. CD DOOR
4. CASSETTE PAUSE KEY
5. CASSETTE STOP/EJECT KEY

6. CASSETTE FAST FORWARD KEY
7. CASSETTE REWIND KEY
8. CASSETTE PLAY KEY
9. CASSETTE RECORD KEY
10. SCAN BUTTON
11. STOP BUTTON
12. TUN + BUTTON
13. VOLUME + BUTTON
14. FUNCTION BUTTON
15. MEM – BUTTON
16. MEM + BUTTON
17. PROG./M./P-MODE BUTTON
18. VOLUME – BUTTON
19. TUN – BUTTON
20. LCD DISPLAY
21. SPEAKERS
22. CASSETTE COMPARTMENT
23. AUXILIARY INPUT PORT
24. HEADPHONE INPUT PORT
25. DC POWER ADAPTER INPUT PORT
26. VENTILATION HOLES
27. BATTERY COMPARTMENT

CONNECTING POWER

AC POWER

Connect the AC/DC adapter to the unit and into an AC wall outlet.

NOTE: Connecting to AC power automatically disengages the battery power source.

BATTERY POWER

1. Open the door to the battery compartment.
2. Install a quantity of six (6) UM-2/C size batteries (not included) into the compartment. Make sure to install the batteries according to the indicated positive and negative markings.

CAUTIONS:

- Remove batteries if they are empty or not being used for long periods.
- Batteries contain chemical substances. Dispose of empty batteries per local laws and requirements.

OPERATING THE DEVICE

General Operation

- To turn ON the device, press the POWER / FUNCTION button.

- To turn OFF the device, press and hold the POWER / FUNCTION button.
- To adjust the volume, press the Volume + /Volume – buttons.

OPERATING MODES

USING HEADPHONES

- For private listening, connect a 3.5mm headphone (not included) to the Headphone Input Port. Note: the speaker will be automatically disabled.
- CAUTION: Listening at high volumes can cause hearing loss.

USING THE CASSETTE PLAYER

- RECORD – Press to record from the radio or CD/USB player.
- PLAY – Press to play cassettes.
- REWIND – From stop mode, press to rewind the tape toward the beginning.
- F.FWD – From stop mode, press to advance the tape toward the end.
- STOP/EJ. – Press to stop the tape. Press to open the cassette compartment when no buttons are activated.
- PAUSE – Press to interrupt the tape play or record mode. Press two times to resume tape play or tape record mode.

PLAYING A CASSETTE TAPE

1. Press the / FUNCTION button on the unit to select TAPE mode.
2. Press STOP/EJ. Key to open the cassette compartment door.
3. Insert a cassette tape into the compartment with the open edge facing up and the full reel on the right.
4. Close the door securely.
5. Press REWIND or F.FWD to move the tape to the desired starting point.
6. Press the PLAY button to begin playing the tape.
7. Adjust the volume to your desired listening level.

AUTOMATIC STOP FEATURE

When the cassette deck is operating in play or record mode and the end of the tape is reached, the unit automatically shuts itself off and returns all buttons to the off position.

RECORDING AUDIO FROM THE RADIO

1. Load a blank tape into the tape compartment and close the door.
2. Select the FM function mode. Use the Tuning buttons to locate a station.
3. Press RECORD key to begin recording. RECORD key and PLAY key go down simultaneously.
4. Press STOP/EJ. Key to end recording.
5. To hear what you recorded, follow instructions in PLAYING A CASSETTE TAPE.

NOTE: PAUSE FOR A MOMENT – Using the PAUSE key on the cassette deck instead of the STOP/EJ. Key to momentarily interrupt recording gives you a much clearer recording. Press PAUSE key again to resume recording.

RECORDING AUDIO FROM CDs

1. Insert a blank cassette tape into the tape compartment.
2. Select the CD function mode.
3. Load a CD and select the desired track you want to record.
4. Press PLAY/PAUSE button to start playback. Press RECORD key to begin recording. The RECORD button and PLAY button go down simultaneously.
5. Press the PAUSE button to interrupt or edit a recording. Press it again to resume the recording.
6. Press the STOP/EJ button to end the recording.

RECORDABLE CASSETTE TYPES

Use only good quality cassettes (IEC TYPE 1) for making recordings. The device may be used to replay other types of cassettes, but it is unable to properly record on other types of cassettes.


PROTECTING THE RECORDING

Normally, anything recorded on the tape is automatically erased when a new recording is made. It is possible to protect your recording from accidental erasure by removing the tabs found on the rear of the cassette.

- When the cassette is held with the recorded side upper-most and the exposed tape facing the front, the protective tab will be found on the left rear of the cassette.
- All pre-recorded cassettes are protected in this way to prevent accidental erasure of the commercial recording. "Protected" cassettes will prevent the record button from being operated.
- If you attempt to record and find that this button will not be depressed, never force the mechanism or it may be damaged. Check that a cassette has been loaded and that the tab has not been removed. Recording on a cassette from which the tabs have been removed can be done by covering the tab openings with a piece of adhesive tape.

CARE OF THE CASSETTE MECHANISM

Gently clean the tape head and pinch wheel/capstan assemblies after every 10 hours of using the unit. A range of cassette care products are available.

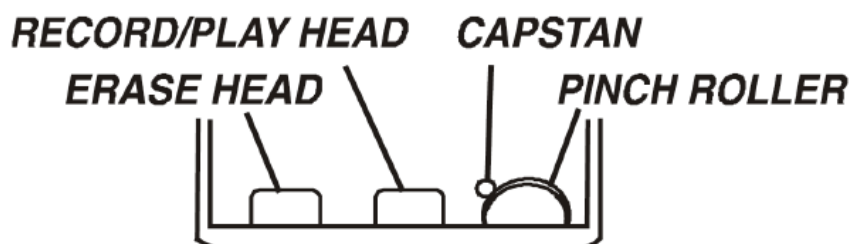

- The erase head, record/play head, and the surface of the pinch roller are delicate and must not be touched with metal objects, such as screwdrivers.
- You may find it easier to clean the assembly by pressing the PLAY button to move the bright head and pinch roller into view.
- Be sure to press the STOP button after cleaning the mechanism.
- Damage to the pinch roller can occur if the unit is left in PLAY mode with the power switch off.
- Under no circumstances should you attempt to lubricate any part of the machine.

CD OPERATION

CD TYPES

This device can only play digital audio CDs, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs, and CD-DA format digital audio CD/CD-R/CD-RW discs.

LOADING A DISC

1. Select CD Mode by pressing the / FUNCTION button.
2. Press the OPEN/CLOSE button to open the CD door, "OP" will be shown on the display
3. Place an audio CD DISC into the tray with the front side facing up.
4. Close the CD door.
5. To remove the CD, press the STOP button to stop playback, press OPEN/CLOSE button to open CD door, the display will show "OP". Hold the CD by its edges, and carefully take it out.

NOTES:

- Make sure the disc is stopped before opening the CD DOOR.
- To ensure good system performance; wait until the unit completely reads the disc before proceeding.
- If no disc loaded into the tray, or the disc is unreadable, the display will show "NO".

PLAYING A DISC

1. To start playback, press the SCAN button.
 - To interrupt playback, press the SCAN button.
 - To resume playback, press the SCAN button again.
2. To stop playback, press the STOP button.
3. To select a desired track, press the MEM- or MEM+ buttons to select the next or previous tracks.
4. To fast forward or reverse the track, press and hold the – or MEM+ buttons. Release to play at the desired time.

PROGRAM TRACKS

Programming tracks of disc are possible when playback is stopped. Up to CD 20 tracks can be stored in the memory in any order.

1. In stop mode, press the PROG./M./P-MODE button. The P01 will be on and "PROG" will flash on the display.
2. Press the MEM- or MEM+ buttons to select the first desired track to be programmed. Press the PROG./M./P-MODE button to enter. The display changes to show P02.
3. Repeat steps 1 & 2 to store other desired tracks until all tracks are programmed.
4. Press the SCAN button to start playback from the first programmed track.
5. Press the STOP button to stop program playback. To clear the program, you may press the STOP button when the disc stopped and open the CD compartment lid, program will be erased.

REPEAT PLAY

To Repeat a Single Track

1. When in play mode, press the PROG./M./P-MODE button. 'REP' will flash on the display. The current track will be played repeatedly until you press the STOP button.

2. To cancel repeat play, press the PROG./M./P-MODE button until 'REP' stops flashing on the display.

To Repeat All the Tracks

1. When in play mode, press the PROG./M./P-MODE button twice. 'REP' will be displayed. The tracks will be played repeatedly until you press the STOP button.
2. To cancel repeat play, press the PROG./M./P-MODE button until 'REP' is no longer displayed.

RANDOM PLAY

1. When in play mode, press the PROG./M./P-MODE button until "RDM" is displayed. Random play will start automatically, and will continue to play random tracks until all tracks are played. You can press the button to change tracks.
2. To cancel random play, press the PROG./M./P-MODE button until "RDM" is no longer displayed.

RADIO OPERATION

1. Press the / FUNCTION button on the unit to select the FM or AM function.
2. Tune to desired station by pressing the TUN.+ or TUN.- button on the unit, the display will show the band frequency. Example: FM 97.10 MHz, or AM 520 KHz.
3. Press and hold the TUN.+ or TUN.- BUTTON, the unit will scan the frequencies until a broadcasting station strong enough for good reception is found.
4. For FM mode, extend FM TELESCOPIC ANTENNA to its full length and gently move the unit back and forth to get the best reception, or place the unit in an open location.
5. To select other functions, press the / FUNCTION button.
6. To turn off the radio, press and hold the / FUNCTION button.

RADIO AUTO SCAN (SEARCH)

1. Press and hold the SCAN button. The device will automatically scan the radio until finding a strong signal. The device will start to broadcast from the P01 after searching is finished.
2. Use the MEM- or MEM+ buttons to choose between the preset stations.

RADIO STATION MEMORY OPERATION

You can store 30 (FM) radio stations in memory for your preference.

1. Press the TUN.+ or TUN.- buttons to select the first desired station. Then press the PROG./M./P-MODE button on the unit. "PROG" will show on the display.
2. Use the MEM- or MEM+ buttons to choose the desired sequence you want to store, then press the PROG./M./P-MODE button on the device to confirm.
3. Search another station, repeat steps (1) & (2) until all desired stations stored. Up to 30 stations can be programmed.
4. To choose between the stored stations, press and hold the MEM- or MEM+ buttons.

FCC NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPORT

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.emersonaudio.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Emerson Technical support.

EMERSON Technical Support

2320 East 49th Street


Vernon, CA 90058

Tel: (323) 583-8883

Email: support@emersonaudio.com

Made in China

Documents / Resources

| | |
|--|---|
|  <p>Emerson Portable CD/Cassette Player EPB-3003</p> <p>USER MANUAL Please read carefully before use and keep for future reference.</p> | <p>Emerson EPB-3003 Portable CD/Cassette Player [pdf] User Manual</p> <p>EPB-3003 Portable CD Cassette Player, EPB-3003, Portable CD Cassette Player, CD Cassette Player, Cassette Player, Player</p> |
|--|---|

References

-  [Emerson Audio – EMERSONAUDIO](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.