



EMERSON Lumity Supervisory Control SOAP Installation Guide

[Home](#) » [Emerson](#) » EMERSON Lumity Supervisory Control SOAP Installation Guide 

EMERSON Lumity Supervisory Control SOAP Installation Guide



Contents

- 1 Overview
- 2 SOAP ADF Versions
- 3 Installing the SOAP Extension Module
- 4 Installation Steps
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts

Overview

This document explains how to install the SOAP Extension Module onto Supervisory controllers.

SOAP ADF Versions

ADF Name : **Controller Type** : Supported Versions

530-0120_SOAP_ROLA.adf : **E3/Site Supervisor** : 2.16F02 and later

530-0121_SOAP_ReadWrite.adf : **E3/Site Supervisor** : 2.16F02 and later

530-0122_SOAP_ROLAmO.adf : **E3/Site Supervisor** : 2.16F02 and later

Installing the SOAP Extension Module

An ADF is an Application Description File. It is not automatically activated on a Supervisory controller after installation. A license key is required to enable. Contact your Sales representative or Customer Service to obtain an ADF. This can be uploaded on a Supervisory controller using the File Management screen. It requires a license key to activate the application after the ADF has been uploaded. The license key can be obtained from Customer Service with necessary approval.

Email Solutions.CustomerService@Emerson.com with the below information to generate the required license:

1. Name of the application/device
2. Supervisory controller MAC address and Model Type
3. Number of instance of the application

Prerequisites

You will need the following:

1. The SOAP Extension Module built for your version of Supervisory controller firmware.
2. The SOAP Extension Module license key for your unit.
3. Contact Customer Service for ADF Licensing information Solutions.CustomerService@Emerson.com

Installation Steps

Step 1 – Obtain ADF and License

Obtain the correct ADF for the Supervisory controller firmware version on the target unit and license key.

Step 2 – Installing ADF


Install the SOAP Extension Module ADF onto the Supervisory controller using the Install ADF File button and upload the features of the Supervisory controller.

1. First, go to the gear icon  > **Configure System> File Management & Licensing> Install ADF File** button.
2. Click **Install ADF File** then click **Select**.




Step 3 – Browsing for the ADF on PC

1. Select the **ADF** on your PC. (For this example, Indigo_Ice.adf is used).

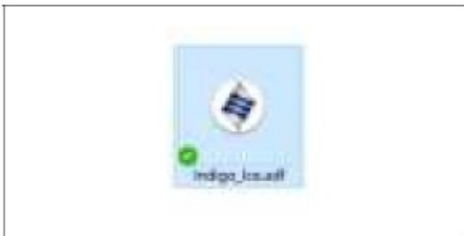


2. Click **Install** then confirm **OK**.

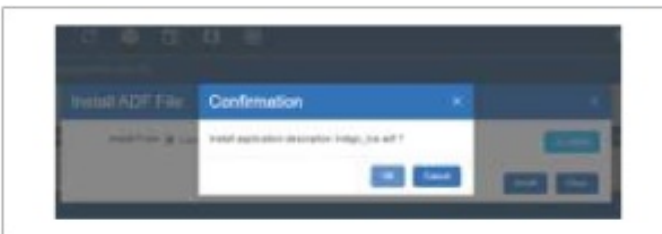

Step 4 – Loading the ADF

1. Once the ADF loads, click Reset then OK to reset system.

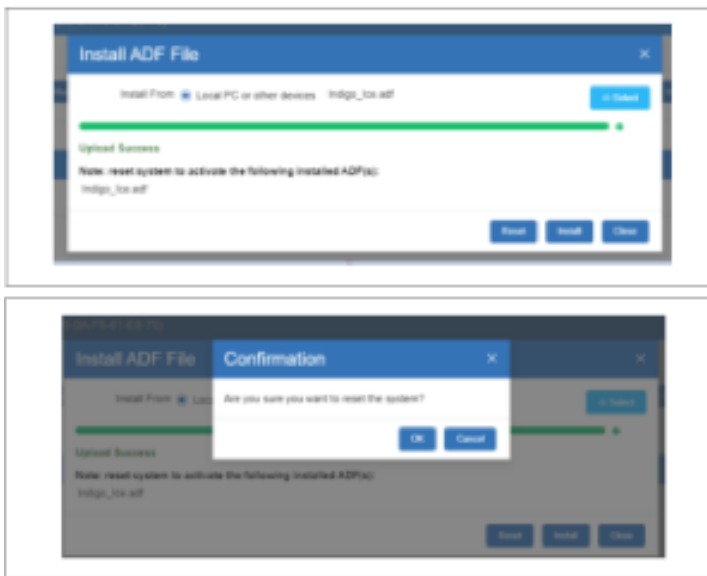


Stability Guideline Recommendations

- No more than 50 points per request.
- No more than 1 request every 10 seconds.

Step 5 –License Key Entry

1. Go to the gear icon > **Configure System> File Management & Licensing> Install License Management** button.
2. Enter the License Key.
3. Once entered, click **OK**.

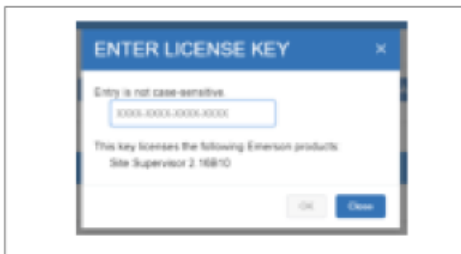

Documents / Resources

	<p>EMERSON Lumity Supervisory Control SOAP [pdf] Installation Guide Lumity, Supervisory Control SOAP</p>
--	---

References

- Solutions.CustomerService@Emerson.com
- Solutions.CustomerServices@Emerson.com

- [!\[\]\(83eb2aa26b610eb6a9dca7cf4702d681_img.jpg\) Emerson Retail Solutions Tech Support | Facebook](#)
- [!\[\]\(94dfacbf937cdd7da4837a6fcd8fc785_img.jpg\) Climate Technologies Worldwide | Emerson US](#)
- [!\[\]\(dae8c3c5fa7c80febd6526a5e8a853bf_img.jpg\) HVACR Technology and Infrastructure Solutions | Emerson US](#)

Manuals+.