

# **EMERSON Sensi Touch Smart Thermostat Installation Guide**

Home » Emerson » EMERSON Sensi Touch Smart Thermostat Installation Guide

EMERSON Sensi Touch Smart Thermostat

Installation Guide



#### Contents [ hide

- 1 Sensi Touch Smart Thermostat
  - 1.1 Overview
  - 1.2 Features
- 2 Easy install. Designed with you in mind.
  - 2.1 Key Features
- **3 Sensi Smart Thermostat Comparison**
- 4 Compatibility and common wire (c-wire) requirement
- 5 Terminal outputs and common wire (c-wire) requirement
- 6 What if I don't have a common wire (c-wire)?
- 7 Do I need a RC/RH jumper?
- 8 Wiring two transformer conventional single stage or two stage systems
- 9 Wiring heat pumps single stage or multi-stage systems
- 10 Heat pump wiring exceptions
- 11 System configuration and system type setup
- 12 System Compatibility List Humidity Control
- 13 How to Set Up Humidity Control on the Sensi Thermostat
  - 13.1 Installation
- 14 Connecting to Wi-Fi in simple
- 15 Connect with your customers Anytime. Anywhere.
- 16 Grow your business with a light commercial solution from Sensi
- 17 Documents / Resources
  - 17.1 References
- **18 Related Posts**


#### Overview

- Home comfort control Anytime. Anywhere.
- · Customizable HD color touchscreen
- · Distinct, clean design with a bold lens to fit the modern home
- Intuitive app and hardware design validated by research
- · Flexibility to select options and programs that fit your lifestyle

#### **Features**

- Available in White or Black
- · Color touch screen with unmatched clarity and usability
- · Remote app control
- · Geofencing smart feature and flexible scheduling options for energy savings
- · High/Low temperature text alerts
- · Extensive compatibility: heat, cool, heat pump, dual fuel
- Popular smart home platform integrations Amazon Alexa, Google Assistant, Apple Home Kit, SmartThings and Wink
- · Back glow with custom setting options
- Multi thermostat control capable for light commercial applications
- · Auto changeover
- · Humidity control

#### Easy install. Designed with you in mind.

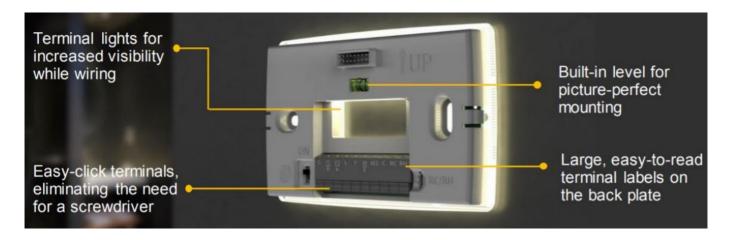

#### **Key Features**

- Terminal lights for increased visibility while wiring
- · Built-in level for picture-perfect mounting
- · Easy-click terminals eliminating the need for a screwdriver
- Size that covers the existing footprint of most thermostats.
- · Large, easy-to-read terminal labels on the back plate

#### **Sensi Smart Thermostat Comparison**

THERMOSTAT FEATURE	COM (1)  COM (1)  COM (1)  COM (1)  COM (1)  COM (1)	7 10 11 P
MSRP	\$169	\$129
Aesthetics	Modern / Simple / Sleek	Traditional / Approachable
Interface	Capacitive Touchscreen	Buttons
System Type	Universal 4H/2C	Universal 4H/2C
Contractor branding	App only	Device & App
C-Wire Required	Yes	No
Humidity Control	<b>✓</b>	<b>/</b>
Dual Fuel	<b>/</b>	<b>/</b>
Smart Feature - Geofencing	<b>✓</b>	<b>/</b>
Keypad Lockout	<b>✓</b>	<b>/</b>
o amazon alexa	<b>✓</b>	<b>/</b>
works with the Google Assistant	<b>/</b>	<b>/</b>
Works with Apple HomeKit	<b>✓</b>	<b>/</b>
works with SmartThings	<b>/</b>	<b>/</b>

# Compatibility and common wire (c-wire) requirement

# Common wire is required for

- Conventional heating and cooling systems
- Heat only or Cool only applications
- Heat pumps

## Not compatible with

- Millivolt systems
  - \*External 24 VAC transformer is an option.
- Communicating systems
- · Line voltage systems

SYSTEM TYPE	COMPATIBILITY	MODIFICATIONS
Conventional heating and cooling  • Gas furnace  • Air conditioner  • Electric furnace  • Boiler	Yes	Requires a common wire (c-wire)
Heat only • Gas furnace • Electric furnace • Boiler	Yes	Requires a common wire (c-wire)
Cool only • Air conditioner	Yes	Requires a common wire (c-wire)
Heat pump	Yes	Requires a common wire (c-wire)
Communicating proprietary systems	No	Needs standard HVAC wiring
Line voltage	No	Requires low voltage (20-30VAC)
Millivolt systems	No	Requires 20-30VAC

Terminal outputs and common wire (c-wire) requirement

OLD THERMOSTAT	SENSI THERMOSTAT	CONVENTIONAL SYSTEM	HEAT PUMP SYSTEM
RH	RH <sup>†</sup>	Power for heating, 24	V
RC, R	RC <sup>†</sup>	Power for cooling, 24	V
C, X, B**	С	Common wire, 24V	
Y, Y1	Υ	1st stage cool	1st outdoor stage heat
Y2	Y2/*	2nd stage cool or humidifier	2nd outdoor stage heat and cool or humidifier
W, W1, W/E, Aux/E, E	W/E	1st indoor stage heat	1st stage auxiliary/ emergency heat
W2 <sup>+++</sup>	W2/*	2nd indoor stage heat or dehumidifier	2nd stage auxiliary/ emergency heat or dehumidifier
G	G	Indoor blower (fan)	
O,B, <sup>††</sup> O/B	O/B	Changeover (reversin for heat pump or zon	
L <sub>s</sub>	L	no function	"L" terminal connection

The common wire could be labeled "C", "B" or "X" on the old thermostat. Please refer to the owner's manual of the old thermostat.

# What if I don't have a common wire (c-wire)?

There are a few options if the application does not have or will not allow the pulling of a common wire (c-wire) through the wall.

1. Look for an unused wire in the thermostat cable bundle

Video: Using an extra, unused wire as a common wire

2. Use the "G" (Fan wire)

Video: Using a g-wire (fan wire) as a common wire

3. Install an Emerson Thermostat Common Wire Kit

Video: Using an Emerson Thermostat Common Wire Kit

# Do I need a RC/RH jumper?

#### No jumpers required

- Sensi Touch Smart Thermostat has a built in RC/RH jumper, no need to field install a jumper
- If you have separate wires to RC and RH terminals (two transformer systems)
  - Label the wires RC and RH separately and then clip the jumper wire on the Sensi back plate.


#### RC/RH jumper location

• RC/RH jumper built-in on the back of the thermostat



No jumpers are required when installing the Sensi Touch Smart Thermostat


## Wiring – two transformer – conventional single stage or two stage systems

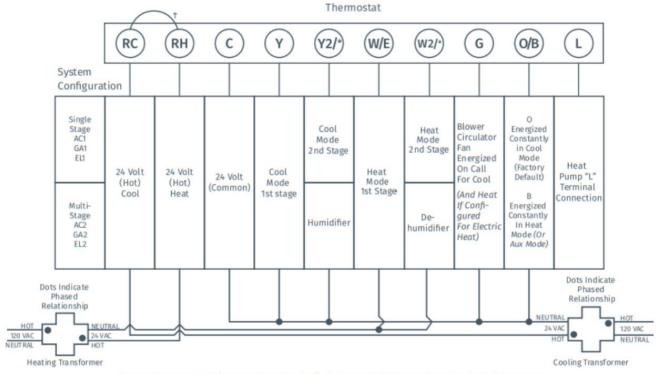

'Two transformers systems (separate RC and RH wires), clip internal RC/RH jumper, located on back of thermostat.

Quick tip: Thermostat wiring does not follow a standardized color code. Take a picture with your smart phone and label thermostat wires before removing old thermostat from the wall.

## Wiring – heat pumps single stage or multi-stage systems

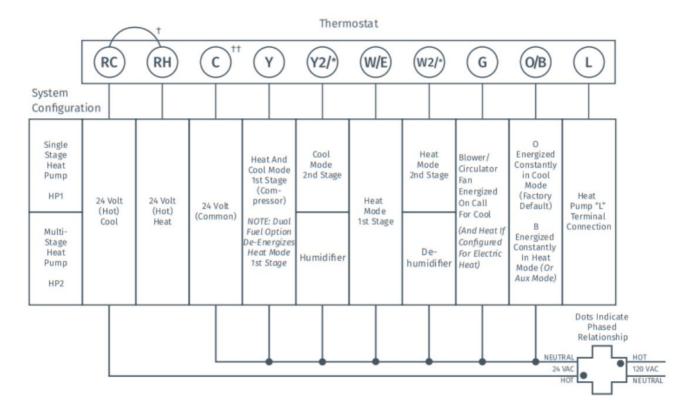

\*Internal jumper between RC and RH, located on back of thermostat.
\*\*Common connection required on Heat-only, Cool-only or Heat Pump systems.

Quick tip: Thermostat wiring does not follow a standardized color code. Take a picture with your smart phone and label thermostat wires before removing old thermostat from the wall.

# Heat pump wiring exceptions

## Separate W2 and E Wires

• Both wires will be labeled W/E and attached to the same terminal.

HEAT PUMPS WITH SEPARATE WIRES ON W2 AND E			E WIRES
Old t	nermostat		oel wire om wall
W2	Separate wire	W/E	Both wires will be
Е	Separate wire	W/E	attached to the W/E terminal

#### **B Terminal Wires**

- "B" terminal can be used for more than one. Here is the solution to cross.
  - If there is a wire on the "O" terminal, label the B wire C
  - If there is no wire on the "O" terminal, label the B wire O/B

B TERMINAL LABELING		
Old t	thermostat	Label wire from wall
В	Wire on "O" terminal	С
В	No wire on "O" terminal	O/B

# System configuration and system type setup

- 1. Sleep Mode
- 2. Back glow
- 3. Home Screen Content
- 4. Schedule
- 5. Wi-Fi
- 6. About Thermostat
- 7. Advanced Setup
- 8. Setup HVAC
- 9. Fan Mode Options
- 10. Humidify
- 11. Dehumidify

Once configured, Sensi Touch Wi-Fi Thermostat operates like traditional thermostat until it is connected to Wi-Fi via a smartphone

Menu item	Default	Options
Sleep Mode	Off	Turn sleep display mode on/off
Backglow	Off	Off / On
Home Screen Content	On	Indoor Humidity
	On	Time of Day
	°F	°F/°C
Schedule	-	5 / 2 Day Schedule
Wi-Fi	-	Connect to Wi-Fi
About Thermostat	-	Model Number/Reset
Advanced Setup		HVAC Equipment   Fan Mode Options
Set Up HVAC Equipment	AC2 / EL2	
	AC2	Outdoor Setup AC1/AC2/HP1/HP2/None
	EL2	Indoor Setup GA1/GA2/EL1/EL2/Fan
	0	Reversing Valve Position O/B/6/None
	None	Additional Accessories None/Add
	No	Humidifier (wired to thermostat) Yes/No
	No	Dehumidifier (wired to thermostat) Yes/No
Fan Mode Options	Off	Circulating Fan Off/On
		10% - 100% (5% increments)
Humidify	Off	Humidification Off/On
	40%	5%- 50% (5% increments)
Dehumidify	Off	Dehumidification Off/On
	50%	40% - 95% (5% increments)

### **System Compatibility List Humidity Control**

• Heat only: Humidifier only

• Cool only: Dehumidifier only

• 1 stage heat, 1 stage cool: Humidifier and Dehumidifier

• 1 stage heat, 2 stage cool: Dehumidifier only\*

• 2 stage heat, 1 stage cool: Humidifier only\*


• 2 stage heat, 2 stage cool: None\*

# How to Set Up Humidity Control on the Sensi Thermostat

<sup>\*</sup> Note: if the staging on a 2 stage heat or 2 stage cool system can be handled by the furnace/air handler board, that will open up the Y2 or W2 terminal for hum/dehum use.

- Install humidifier/dehumidifier equipment
  - Wire the whole-house humidifier to the Y2/\* terminal
  - Wire the whole-house or standalone dehumidifier to the W2/\* terminal
- On Sensi Touch, go to Advanced Setup in the menu and select Additional Accessories
- Depending on installed equipment, select appropriate configuration



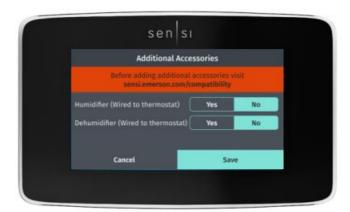

# Connecting to Wi-Fi in simple


















# Connect with your customers Anytime. Anywhere.

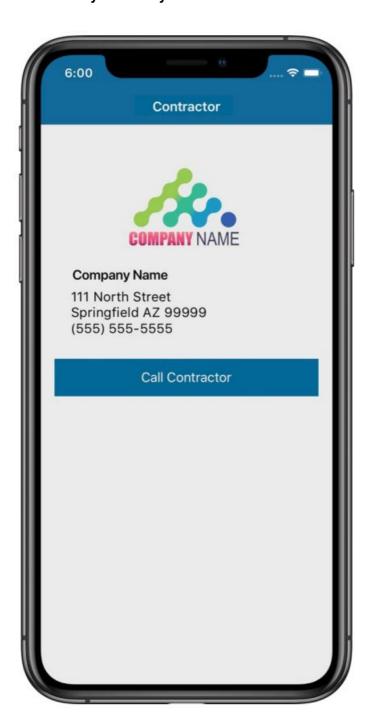

- Register your company at www.SensiRegistration.com
  - Upload your logo which will be displayed in your customer's phone
- During installation, enter your registered phone number in the Sensi app
  - The Sensi app stores your contact information in your customer's phone.

- When your customer needs service, you're just a tap away.
  - Also, if your customer receives a smart alert due to a system issue, your contact information will be included

### Grow your business with a light commercial solution from Sensi

Sensi Multiple Thermostat Manager offers a simple, affordable solution for property-wide comfort control, connected in one place.

Learn more and take a FREE test drive at sensi.emerson.com/mtm



# ■ Total Comfort Control

Monitor multiple commercial thermostats from anywhere through the intuitive portal featuring dragand-drop functionality.

# Reypad Lockout & Temperature Limits

Maintain total control of your thermostat settings by setting temperature limits or disabling changes made outside of the online control portal.

# Group Scheduling Monitor

Easily consolidate and customize settings across multiple thermostats by grouping and sorting.

# 4

### **Energy Saving Features**

Remote control and flexible batch scheduling can minimize energy waste and help you save money.



#### Extensive Compatibility\*

Works with HVAC systems in most facilities. All you need are our highly-rated Sensi Smart Thermostats.



#### **Smart Alerts**

Enable optional notifications that let you know when and where extreme temperature or humidity changes are detected in your building(s).

Learn more at emerson.com/sensipro Sensi™ Touch Smart Thermostat 1F95U-42WF Installation Training



#### **Documents / Resources**



# **EMERSON Sensi Touch Smart Thermostat** [pdf] Installation Guide Sensi Touch Smart Thermostat

#### References

- Sensi for Professionals | Emerson US
- S Sensi Multiple Thermostat Manager | Unlimited Thermostat Control | Sensi US
- • 
   © Join the Sensi™ partner program
- O Join the Sensi™ partner program
- S Sensi Multiple Thermostat Manager | Unlimited Thermostat Control | Sensi US
- Sensi installation: Using a g-wire (fan wire) as a common wire YouTube
- Sensi installation: Using an extra, unused wire as a common wire YouTube
- Sensi installation: Emerson Thermostat Common Wire kit YouTube

Manuals+, home privacy