



eMoMo Technology ITABLE3A Smart Tabletop User Manual

[Home](#) » [Emomo Technology](#) » eMoMo Technology ITABLE3A Smart Tabletop User Manual 



Technology ITABLE3A Smart Tabletop
User Manual

Contents

- [1 ITABLE3A Smart Tabletop](#)
- [2 Panel Overview](#)
- [3 Instructions](#)
- [4 Product parameters](#)
- [5 Common troubleshooting](#)
- [6 Quality Assurance](#)
- [7 FCCRequirement](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

ITABLE3A Smart Tabletop




Notice

- Thank you for purchasing this product.
- Please take time to read and understand the instruction manual carefully.
- Please keep the manual in good condition for future reference.
- Do not leave the unit unattended when the power is on. When the product is in standby mode, remove the device socket and disconnect the power supply.
- Do not operate this unit if the power supply or plug is damaged.
- If your iTable3 is damaged or immersed in water, disconnect the power supply immediately and contact customer service.
- Do not operate the cup holder with excessive weight.
- Power cables are kept away from heat stuff. If power cables are damaged, do not use them.
- Do not let anything put or insert into anything into exposed opening of this product.
- This product should be used indoors. Please avoid sun exposure, moisture and extreme temperature.
- Do not attempt to replace parts on this product. Opening or removing any part may result in electric shock or injury.
- If you have any medical conditions, pacemaker, or vulnerable to electronic interference, please consult with your Doctor before using the iTable.
- If you lack relevant experience or understanding of this product, please use this product under supervision and guidance.
- Children should use this product under adult supervision.
- If the power cables are damaged, they must be replaced by the manufacturer or experienced Service technician. Tampering with the product cause harm and void any Warranty.
- Please refer to the Troubleshooting section this manual for solutions to common issues.
- Contact customer service immediately for repair. Do not disassemble or attempt to repair anything not listed in

the troubleshooting section.

Panel Overview

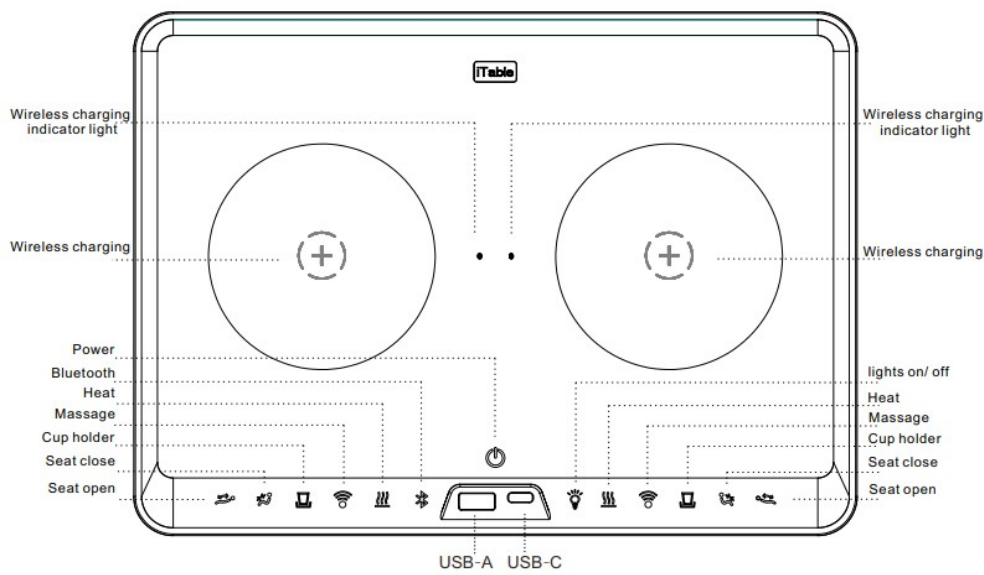












Buttons and Functions






Icon	Function	Icon	Function	Icon	Function
	Power		Seat open		Wireless charging
	Bluetooth		Seat close		USB-C
	Cup holder		Headrest open		USB-A
	Massage		Headrest close		lights on/off
	Heat				

Instructions

1. Plug the product into an available household power socket.
2. Touch any seat control button lightly, the seat button will illuminate, and the seat can be controlled. After 30 seconds, if there is no operation, the button light will automatically turn off.
3. Align the wireless charging receiver of the mobile phone and place it flat on top, then wireless charging indicator will emit a bright blue light.If the device does not respond, move the mobile phone until the receiver is aligned and indicator light comes on to confirm successful charging.
4. Waterproof USB-A : Supports the charging of mobile electronic devices with standard USB-A interface data cable.
5. Waterproof USB-C : Supports the charging of mobile electronic devices with standard USB-A interface data cable.

6. Touch and hold to  close the seat.
7. Touch and hold to  close the seat.
8. Touch and hold to  open the headrest.
9. Touch and hold to  close the headrest.
10. Touch and hold  for 2S to turn on the power supply for audio, cup holder, heating, massage and light control system. The blue light flashes on the Bluetooth button to enter the automatic search mode. Other buttons turn on white light. Press the power button in turn, and the color of all button lights will change from white, green, and red in turn. Press and hold the power  button to power off your iTable3.
11. When the blue light of the Bluetooth button flashes, the automatic search mode is entered. Open your Bluetooth device search by clicking on Pairing this product's Bluetooth name "iTable3". When the connection is successful, the Bluetooth indicator is steady blue, accompanied by a voice prompt, and the audio can be played. The connection fails. After 30 seconds, the Bluetooth indicator blinks and is the same color as other button indicators.
12. Touch  the Bluetooth button to pause/play music. Touch and hold the Bluetooth button for 2S to disconnect the current Bluetooth and enter the Bluetooth search state.
13. Touch  to turn on/off the sofa heating function. The system operates for 60 min by default, and automatically shuts down after 60 min.
14. Touch  to turn on/off the sofa massage function. The system works for 30 min by default and automatically shuts down after 30 min.
15. Touch  to turn on/off the LED light function. The system works for 4 hours by default and automatically turns off after 4 hours.
16. Touch  to lower the cup holder base and place your cup/can, etc. touch again, and the cup holder base rises for wireless charging activation.










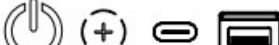



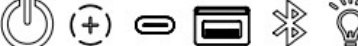



Controlled external accessories

Table control button	Controlled external accessories
	Seat motor
	Headrest motor
	vibrating motor
	heating sheet
	LED light


Product parameters

Table body size	275*200*70.6mm
Input	AC 100~240V
Rated power	120W
Sound power	8W*2
Sound response frequency	80HZ~20kHz
Signal to noise ratio	≥80db
Bluetooth version	5.0
Seat control system input	DC 29V
Seat control system power	120W
USB output A + C	5 V1 A /each
Wireless charging output	Max 18W

Product model and functions

Product model & Functions			
Product NO.	Functions	Product NO.	Functions
iTable3BCRRU		iTable3BRRU	
iTable e3CRRU		iTable3RRU	
iTable e3CRU		iTable3RU	
iTable e3BCU		iTable3BU	
iTablee3CU		iTable3U	
iTable e3CLRRU		iTable3LRRU	
iTablee3BCL		iTable3BL	
iTable 3BCLRRU		iTable3BLRRU	
iTable e312BCHLRU			

Common troubleshooting

Problem/Issue	Possible causes and solutions
No Power	<ol style="list-style-type: none"> 1.The power supply is not connected 2.The cable is disconnected or the plug is not properly inserted. 3.The connected socket is faulty.
No sound	<ol style="list-style-type: none"> 1. Enter the pause mode. Press  to continue. 2.The extension cable of the horn is disconnected.please check all connections or reconnect them.
Touch not responding	<ol style="list-style-type: none"> 1.Device interference. Remove the source of interference. Power off for 15 seconds and restart. 2.Improper operations result in device crash. Power off for 15 seconds and restart. 3.The connector is loose. Please check all connection headers and reconnect. 4.If the device is faulty, contact the customer service for replacement.
Bluetooth will not connect	<ol style="list-style-type: none"> 1.If another Bluetooth connection has been made, touch and hold the Bluetooth icon and try again. 2.Out of range. Please do not connect more than 25ft away from the product. Do not attempt to connect through obstacles.
seat will not recline	The connector is loose. Please check all connections and reconnect.
Wireless charging doesn't work	<ol style="list-style-type: none"> 1.Make sure your phone has wireless charging. 2.Please ensure that there is no metal foreign matter in the back shell of the mobile phone or case. 3.Please place the mobile phone at the wireless charging position. 4.The wireless charging has the function of overheating protection. When the internal temperature exceeds F/65°C, it will stop working and continue charging after the temperature drops.
The cup holder does not rise flush with the surface	The cup holder is running with heavy load. Please touch the cup holder several times. The cup holder will be flush with the face.

If you have tried everything and still can't solve the problem, contact customer service. Do not attempt to disassemble and repair by yourself.

Quality Assurance

- The terms of service will not affect your legal rights and interests in any way.
- The warranty period of this product is 24 months. (The date of delivery will begin this shall .)period
- You can confirm the date of manufacture according to the barcode on the product.
- If the barcode is damaged or lost so that the date of manufacture cannot be traced back, it will be deemed to be beyond the valid warranty period.
- During the warranty period, if any quality problem occurs during normal use, free repair or replacement of your iTable3 or accessories will be provided.
- Product quality problems caused by improper storage and maintenance of the product, unauthorized disassembly, expansion and modification of products are not within the scope of Quality Assurance.

The warranty does not apply if:

- Damage caused by improper use.
- Damage caused by improper transportation and connection.
- Damage caused by operation, modification and negligence not mentioned in the instructions for use.
- Damage caused by faulty or mismatched external equipment.
- Damage caused by force majeure (such as fire, flood, earthquake, lightning, war, riot, etc.).
- Damage caused by repair or disassembly by other non-professionals.
- For repair, please contact the customer service from which you purchased the product.

Note:

Proper use and proper storage of the product can effectively extend the service life of the product.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



<div>Table 3</div> <div>User Manual</div> <div></div>	<div>eMoMo Technology ITABLE3A Smart Tabletop [pdf] User Manual</div> <div>A4E-ITABLE3A, A4EITABLE3A, ITABLE3A, ITABLE3A Smart Tabletop, Smart Tabletop, Tabletop</div>
--	---

References

- [User Manual](#)