



## eMoMo iTable3BCTUDB Smart Tabletop User Manual

[Home](#) » [eMoMo](#) » eMoMo iTable3BCTUDB Smart Tabletop User Manual 

 


 
 
### iTable3BCTUDB User Manual

#### Contents





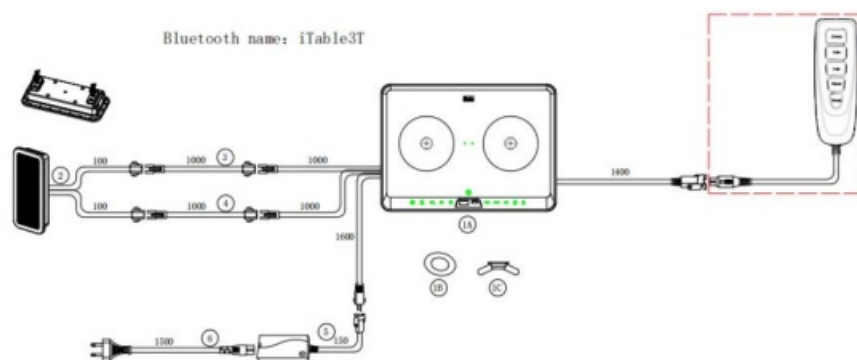

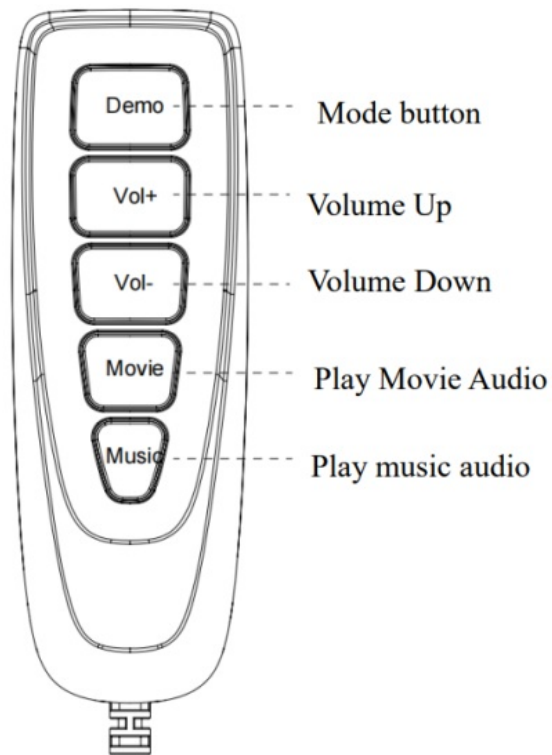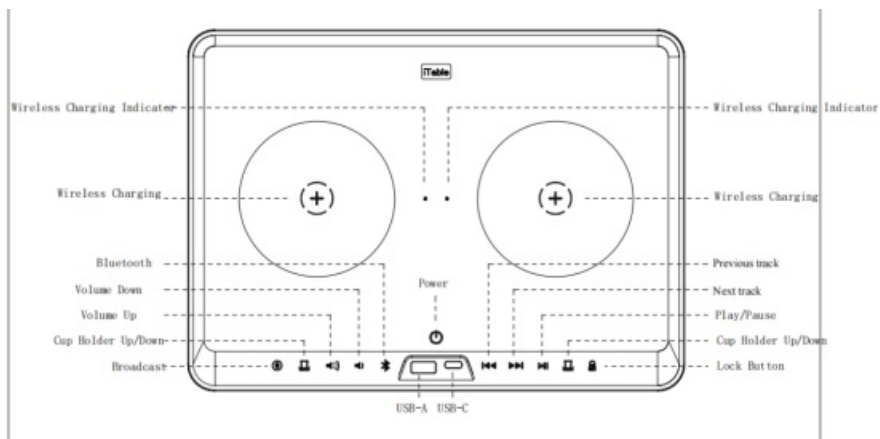




 
 
- [1 Assembly drawing](#)
- [2 Button Description](#)
- [3 Instructions](#)
- [4 Common troubleshooting](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)

#### Assembly drawing







## Button Description


Button	Button Name	Function
	Power button	Long press to turn on , long press again to turn off
	Broadcasting Function	Short press to enter the broadcast, short press again to exit the broadcast.
	Lifting cup holder	Short press the cup holder to lower it, short press it again to raise it.
	Volume Up	Long press to increase the volume continuously, short press to increase the volume step by step
	Volume Down	Long press to continuously reduce the volume, short press to gradually reduce the volume
	Bluetooth button	Long press to disconnect Bluetooth connection
	Previous track	Short press to skip to the previous track.
	Next track	Short press to skip to the next track.
	Play /Pause	Short press to pause; short press again to play.
	Lock button	Long press the button, the lock button lights up blue , other buttons turn off , and touch is invalid . Long press again to unlock.
	USB-A	Waterproof USB-A, output power: maximum 18W
	USB-C	Waterproof USB-C, output power: maximum 18W
	Wireless charging	Output power: 5W*2
Demo	Mode button	Short press to enter Demo mode and play pre-stored audio. Press and hold to exit Demo mode and switch to Bluetooth mode.
Vol+	Volume Up	Long press to increase the volume continuously, short press to increase the volume step by step
Vol-	Volume Down	Long press to continuously reduce the volume, short press to gradually reduce the volume
Movie	Play Movie Audio	Short press to play pre-stored movie audio
Music	Play music audio	Short press to play pre-stored music audio



## Instructions

1. Connect the product according to the assembly diagram and power it on .



## A Charging function



1. Align the wireless charging receiver of the mobile phone to the panel  ,and place it flat on the top  . If charging is successful, the wireless charging indicator will light up blue.




If the device does not respond, please move the phone until the receiving end is  aligned .

2.  Waterproof USB -A charging port , supports charging mobile electronic devices with standard USB-A interface data cable .
3.  Waterproof USB – C charging port , supports charging mobile electronic devices with standard USB-C interface data cable .



## B Bluetooth speaker function

1. Long press  to turn on the device, the voice prompt is " Power on ", the blue light of the Bluetooth indicator  flashes slowly , the voice prompt is: Wait for preparing , the product enters the waiting for pairing state , the pairing is unsuccessful , the Bluetooth indicator flashes for 30 seconds , and the white light is always on, but it is still in the waiting for pairing state.








Short press the power button in sequence , and the color of all button lights switches from white, green, and red in turn. Long press the power button  again to turn off the device, and the voice prompt is: Power off .

2. Turn on Bluetooth on your phone and search for the Bluetooth name: iTable3T. Pairing is done. After successful pairing, a voice prompt will appear: Bluetooth Connected . The Bluetooth indicator light  will remain blue .
3. Open the songs on your phone and play music. You can control the music on your phone or on the i Table3 control panel: Previous track, Next track, pause, volume down , volume up, etc.
4. Long press  to disconnect the Bluetooth connection . The Bluetooth indicator light  flashes slowly and a voice prompt "bluetooth disconnected" appears . The phone needs to be paired and connected again before music can be played .

 




## D cup holder function

1. Short press , the cup holder sinks, you can place a cup , etc. Short press  again, and the cup holder will rise, allowing for wireless charging.





 
## E Bluetooth broadcast function

1. Short press , turn on the broadcast function , the  button flashes blue light quickly, and the voice prompt is: Enter Broadcast mode . The product enters the broadcast transmission state ,  the broadcast indicator light flashes for 30 seconds , and then stays blue , but it is still in the transmission state.
2. Long press the receiver (secondary)  button to turn on, then short press the receiver (secondary ) , and the voice prompt: Enter Broadcast mode . The transmitter (primary) and the receiver (secondary) are paired. If the pairing is successful, the receiver (secondary)  will always light up in blue. At this time, the transmitter (primary) and the receiver (secondary) play music synchronously.
3. Short press  button, turn off the broadcast function , voice prompt: Exit broadcast mode.

### Note :

1. After the broadcast function is realized , the Previous track , Next track  volume up , volume down , play/ pause  operations of the receiver (secondary) are invalid . Other buttons only control the receiver







itself and have no effect on the transmitter (primary).

2. The transmitter (primary) can control the Previous track , Next track , volume up , volume down , play/pause of the receiver  (secondary) and transmitter (primary) at the same time .

## F Remote control function

1. Short press the Demo button, and the speaker will play the movie audio at 70% volume .  
( The first time you short press the Demo button, the volume is 70% , and the Demo volume is memorized before shutting down . )
2. Long press the Demo button to exit the Demo playback mode and enter the Bluetooth mode .
  - 1 Before entering the Demo, Bluetooth is already connected, and the voice prompt is: Bluetooth mode. Click the mobile player to play Bluetooth music directly.
  - 2 Before entering the Demo, if Bluetooth is not connected, a voice prompt will sound:  
Wait for preparing . The phone can then search for Bluetooth and pair to play music on the phone.
3. Vol + button: short press to increase the volume step by step , long press to increase the volume continuously (the highest volume is 100%, the lowest is 10%)
4. Vol -button: short press to reduce the volume step by step , long press to reduce the volume continuously (the highest volume is 100%, the lowest is 10%)
5. Movie button: Short press the Movie button to play the Movie audio in a loop.
6. Music button: short press the Music button to play the Music audio in a loop.





 
## F Remote control broadcast function

1. Short press the Demo button and the speaker will play the movie audio in a loop at 70% volume .
2. Short press the  button , turn on the broadcast function , the  button flashes blue light quickly, and the voice prompt is: Enter Broadcast mode . The product enters the broadcast transmission state , the broadcast indicator light  flashes for 30 seconds , and then stays blue , but it is still in the transmission state.
3. Long press the receiver (secondary) panel button  to turn on the device, and then short press the receiver (secondary ) panel  . The voice prompt: Enter Broadcast mode. The transmitter (primary) and the receiver (secondary) are paired. If the pairing is successful, the receiver (secondary) will light up blue. At this time, the transmitter (primary) and the receiver (secondary) will play  the Demo mode audio synchronously .
4. Press and hold the Demo button on the primary to exit the Demo play back mode, and at the same time exit the remote controller broadcast mode and enter Bluetooth mode .

## Product parameters

Table main body size	2 75*200*70.6mm
Input	D C2 9V2A
Speaker power	4W*2
Bluetooth version	5.0
USB A+C output	Max 1 8W
Wireless charging output	5W/each

## Common troubleshooting

Fault	Possible causes and solutions
Unable to power on	<ol style="list-style-type: none"> <li>1. No power connection.</li> <li>2. The wire is disconnected or the plug is not fully inserted.</li> <li>3. The connected socket is faulty.</li> </ol>
No sound	<ol style="list-style-type: none"> <li>1. Playback enters pause mode. Short press  Continue playing.</li> <li>2. The extension cable of the speaker is disconnected.</li> </ol> Please check all the connections or reconnect them.
Touch panel is unresponsive	<ol style="list-style-type: none"> <li>1. Equipment interference. Move away the interference source. Power off and restart after 15 seconds.</li> <li>2. The device crashes due to unreasonable operation. Restart after 15 seconds of power outage.</li> <li>3. The connector is loose. Please check all connectors and reconnect them.</li> <li>4. If the device fails, please contact the dealer for replacement.</li> </ol>
Bluetooth cannot connect	<ol style="list-style-type: none"> <li>1. Already connected to another Bluetooth connection, long press  to disconnect the current Bluetooth connection and try again.</li> <li>2. Beyond the effective range. Please do not connect beyond 8M of this product. Do not try to connect through obstacles.</li> <li>3. The product enters broadcast mode. Please press shortly  to exit broadcast.</li> </ol>
The music is played by another device	<ol style="list-style-type: none"> <li>1. As Bluetooth has a back-connection function, please check whether the phone is paired with two Bluetooth devices at the same time, cancel the pairing of one of them, and click the play button on the phone.</li> </ol>
Wireless charging does not work	<ol style="list-style-type: none"> <li>1. Make sure your phone has wireless charging capability.</li> <li>2. Make sure there is no metal foreign matter on the back cover of the phone.</li> <li>3. Move your phone toward the wireless charging position.</li> <li>4. The wireless charger has an over-temperature protection function. The internal temperature exceeds 65°C.</li> </ol> The battery will stop working and can continue charging after the temperature drops.
Cup holder rises Not flush with the surface	<ol style="list-style-type: none"> <li>1. The cup holder is loaded and running. Please touch  it a few times and the cup holder will be flush with the surface.</li> </ol>
Broadcast connection failed	<ol style="list-style-type: none"> <li>1. Please check if the secondary device is connected to another Bluetooth connection. Long press  to disconnect the current Bluetooth connection and try again.</li> <li>2. Please check the lines to see if they are all connected.</li> <li>3. Since Bluetooth has a reconnection function, please check whether the phone is paired with two Bluetooth devices at the same time, cancel the pairing of one of them, and click the play button on the phone.</li> </ol>

### RF exposure statement

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

### FCC Warning

This device complies with Part 18 and Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

 
**NOTE 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE 2:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

## Documents / Resources

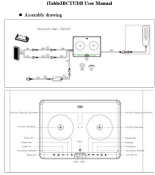	<a href="#">eMoMo iTable3BCTUDB Smart Tabletop [pdf] User Manual</a> 2BHM7-ITABLE3C, 2BHM7ITABLE3C, iTable3BCTUDB Smart Tabletop, iTable3BCTUDB, Smart Tabletop, Tabletop
---	--

## References

- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.