




## enabling device 2259 Flying Under the Clouds User Guide

[Home](#) » [enabling device](#) » enabling device 2259 Flying Under the Clouds User Guide 



### Flying Under the Clouds #2259 USER'S GUIDE

#### Fly high!

The jet flies under the clouds while music and jet sounds play when you activate your capability switch. Great for promoting visual tracking and teaching cause and effect. On/off volume control.

Size: 8"D x 7"H. Requires 4 AA Batteries. Weight: 1½ lbs.

#### Contents

- [1 Operation:](#)
- [2 Troubleshooting:](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

#### Operation:

1. Flying Under the Clouds requires 4 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the unit over to reveal the black battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and slide the covers off. Observing proper

(+) & (-) battery polarity, install four AA size batteries into the holders. Replace the battery compartment covers and screws. Adjust the ON/OFF/Volume knob to the desired volume level.

**Please Note:** Volume adjustment is limited to approximately ¼, higher or lower starting from the maximum volume level back. Volume adjustment is not linear on this product.

- 3. Connect Flying Under the Clouds to any external capability switch via the jack, located on the base of the unit. Flying Under the Clouds is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to use a 1/4- to 1/8-inch adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.
- 4. Now actuate your external capability switch to start Flying Under the Clouds. The jet flies under the clouds while music and jet sounds play. Great for promoting visual tracking and teaching cause and effect.
- 5. Flying Under the Clouds will only continue playing while the external capability switch is actuated. Once you release the switch, Flying Under the Clouds will stop.

**Troubleshooting:**

**Problem:** Flying Under the Clouds does not fly and/or there is no music.

**Action #1:** Rotate (spin) the batteries within the battery compartments to ensure a good connection. Check that all batteries are installed properly.

**Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action#3:** Make sure that you have your external switch plugged in all the way. There should be no gaps.

**Action#4:** Try your external capability switch with another toy/device to rule out the switch as the source of the problem.

**Care of the Unit:**

Flying Under the Clouds can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant.


We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**

Rev 4/12/17

**Documents / Resources**

	<a href="#">enabling device 2259 Flying Under the Clouds</a> [pdf] User Guide 2259, Flying Under the Clouds, Under the Clouds, the Clouds, 2259, Flying Under
---	--

**References**

- [enabling device 2259 Flying Under the Clouds](#) | [Enabling Devices](#)