


enabling
devices

**1217 Crawl 'N
Colors Chameleon**



Enabling Devices 1217 Crawl 'N Colors Chameleon User Guide

[Home](#) » [enabling devices](#) » Enabling Devices 1217 Crawl 'N Colors Chameleon User Guide 

Contents

- [1 Enabling Devices 1217 Crawl 'N Colors Chameleon](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Operation](#)
- [5 Troubleshooting](#)
- [6 Care of the Unit](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

enabling
devices

Enabling Devices 1217 Crawl 'N Colors Chameleon



Specifications

- **Product Name:** Crawl N Colors Chameleon #1217
- **Manufacturer:** Enabling Devices
- **Power Source:** 3 AA batteries (alkaline batteries recommended)
- **Recommended Age:** 3 years and above
- **Dimensions:** 8 x 4 x 6 inches

Product Usage Instructions

Battery Installation:

Gently turn the Roll & Learn Turtle over to access the battery compartment. Use a Phillips head screwdriver to remove the screw and slide off the battery compartment cover. Insert 3 AA alkaline batteries observing polarity. Replace the cover and screw securely.

Switch Connection:

Plug a capability switch into one of the 1/8 jacks on the back of the Chameleon. Ensure a secure connection without any gaps to enable proper control over the unit.

Operation:

- **For Jack 1:** Spin the roller or activate your switch to enjoy fun songs, phrases, and music.
- **For Jack 2:** Press the ABC, 123 Button or activate your switch to engage in learning activities about numbers, letters, and colors through phrases, sounds, and lights.

Link Squad Integration:

Refer to the original instructions included to connect Crawl N Colors Chameleon with other Link Squad toys for interactive play.

Care Instructions:

Clean the unit with a household multi-purpose, non-abrasive cleaner and disinfectant. Avoid abrasive cleaners and never submerge the unit to prevent damage to electronic components.

Teach ABCs, 123s, and colors with this colorful chameleon. Adapted for use with one or two switches, it sings

more than 25 songs about letters, numbers and colors when activated. The chameleon's tail and microphone light up and flash to the beat of the song. It's a push-along toy, too, for added fun and motor skill practice. Can also be used without a switch.

- **Size:** 8¾"L x 6 ¼"W x 3¾"H.
- **Requires** 3 AA Batteries.
- **Weight:** 1 lb.

Operation

1. Gently turn the Roll & Learn Turtle over to reveal the battery compartment. Carefully remove the small screw from the battery compartment cover using a Phillips head screwdriver, and slide the battery compartment cover off. Observing polarity, install 3 AA size batteries into the holder. Alkaline batteries must be used only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Replace the battery compartment cover and replace the screw.
2. Plug any capability switch into either of the 1/8" jacks located on the back of the Chameleon, make sure the switch is plugged in all the way. There should be no gaps between the connections, if there is a gap the Chameleon will stay ON and your switches will have no control over the Chameleon.
3. For one jack. Spin the roller or activate your switch and listen to fun songs. Phrases and music. For jack 2. Press the ABC, 123 Button or activate your switch and Chameleon introduces numbers, letters and colors through phrases, fun sounds and lights! Encourages discovery and exploration and teaches cause and effect.

Please Note: Crawl N Colors Chameleon is part of the Link Squad toys. See the original included instructions on how to connect him to his pals and learn about how they interact with each other.

Troubleshooting

Problem: Crawl N Colors Chameleon fails to operate, or operates incorrectly.

1. Action #1: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries.
2. Action #2: Check your batteries – There is a 99% chance that either one is installed incorrectly and/or one is weak/dead.

Please Note: When you are finished using Crawl N Colors

Chameleon remove your external switches. This will help prevent false activations and conserve battery life. For prolonged storage, we recommend removing the batteries to prevent battery drain and or battery leakage which can cause damage Crawl N Colors Chameleon's electronics.

Care of the Unit

- Crawl N Colors Chameleon can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant.
- We recommend Simple Green, which is a nontoxic biodegradable all-purpose cleaner.

- Do not use abrasive cleaners, as they will scratch the surface of the unit.
- Do not submerge the unit, as it will damage the electrical components.

For Technical Support:

- Call our Technical Service Department
- Monday through Friday, 9 a.m. to 5 p.m. (EST) 1-800-TEC-TOYS or 1- [800-832-8697](tel:8008328697)
- customer_support@enablingdevices.com

50 broadway

- Hawthorne, NY 10532
- Tel. 914.747.3070 / Fax 914.747.3480
- Toll Free 800.832.8697
- www.enablingdevices.com

FAQ

 
Q: What should I do if Crawl N Colors Chameleon fails to operate correctly?

A: Disconnect the power source by removing one of the batteries for 20 seconds to reset the unit. Re-install the batteries and try again.

Q: How can I prolong the battery life of Crawl N Colors Chameleon?

A: Remove external switches when not in use to prevent false activations. For extended storage, it's recommended to remove the batteries to prevent drainage or leakage that could damage the electronics.

Documents / Resources

	<p>Enabling Devices 1217 Crawl 'N Colors Chameleon [pdf] User Guide 1217, 1217 Crawl N Colors Chameleon, 1217, Crawl N Colors Chameleon, N Colors Chameleon, Chameleon</p>
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.