

enabling
devices
2219
Music
Master



enabling devices 2219 Music Master User Guide

[Home](#) » [enabling devices](#) » enabling devices 2219 Music Master User Guide 

Contents

- [1 enabling devices 2219 Music Master](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Operation](#)
- [5 Troubleshooting](#)
- [6 Care of Unit](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



enabling devices 2219 Music Master



Product Information

Specifications:

- **Model:** Music Master #2219
- **Batteries:** 7 AA Alkaline Batteries (not included)
- **Recommended Battery Brand:** Duracell or comparable name brand
- **Power Source:** Battery-operated
- **Usage:** Requires a capability switch to operate

Product Usage Instructions

Battery Installation:

Locate the two battery plates on the bottom of the device. Remove screws and plates, and install new alkaline batteries, carefully noting the polarity direction of each battery. Re-install the battery plates and screws.

Power On/Off:

To turn the device on, push the rocker switch located on the back of the unit to the ON position. The red LED light should illuminate the front, top, and left corner of the device near the Switch Jack Input. Remember to turn the switch off when not in use to conserve battery.

Capability Switch Connection:

The Music Master requires a capability switch to operate. Plug one of our switches firmly into the Jack labeled Switch. Ensure it is plugged in all the way without any gaps to function properly.

Audio Output Options:

The Music Master can be operated using the two installed stereo speakers or with headphones. Adjust the Delay and Reverb knobs for different tones.

Headphone Operation:

Turn on the Amp with the rear Rocker Switch, plug in your Capability Switch, and push the ON/OFF Headphone toggle switch to the Right ON position. Ensure both the HEAD. and AMP Volume Knobs are turned off.

Care Instructions

If not using Music Master for an extended period, remove the batteries. Clean with mild household multipurpose cleaners and disinfectants like Simple Green. Do not use abrasive cleaners or submerge the unit in water.

Technical Support

For technical support, contact our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST) at 1-[800-832-8697](tel:800-832-8697) or email customer_support@enablingdevices.com

Contact Information

User's Guide available at 50 Broadway Hawthorne, NY 10532 Tel. 914.747.3070 / Fax 914.747.3480 Toll-Free 800.832.8697 www.enablingdevices.com

Frequently Asked Questions (FAQ)

Q: What should I do if Music Master does not function correctly?

A: Follow these steps:

1. Check all switches are set properly.
2. Replace batteries ensuring correct polarity.
3. Disconnect power by removing one battery for 20 seconds to reset, then reinstall batteries.

With the Music Master, everyone can make beautiful music!

Unleash creativity and joy with this one-of-a-kind music creation and appreciation device. The Music Master is a single-switch access device programmed to create unique melodies every time it is played. It looks like an ordinary amplifier, but plug in any of our capability switches (not included) and the user creates beautiful music. Each press of the switch plays a new note within the programmed collection of harmonic possibilities in the software. The Music Master harnesses an innovative technology by a master of sound design to produce a pleasing tune every single time. No previous knowledge of music required! Teach musical concepts such as pitch, rhythm, phrasing, and tension and resolution. The device includes controls for volume, reverb, and delay, just like a real amplifier, and includes a jack for headphones. Size: 8"L x 8"H x 4½"D. Requires 7 AA Batteries. Weight: 2½ lbs.

Operation

1. Music Master uses 7 AA Alkaline Batteries. Please use only a quality brand *Alkaline* type battery, we recommend Duracell, or a comparable name brand. Do not use any batteries marked heavy duty, super duty or any rechargeable type as they supply a lower voltage and will not work in the Music Master.
2. Please locate the two battery plates on the bottom of the device. Remove screws and plates, and install new alkaline batteries, carefully noting the polarity direction of each battery. Re-install the battery plates and screws, and you are ready to Rock!
3. To turn the Device on, push the rocker switch located on the back of the unit, to the "ON" position, and you should see the red LED light up on the front, top, left corner of the device near the Switch Jack Input. When finished playing with/using the Music Master, always turn the switch back to "OFF" to conserve the batteries.
4. The Music Master requires a capability switch to operate. Plug one of our switches firmly into the Jack labeled "Switch". Make sure your switch is plugged into the jack all the way, with no gaps or the switch will not function properly, or at all. You are now ready to operate your Music Master! The Music Master can be operated using the two installed stereo speakers, or with headphones instead, if desired.

5. For Device Operation: After turning on the Music Master, and plugging in your Switch, make sure the Headphone “ON/OFF” toggle is pushed to the left and selecting “OFF”. This turn’s off the headphone jack, and runs the sound through the two speakers installed at the front of the device. Next, turn the AMP Volume knob, located all the way on the right, clockwise, and you should hear and feel a little “click” as the Amp portion turns on. Keep turning the knob clockwise until you achieve a volume you are happy with.
6. Start pushing your Capability Switch to make great musical sounds. By adjusting the “Delay” and “Reverb” knobs up or down, you can make some really incredible tones...even mimicking the sound created in a concert hall!
7. For Headphone Operation: Again, turn on the Amp with the rear Rocker Switch, and plug in your Capability Switch. This time push the “ON”/“OFF” Headphone toggle switch to the Right “ON” position. Make sure both the “HEAD.” and “AMP” Volume Knobs are turned all the way off (as far counter-clockwise as possible....you should also feel a click when they shut off).
8. Plug in your Headphones to the Headphone Jack on the front panel, just to the left of the Headphone ON/OFF toggle. Again, be sure the Capability Switch of your choice, is plugged fully into the Jack labeled “Switch”. Turn on the Headphone Volume knob by turning clockwise, and be sure to turn in small increments, until desired volume is reached. As with any headphone use, it’s always better to use a comfortable volume level, below the maximum possible volume level. Be sure to use adult supervision for adjusting Headphone volume, if headphones are used.

Troubleshooting

Problem: Music Master does not function correctly.

- **Action #1:** Make sure you have all switches set properly.
- **Action #2:** Replace the batteries paying close attention to proper battery polarity.
- **Action #3:** Disconnect the power by removing one of the batteries for 20 seconds to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

Care of Unit

If you will not be using Music Master for an extended amount of time, we recommend removing the batteries. The Music Master can be wiped clean with any mild household multipurpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit in water, as it will damage the electrical components Musical Snail is surface washable only.


For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
[1-800-832-8697](tel:1-800-832-8697)
customer_support@enablingdevices.com

50 Broadway

Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Documents / Resources

	enabling devices 2219 Music Master [pdf] User Guide 2219, 2219 Music Master, 2219, Music Master, Master
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.