

enabling devices 2251 Sensational Textured Activity Center User Guide

[Home](#) » [enabling devices](#) » enabling devices 2251 Sensational Textured Activity Center User Guide 



Contents

- [1 enabling devices 2251 Sensational Textured Activity Center](#)
- [2 introduction](#)
- [3 over view](#)
- [4 Troubleshooting](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

enabling devices 2251 Sensational Textured Activity Center



introduction

Great for parallel play!

Just spin this wonderful busy box and go on an adventure of textures, sights and sounds. Six different activation plates which operate independently encourage parallel play for two or more children. Mirrors, fans, music, lights, sound effects, and spinning beads are just some of the wonderful sensory sensations this activity center provides. High contrast colors are great for a user with visual impairments. Comes with on/off volume control. Size: 17½" Diameter x 8½"H. Requires 6 C Batteries. Weight: 6½ lbs.

over view

1. The Sensational Textured Carousel Busy Box requires 6 C batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the underside of the unit. To install the batteries, turn the activity Center over and remove the small Phillips head screws from the black battery cases. Next slide the covers off.
3. Install the batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Mounted on a Lazy Susan base allows users the ability to spin the activity center for easy access to all of the sensory plates. Turn the On/Off switches on each battery compartment to ON.
4. Touch the Orange plate to see spinning colored glitter, and hear wonderful music in the background.
5. Push the black plate to feel air on the palm of your hand as blue LED lights light up while hearing howling wind in the background.
6. Activate the textured green plate to experience spinning colored beads.
7. Press the blue textured plate to watch and feel spinning red cloths on your fingers while observing multi-colored lights flash.
8. Hit the red plate to see spinning Pom Pom colored balls, while hearing delightful music in the background

9. Look at yourself in the round mirror and push the bumpy brown plate at which time the mirror turns into a picture of mountains while you hear the music play.
10. Each of the sensory stimuli will only remain activated as long as pressure is maintained on the corresponding colored plate. Once you release the plate, the stimuli will stop.


Troubleshooting

- Problem: The units sounds melodies, fan, vibration or lights fails to operate, or operates incorrectly.
- Action #1: Make sure the battery compartment On/Off switches are turned ON.
- Action # 2: Check all batteries making sure they are installed with proper (+) & (-) battery polarity.
- Problem: One plate seems to be stuck / jammed.
- Action: visually inspect the switch plate area, making sure there is nothing obstructing or blocking the plate from moving freely.

Care of Unit

- The Sensational Textured Activity Center can be wiped clean with any household multi-purpose cleaner or disinfectant. Use caution not to get cleaning fluid or any liquid under the plate areas.
- Do not submerge the unit, as it will damage the electrical components.
- Do not use abrasive cleaners, as they will scratch the surface of the unit.

Documents / Resources

	enabling devices 2251 Sensational Textured Activity Center [pdf] User Guide 2251, Sensational Textured Activity Center, 2251 Sensational Textured Activity Center
---	--

References

- [enabling devices | Products For People With Special Needs | Enabling Devices](#)