

enabling
devices
688
Kangaroo
Jack in
the Box



enabling devices 688 Kangaroo Jack in the Box User Guide

[Home](#) » [enabling devices](#) » enabling devices 688 Kangaroo Jack in the Box User Guide 

Contents

- [1 enabling devices 688 Kangaroo Jack in the Box](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 Operation](#)
- [6 Troubleshooting](#)
- [7 CONTACT INFORMATION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



enabling devices 688 Kangaroo Jack in the Box



Specifications

- **Model:** Kangaroo Jack-in-the Box #688
- **Power Source:** Four AA batteries (alkaline batteries only)
- **External Capability Switch Compatibility:** 1/8-inch jack (1/4- to 1/8-inch adapter available)
- **Cleaning Recommendation:** Mild household multipurpose, non-abrasive cleaner

Product Usage Instructions

- **Battery Installation:**
 - Use only alkaline batteries (e.g. Duracell or Energizer brand).
 - Remove the screw from the battery compartment cover using a Phillips head screwdriver.
 - Install four AA-size batteries observing proper polarity.
 - Replace the cover and screw securely.
- **Connect External Capability Switch:**
 - Connect the Kangaroo to an external capability switch via the 1/8-inch jack next to the battery compartment. Use a mono adapter if needed.
- **Start and Stop Music:**
 - Actuate the external capability switch to start playing the song “Pop Goes the Weasel.” The music will stop when the switch is released or when the song ends, causing Kangaroo to pop out.
- **Reset for Another Play:**
 - To play again, push the Kangaroo back into the box and lock the lid closed.

FAQs

- **Q: Can I use rechargeable batteries with Kangaroo?**
 - **A:** No, only use alkaline batteries (e.g. Duracell or Energizer brand) for optimal performance.

Pop Goes the Kangaroo!

- Use sustained pressure on your external capability switch (not included) and “Pop Goes the Weasel” plays.
- At the end of the song, out jumps an adorable plush kangaroo.
- It’s sure to delight with every pop and it’s a wonderful way to teach cause and effect.
 - **Size:** 8”L × 5½” W × 5½”D. Requires 4 AA Batteries.
 - **Weight:** 1½ lbs.

Operation

1. Kangaroo requires four AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries or different brands or types.
2. Gently turn the unit to face the battery compartment. Carefully remove the screw from the battery compartment cover using a Phillips head screwdriver, and lift the cover off. Observing proper (+) & (-) battery polarity, install four AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Connect the Kangaroo to any external capability switch via the jack, located next to the battery compartment. Kangaroo is equipped with a 1/8-inch jack, for use with capability switches with a 1/8-inch plug. If you need to

use a 1/4- to 1/8-inch adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not a stereo.

4. Now actuate your external capability switch and continue to actuate it to start the song "Pop Goes the Weasel". When it reaches the end of the song Kangaroo will pop out.
5. The music will only continue playing while the external capability switch is activated. Once you release the switch, the music will stop. The music has to reach the end of the song before Kangaroo pops out.
6. To play again, push the Kangaroo back into the box and push the lid of the box down until it locks closed.

Troubleshooting

- **Problem:** Kangaroo does not pop out or there is no music.
- **Action #1:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.
- **Action #2:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).
- **Action#3:** Make sure that you have you're the external switch plugged in. There should be no gaps.
- **Action#4:** Try your external capability switch with another toy/device to rule out the switch as the source of the problem.


Care of the Unit:

- Kangaroo can be wiped clean with any mild household multipurpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a nontoxic biodegradable all-purpose cleaner.
- Do not use abrasive cleaners, as they will scratch the surface of the unit.
- Do not submerge the unit, as it will damage the electrical components.

CONTACT INFORMATION

- **For Technical Support:** Call our Technical Service Department
- Monday through Friday, 9 a.m. to 5 p.m. (EST)
- 1-[800-832-8697](tel:800-832-8697)
- customer_support@enablingdevices.com.
- 50 Broadway
- Hawthorne, NY 10532
- **Tel.** 914.747.3070 / **Fax** 914.747.3480
- **Toll Free** 800.832.8697
- www.enablingdevices.com.

Documents / Resources

	<p>enabling devices 688 Kangaroo Jack in the Box [pdf] User Guide 688, 688 Kangaroo Jack in the Box, 688, Kangaroo Jack in the Box, Jack in the Box, in the Box, the Box, Box</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.