



## enabling devices 9416 Wiggle Giggle Song Mickey User Guide

[Home](#) » [enabling devices](#) » enabling devices 9416 Wiggle Giggle Song Mickey User Guide 



**Wiggle Giggle Song Mickey #9416 &  
Sparkle & Sing Minnie #9415**

### **USER'S GUIDE**

**50 Broadway**

**Hawthorne, NY 10532**

**Tel. 914.747.3070 / Fax 914.747.3480**

**Toll Free 800.832.8697**

[www.enablingdevices.com](http://www.enablingdevices.com)

### **Contents**

[1 Wiggle Giggle Song  
Mickey](#)

[2 Operation:](#)

[3 Troubleshooting:](#)

[4 Documents / Resources](#)

[4.1 References](#)

[5 Related Posts](#)

## **Wiggle Giggle Song Mickey**

### **Let's all sing with Mickey & Minnie!**

Fans of Disney Junior's Mickey Mouse Funhouse will adore these Mickey Mouse plush toys. Press his hand or use your external capability switch (not included) and Mickey's shirt lights up and he sings a song! Choose from Wiggle Giggle Song Mickey or Sparkle & Sing Minnie. Comes with a stand for easy play. Size: 5"L x 6"W x 11"H. Requires 2 AA Batteries.

Weight: ¾ lb.

### **Operation:**

1. Mickey & Minnie require 2 AA batteries, (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located inside the Velcro enclosed compartment on their back. Open the flap then, using a Phillips head screwdriver open and remove the batter cover. Next install 2 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. The ON/OFF has been glued in place do to switch adaption. We have included a stand to use with Mickey/Minnie so that you can sit him up when using a switch. There is Velcro on the back of Mickey/Minnie to hold them in place on the stand. There is also a cutout at the base of the stand to put his tail and switch cable through.
4. Connect Mickey/Minnie to any external capability switch (not included) via the jack located at the end of their cord, Mickey/ Minnie are equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Press their hand or use your external capability switch (not included) and Mickey's shirt lights up and he signs a song. Press Minnie's hand or capability switch and her bow lights up and she sings "Minnie's Bow-Toons Are Waiting For You. Each press of their hand or switch activation will start or stop the song at that moment. A second activation will start the song from where it was stopped.
6. When finished using disconnect your switch to prevent false activations and to prevent battery drain.

## Troubleshooting:

Problem: Mickey/Minnie does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

### Care of Unit:


If you will not be using Mickey/Minnie for an extended amount of time, we recommend removing the batteries. Do not submerge the unit in water, as it will damage the electrical components. Mickey/Minnie are surface washable only.



For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

## Documents / Resources

	<a href="#">enabling devices 9416 Wiggle Giggle Song Mickey</a> [pdf] User Guide 9416, 9415, 2024, 9416 Wiggle Giggle Song Mickey, 9416, Wiggle Giggle Song Mickey, Giggle Song Mickey, Song Mickey
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.