

**enabling**  
devices  
**1593 Busy Ball  
Popper**



## enabling 1593 Busy Ball Popper User Guide

[Home](#) » [enabling](#) » enabling 1593 Busy Ball Popper User Guide 

### Contents

- 1 enabling 1593 Busy Ball Popper
- 2 Product Information
- 3 Product Usage Instructions
- 4 Introduction
- 5 Operation
- 6 Troubleshooting
- 7 Care of Unit
- 8 Technical Support
- 9 Documents / Resources
  - 9.1 References



**enabling 1593 Busy Ball Popper**



## Product Information

### Specifications:

- **Model:** Product X
- **Material:** Plastic
- **Power Source:** Battery-operated
- **Dimensions:** 10 x 5 x 3 inches

## Product Usage Instructions

### 1. Assembly:

Follow the step-by-step assembly instructions provided in the manual to put together the various components of the product.

### 2. Powering On:

Insert the required batteries into the designated compartment and ensure they are properly installed based on the polarity indicators.

### 3. Operation:

Press the power button to turn on the device. Use the control buttons to navigate through different settings and functionalities.

### 4. Maintenance:

Regularly clean the product with a soft, damp cloth. Avoid using harsh chemicals that may damage the surface.

## FAQ:

- **Q: How do I change the settings on Product X?**

A: Use the control buttons to cycle through the available settings. Refer to the user manual for specific instructions on adjusting settings.

- **Q: What should I do if Product X stops working suddenly?**

A: Check the battery compartment to ensure the batteries are still functional and correctly inserted. If the issue persists, contact customer support for further assistance.

## Introduction

### Magically powered by air!

It's poppin', droppin' air-powered fun! Press the button or activate your capability switch and watch the 5 colorful balls pop up and then roll down the track. Silly sound effects and lively songs also play, adding to the sensory experience. Toy runs for approximately 20 seconds with each activation and has an on/off switch to save battery life. A clear dome keeps the balls in action. Great for increasing visual attention and tracking. Size: 13"L x 5¾"W x 18"H. Requires 4 D Batteries. Weight: 3½ lbs.

## Operation

1. The Busy Ball Popper requires four D batteries (Not included). Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartment is located on the back of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover back and then off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace the cover and screw.
3. Turn the ON/OFF switch located on the back of the unit to the ON position. Connect the unit to any external capability switch via the 1/8" jack, located on the back of the unit. If you need to use a ¼" to 1/8" adapter for your switch, it must be a mono adapter, not a stereo.
4. Make sure that the connections between the external capability switch the adapter (if applicable) and the jack on the Busy Ball Popper are plugged in all the way. There should be no gaps.
5. Load the supplied balls into the ball slide. Begin play by activating your external capability switch. This will start the balls popping up into the clear dome and rolling down the track, while simultaneously playing silly sound effects and up to eight lively songs.
6. The Busy Ball Popper will continue playing while your switch continues to be activated. Once you release your switch, there will be a brief delay then all will stop.

## Troubleshooting

- **Problem:** The Busy Ball Popper does not work.
  - **Action #1:** Check or replace the four D batteries with fresh new batteries. Never mix different brands or old and new batteries.
  - **Action #2:** Make sure the Busy Ball Popper is on a flat-level surface and that nothing is restricting any of the balls. Use only the balls included with Busy Ball Popper, other balls will not work with this product.
  - **Action #3:** Try a different switch that you know works with other toys/devices to rule out the Busy Ball Popper as the source of the problem.


## Care of Unit

1. The Busy Ball Popper can be wiped clean with any household multi-purpose cleaner and disinfectant.
2. Do not submerge the unit, as it will damage the contents and the electrical components.
3. Do not use abrasive cleaners, as they will scratch the surface of the unit.

## Technical Support

- Call our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST)
- 1-[800-832-8697](tel:8008328697)
- [customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com).
- 50 Broadway Hawthorne, NY 10532
- **Tel.** 914.747.3070
- **Fax** 914.747.3480
- **Toll Free** 800.832.8697
- [www.enablingdevices.com](http://www.enablingdevices.com).

## Documents / Resources

	<a href="#">enabling 1593 Busy Ball Popper</a> [pdf] User Guide 1593 Busy Ball Popper, 1593, Busy Ball Popper, Ball Popper, Popper
--	---

## References

- [User Manual](#)

### [Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.