




enabling 9237 Tabby Kitten User Guide

[Home](#) » [enabling](#) » enabling 9237 Tabby Kitten User Guide 

Contents

- [1 enabling 9237 Tabby Kitten](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Operation](#)
- [5 Troubleshooting](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



enabling 9237 Tabby Kitten



USER'S GUIDE

For Technical Support: Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697 customer_support@enablingdevices.com

50 Broadway Hawthorne, NY 10532 Tel. 914.747.3070 / Fax
914.747.3480 Toll Free 800.832.8697 www.enablingdevices.com

Product Information

The Tabby Kitten #9237 is a toy that requires 2 AA batteries (not included) for operation. It is designed to be operated with an external capability switch (not included) for enhanced functionality. The toy should be used under adult supervision due to the presence of small parts that may pose a choking hazard.

Product Usage Instructions

Note: Before using Tabby Kitten, make sure to insert 2 AA batteries with the correct polarity.

- 1. Connect an external capability switch (not included) to the jack on the Tabby Kitten.
- 2. Turn on the Tabby Kitten using the switch or button provided.
- 3. Press or activate the external capability switch to initiate movements and interactive features of the Tabby Kitten.
- 4. Ensure that Tabby Kitten's movement is not inhibited, as this may cause irreversible damage to the toy.
- 5. Do not lift Tabby Kitten up by her tail, head, or legs, and avoid dropping the toy to prevent damage.
- 6. If Tabby Kitten will not be used for an extended period, it is recommended to remove the batteries to prevent battery leakage.
- 7. Avoid submerging the unit in water, as it may damage the electrical components.

This little tabby cat meows while it nods its head and wags its tail, then goes for a walk while you sustain pressure on its external capability switch (not included). Keep pressing the switch and it even runs! Plush "fur" is extra soft to the touch. Size: 6"L x 3"W x 6"H. Requires 2 AA Batteries. Weight: ¾ lb.

Operation

1. Tabby Kitten requires 2 AA batteries (Not included) to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well.
2. Turn Tabby Kitten upside down to reveal the battery compartment. Install 2 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it.
4. Connect Tabby Kitten to any external capability switch (not included) via the jack located at the end of the kitten's cord. Tabby Kitten is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure plug your switch in all the way. There should be no gaps.
5. Actuate your external capability switch and the Tabby Kitten will spring to life!

6. Tabby Kitten will walk, wag her tail and cry. If you pick her up, she will stop and make a cute “Mew Mew” sound.
7. Tabby Kitten will remain on while the external capability switch continues to be actuated. Once you release the external capability switch, there will be a brief delay, and then Tabby Kitten will turn off.

Troubleshooting

- **Problem:** Tabby Kitten does not function correctly.
- **Action #1:** Replace the batteries paying close attention to proper battery polarity.
- **Action #2:** Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.
- **Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Note:

Small children should be supervised when playing with this toy, as there are some small parts, which could be a choking hazard.


Care of Unit

- Do not inhibit Tabby Kitten’s movement, as this may cause irreversible damage.
- Do not lift Tabby Kitten up by her tail, head or legs, or drop Tabby Kitten.
- If you will not be using Tabby Kitten for an extended amount of time, we recommend removing the batteries. Do not submerge the unit in water, as it will damage the electrical components.

For Technical Support

- Call our Technical Service Department
- Monday through Friday, 9 a.m. to 5 p.m. (EST)
- 1-800-832-8697
- customer_support@enablingdevices.com
- **ADDRESS:** 50 Broadway Hawthorne, NY 10532
- **Tel.** 914.747.3070 /
- **Fax** 914.747.3480
- **Toll Free:** 800.832.8697
- www.enablingdevices.com

Documents / Resources

	enabling 9237 Tabby Kitten [pdf] User Guide 9237 Tabby Kitten, 9237, Tabby Kitten, Kitten
---	--

References

-  [Products For People With Special Needs | Enabling Devices](#)

Manuals+.