



Enapter ENP-DI7 Digital Input User Guide

[Home](#) » [Enapter](#) » Enapter ENP-DI7 Digital Input User Guide 




Enapter

ENP-DI7
Digital Input
Quick Start Guide

Contents

- [1 ENP-DI7 Digital Input](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

ENP-DI7 Digital Input

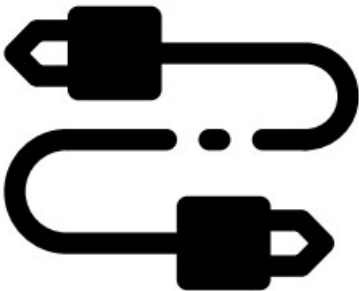	For indoor use only
	For humid environments, additional IP68 protection is r
	Regularly check all parts for damage

1. Connect the Module to the Endpoint Device and External Power Supply




All information about Enapter devices can be found at handbook.enapter.com.

Contact support at support@enapter.com.

Monitor the status of discrete signals such as contactors, relays and others.

The power supply assembly, connection, operation, transportation, storage and disposal guide must be followed at every step.

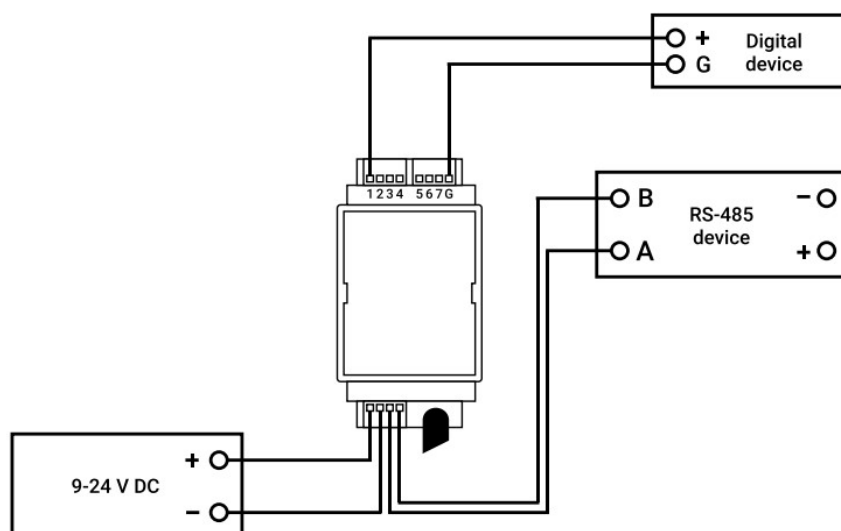

2. Screw Wi-Fi Antenna into the Port


Module sends the collected data to the Enapter Gateway and Cloud via secure wireless connection:

Wi-Fi 2.4 GHz

Bluetooth 4.0 LE



Make sure the antenna is connected to the port

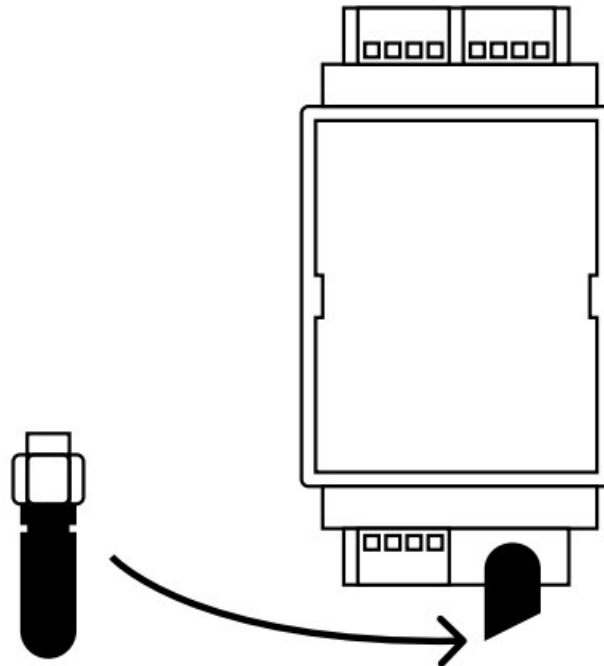

Alternating current voltage of 110-220 V is potentially lethal!



All assembly and installation works should be only performed with a disconnected power supply!

3. Follow the Enapter App Instructions to Connect the Device to Enapter Cloud



<https://play.google.com/store/apps/details?id=com.enapter&hl=ru>

To download the app, scan the QR-code with your Android or Apple mobile phone or visit app.enapter.com


Open the Enapter app and create an account.

Follow the steps to create a site.


Press the Add device button.

Scan QR-code located on the back side of the top cover of the device.

If you can't scan the QR code, enter the device ID and PIN manually. Find them on the side of the module.

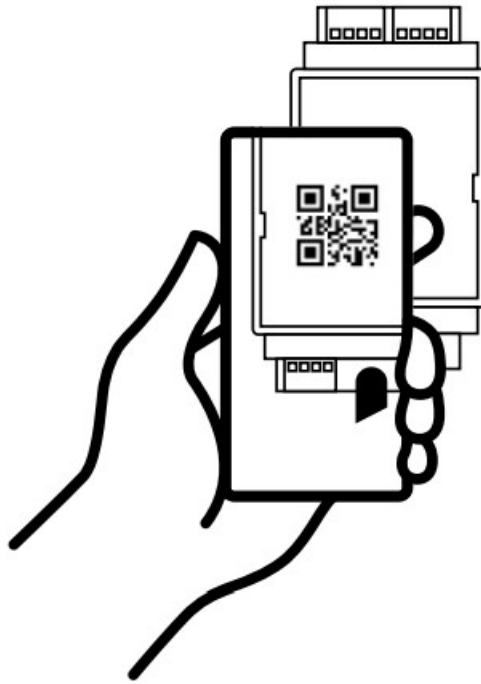


4. Flip Cover After Setup to Protect the QR Code

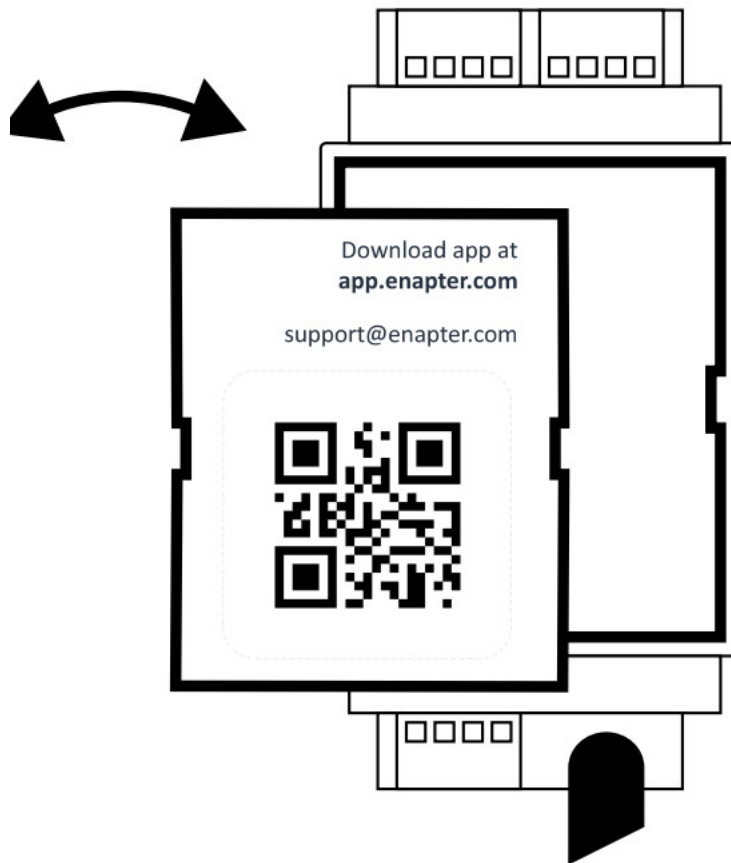

5. **Monitor Device Activity**

During normal operation, the LEDs indicate the status of the module. Monitor device activity in Enapter App or Enapter Cloud.

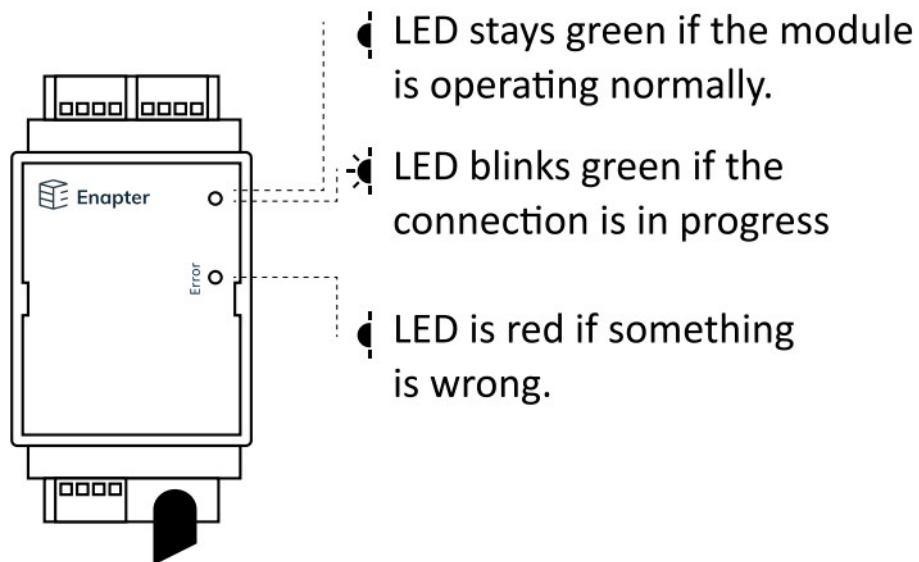

Enapter

Guide version 2.1

Documents / Resources

	Enapter ENP-DI7 Digital Input [pdf] User Guide ENP-DI7 Digital Input, ENP-DI7, Digital Input, Input
--	--

References

- app.enapter.com
- [Enapter Handbook](#)